

RasterLink *ProIII*

Software RIP

RasterLinkProIII

Reference Guide

For JV series

This guide explains about features of Raster Link Pro III for the color Inkjet printer “JV series”.

MIMAKI ENGINEERING CO., LTD.

TKB Gotenyama Building, Kitashinagawa, Shinagawa-ku, Tokyo 141-0001, Japan

Phone: +81-3-5420-8671 Fax: +81-3-5420-8687

URL: <http://www.mimaki.co.jp/>

E-mail: trading@mimaki.co.jp

Version 1.1

D201723-11

The kinds of manuals and how to use them

This product comes with following manuals.

Installation Guide

This manual explains about the following.

- How to set up PC (Windows 2000, Windows XP, Windows Vista) in order to install Raster Link Pro III/Raster Link IP III/Raster Link TA III.
- How to install a printer driver into a client PC and how to set up.

Reference Guide

There are two kinds of reference guides.

One is for common settings to each printer and the other is for special settings to each printer.

They explain necessary setting items of the functions and operation in order to use Raster Link Pro III/Raster Link IP III/Raster Link TA III.

Read the proper reference guide for your printer.

You are now
reading this
manual.

Notice

- It is strictly prohibited to write or copy a part or whole of this document without our approval.
- The contents of this document may be subject to change without notice.
- Due to improvement or change of this software, the description of this document could be partially different in specification, for which your understanding is requested.
- It is strictly prohibited to copy this software to other disk (excluding the case for making backup) or to load on the memory for the purpose other than executing it.
- With the exception of what is provided for in the warranty provisions of MIMAKI ENGINEERING CO., LTD., we do not assume any liability against the damages (including but not limited to the loss of profit, indirect damage, special damage or other monetary damages) arisen out of the use or failure to use of this product. The same shall also apply to the case even if MIMAKI ENGINEERING CO., LTD. had been notified of the possibility of arising damages in advance. As an example, we shall not be liable for any loss of the media (works) made using this product or indirect damages caused by the product made using this media.

Adobe, the Adobe logo, Photoshop, Illustrator and PostScript are trademarks of Adobe System Incorporated. Apple, Macintosh, Power Macintosh, Mac OS and Mac OSX are registered trademarks of Apple, Inc. Microsoft Windows, Windows 2000 and Windows XP, Windows Vista are trademarks of Microsoft Corporation and other countries.

The color collection described in this manual is based on DIC Color Guide data. DIC and DIC Color Guide are registered trademarks of Dainippon Ink and Chemicals, Incorporated.

PC MACLAN is registered trademarks of Miramar Systems, Inc.


All brand names and product names are trademarks or registered trademarks of their respective companies.

About this Instruction

This manual explains how to operate Raster Link Pro III for printing ink jet printer “JV Series”.

Notations

Menu items are enclosed in quotation marks like “Full Color”.

Buttons in dialog box are framed like  .

Symbol



indicates a caution you should pay attention.



Describes a useful procedure.



Shows the number of the page that has related contents.

About Terms

Job: A “Job” means a printing file that is handled by Raster Link ProIII. Once data in any format from application software such as Adobe Illustrator is spooled in Raster Link ProIII, it is registered in Raster Link ProIII and becomes a job.

Scan: “Scan” on the Raster Link ProIII means the head moving direction (Y direction) of printer.

Feed: “Feed” on the Raster Link ProIII means the media moving direction (X direction) of printer.

Table of Contents

The kinds of manuals and how to use them.....	2
Notice	3
About this Instruction.....	4
Notations	4
Symbol	4
About Terms	4
Editing the Job	11
Editing the Image	11
“Image Edit” Window	11
Thumbnail List.....	12
Shuffle multiple jobs	12
Layout Preview.....	13
To Print in Scale (Scale).....	14
To Print at a Specified Ratio.....	14
To Print an Image with a Specific Size	15
To Print at Different Ratio in Scan and Feed directions	15
Rotating Print Data (Rotation)	16
Printing a Mirror Image of the Print Data (Mirror).....	17
To Move an Image to Any Part of Media (Position).....	18
Moving an Image by Designating Numeric Values	18
Moving an Image by the Mouse.....	18
Moving an Image on the Keyboard	19
Copying Print Data (Copy)	20
Setting Interval	21
Space	21
Pitch	21
Trimmed printing (Trimming)	22
Print Cut Line (Print Cut Line)	23
Arrange the images (when there are multiple images)	24
Arrange in the scan direction (nest)	24
Arrange in the feed direction (sequential)	24

Arrange the image (when there is one image).....	25
Arrange in the Center	26
Paneling printing (paneling)	27
Copy print images for cutting later (Sticker Print)	29
Print Information Label Printing	32
 Tiling Edit.....	33
Flow of the Tiled Printing	34
Tiling Setup Window	35
Tiling Preview	36
Layout Setting Window	37
Layout Preview	37
Editing Images before Setting Tiles	38
Setting the Work	39
Setting Work Size	39
Moving the Work.....	40
Dividing the Tiles	41
Dividing the Tiles at Even Interval	41
Designating the Tile Intervals individually	43
Adjusting the Pitch of the Tile	44
Fine adjustment to the location of the dividing line using a keyboard.....	45
Setting the Options of the Tiles.....	48
Setting the Overlap of Tiles	48
Print mark on the overlap (Corner Mark)	50
Printing the Parting Line of the Images (Print Parting Line).....	52
Print the tile number on each tile (Print Tile Number).....	53
Printing Cut Line of the Tile (Print Cut Line)	54
Setting the Printing Order of Tiles.....	55
Printing the tiles sequentially	55
Designating the Tiles to be Printed Freely	56
Laying out the Tiles.....	58
Reversing the even-numbered column.....	58
Arranging the Tiles to the position of your choice	59
Arranging in the Center of the Media.....	60
Moving the Tiles to the position of your choice	62
Ending the Tiling Setting.....	63
Printing the Tiles	64

Twin roll printing (using JV3-250SP).....	66
Layout Preview.....	66
Print multiple jobs at one time	67
Grouping	67
Add grouped jobs to jobs being edited.....	69
Clear grouping.....	71
Ungrouping in the Job List.....	71
Ungrouping on the edit screen.....	72
Editing Multiple Jobs	72
Color Edit	73
Setting Color Matching.....	73
Editing Color Adjustment.....	75
Preparing a Color Adjustment Set.....	76
Deletes Color Adjustment Sets	77
Updating Color Adjustment Sets	77
Adjusting Ink Density.....	78
Adjusting All Ink Densities.....	78
Adjusting the Ink Densities for Illustration Part and Image Part.....	79
To Adjust Color in Detail (Ink Curve)	80
Version 1.0 and 2.0 device profiles	80
Version 3.0 device profile.....	81
Adjusting Ink Curves	82
Set an Ink Curve by Keyboard	85
K-CMY Mixing Ratio.....	88
Color Replacement	89
Color Replacement method	89
Color Replacement of spot color names.....	89
Color Replacement of CMYK.....	90
Color Replacement of gradations	90
Replace any one color of CMYK with multiple inks.....	90
Combination with Auto Special Color Composition	91
Auto Special Color Composition: Special Color Print Area is "Valid Pixel"	91
Auto Special Color Composition: Special Color Print Area is "Whole Image" ..	91
Auto Special Color Composition: Special Color Ink Density is 0%.....	91
Method of creating Color Replacement images	92
Conditions for Images where Color Replacement is Possible	92
Creating spot colors	92
Color Replacement screen.....	95
Spot Color	95

Gradation	97
Mono Color	98
Create a Color Replacement set	99
Update a Color Replacement Set	100
Select a Color Replacement set	101
Delete Color Replacement set	101
Replacing spot colors and CMYK colors	102
Specify the original color for replacement	102
Unselect the original color for replacement	102
Create ink information after replacement	103
Delete ink information after replacement	107
Switch displays	108
Replacement information list	108
Preview	109
Replacing gradations	110
Restrictions on gradations for which Color Replacement is possible	110
Gradation replacement settings	111
Mono Color Replacement	112
Acquire the color from original document (Scan color)	113
Outline of color acquisition	113
Color acquisition	114
 Special Color adjustment	 117
Emphasize highlights with special color	117
Automatically create a special color layer (Auto Special Color Composition - JV3-SP series)	120
Example of "Auto Special Color Composition"	122
Example of "Composite Order"	122
Specify and create a special color block (Manual creation - JV3-SP Series/JV33)	123
Editing Ink Limit	126
Creating a special color adjustment set	126
Deleting a special color adjustment set	127
Updating a special color adjustment set	127
Adjust the ink curve	128

Editing Print Condition.....	129
Device Profile Refined Display	131
[Print Mode] sub menu	132
[Profile Info] sub menu	135
[Device Adjustment] sub menu	136
[Calibration] sub menu	139
 Multipage jobs	 140
Main Window	140
“Job Editor”	140
Edit jobs (Image Edit).....	141
Decide the print pages	141
Position	141
Trimming	142
Alignment.....	142
Copy.....	143
 Color separation Print (JV4 series only).....	 144
Application separation spool method	144
Edit color separation jobs	147
Image Edit.....	147
Color Edit	148
Print Condition.....	149
[Print Mode].....	149
[Separation Setup] (RIP separation only)	150
Artwork Mode “High Quality” setting	151
Plotting mode for each level of plotting quality.....	151
 About Condition Management.....	 152
[Hot Folder] Sub menu	154
[Image Edit] Sub menu.....	154
[Color Edit] Sub menu	155
[Print Condition] Sub menu	156
Displaying the Condition Management Window.....	157
Creating a New Condition Set.....	157
Changing Setting Values of Condition Set	158
Applying Conditions to the Job.....	160
[Hot Folder] Sub menu	162
Preparing a Hot Folder and Printer driver	162
Automatic PC MACLAN setting	164
Deleting a Hot folder and Printer driver.....	165
Canceling PC MACLAN settings.....	166

Printer Status Display Function	167
When the Output Port is IEEE1394 or USB 2.0.....	167
“General” information.....	167
“Media” Information.....	169
“Media” information (With the JV3-SP Twin Roll)	170
“Ink” information (JV3 series/JV22/JV5)	171
“Ink” information (JV4)	172
“Heater” information (JV3 series and JV5 only).....	173
“Version” information.....	173
When the Output Port is without IEEE1394 or USB 2.0	174
“Media” information.....	174
“Ink” information	175
Appendix	176
The color acquisition function and supported scanners.....	176
Supported scanners.....	176
Scanner driver settings	177

Editing the Job


This chapter explains how to edit the Job.

To edit the Job, open the “Job Editor”. For opening method of the “Job Editor”, refer to Common features for every printer, Reference Guide.

Editing the Image

The size of the image, its output position, etc. will be designated.

“Image Edit” Window

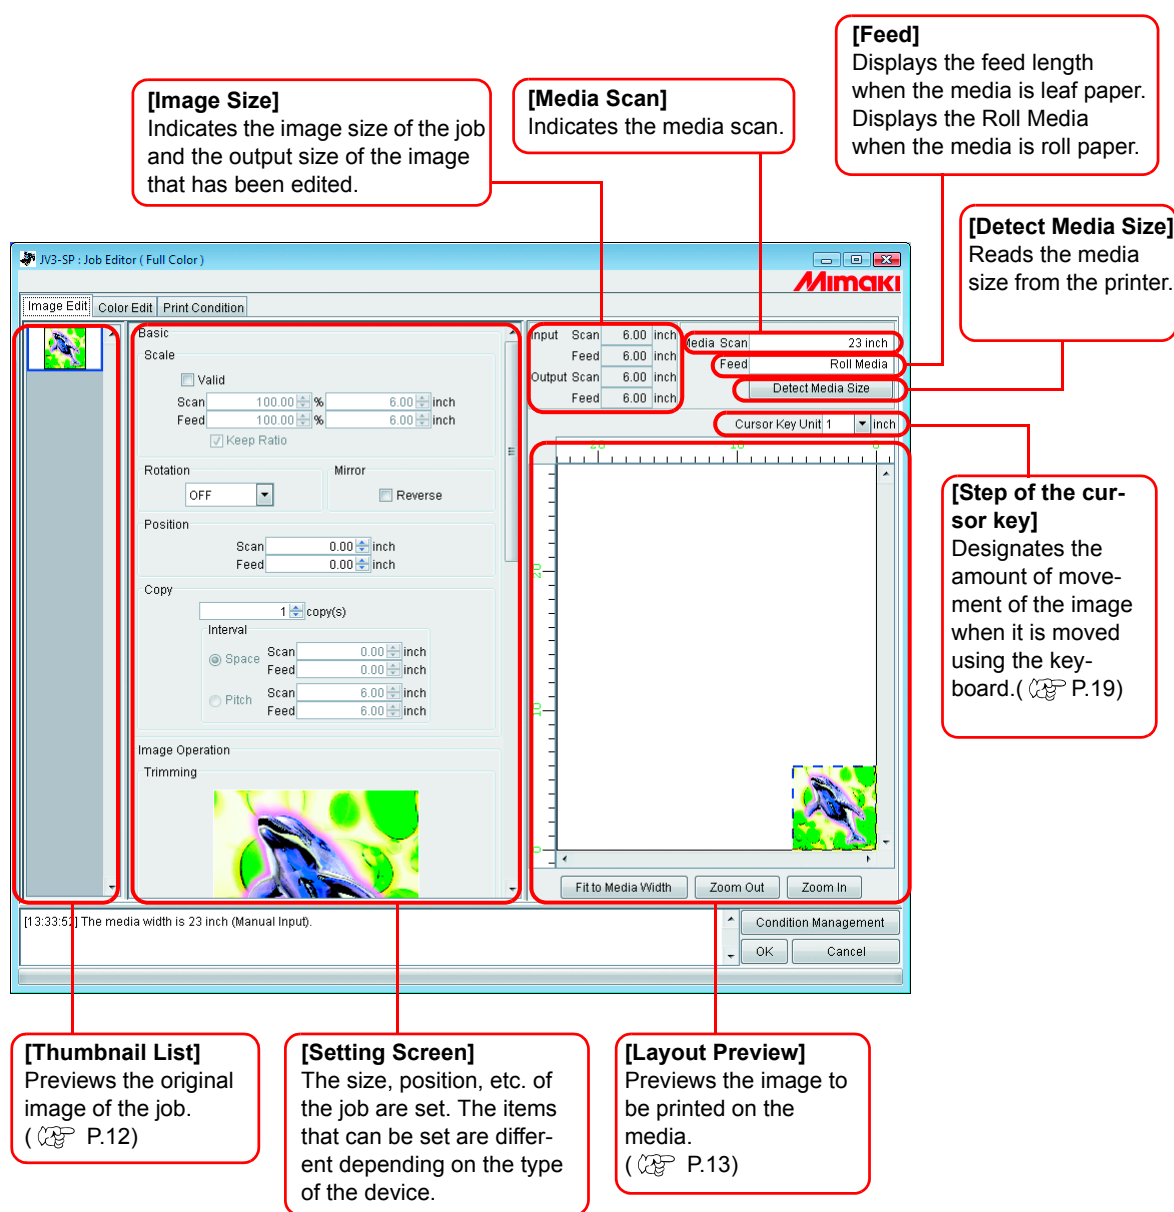

Thumbnail List

This function lists the thumbnail images of the jobs that can be edited.


This function does not update the thumbnail image in the file preview area even if you edit the image.

Selection among jobs are changeable by clicking an image.

Two or more jobs selectable by clicking each of them while pressing the

key.

Clicking outside the thumbnails deselects all jobs.

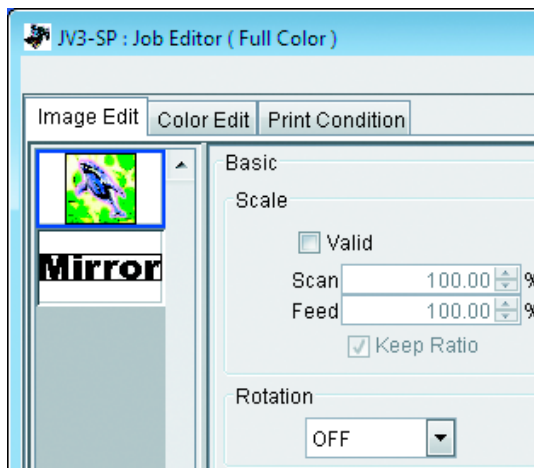

Shuffle multiple jobs

To change the order, select the thumbnail of the job to change, and reposition it with drag and drop.




Layout Preview

Display the result of an image.

Job is selectable by clicking it.

Two or more jobs selectable by clicking each of them while pressing the key.


Clicking where there are no images deselects all jobs.

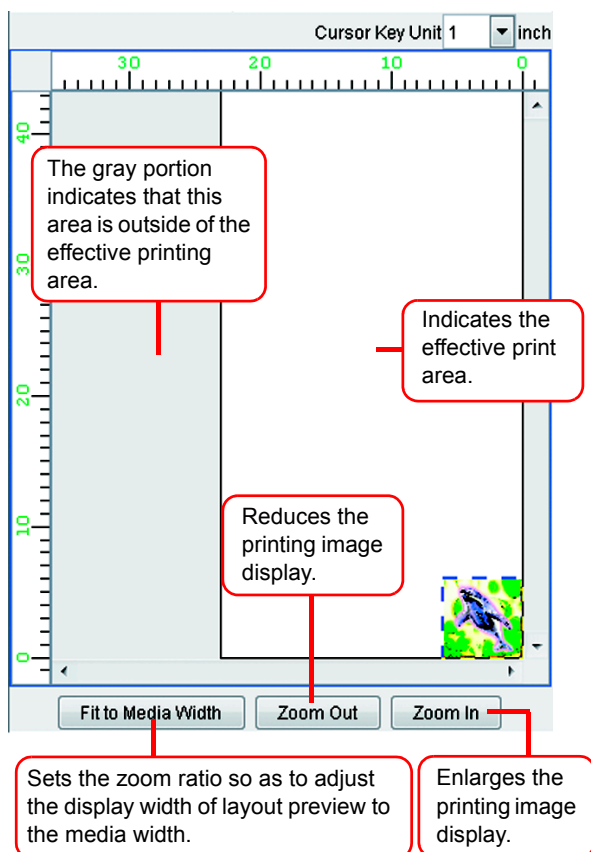

To Print in Scale (Scale)

This function enables you to enlarge or reduce the image.

When you have not checked “Valid”, the image is printed with the size created in application software.

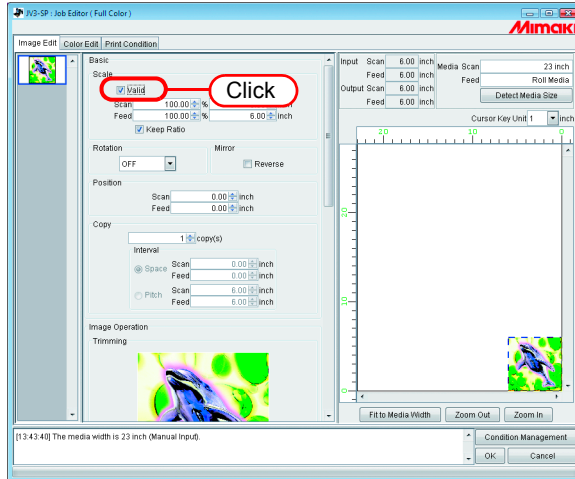


To Print at a Specified Ratio

Enter the ratio both in “Scan” and “Feed” directions.



- If you right-click on the value entry box, you can set the amount of increase or decrease of the up and down arrow buttons. You may also increase or decrease the input value using \uparrow and \downarrow keys on the keyboard.
- By checking “Keep Ratio”, and entering one value or the other, it controls the other value to be automatically rectified with the same ratio.
- When you set it to 100%, the image is printed with the size of the image that you prepared by application software.

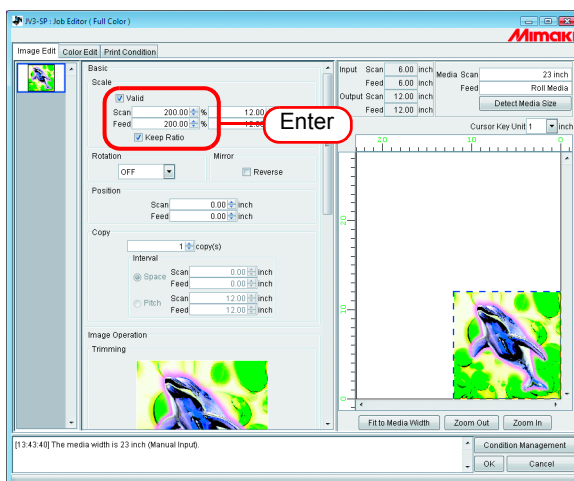


To Print an Image with a Specific Size

Enter the image size.




- By checking “Keep Ratio”, and entering one value or the other, it controls the other value to be automatically rectified with the same ratio.
- The unit of size changeable by optional setting. (☞ Reference Guide Common features for every printer P.90)

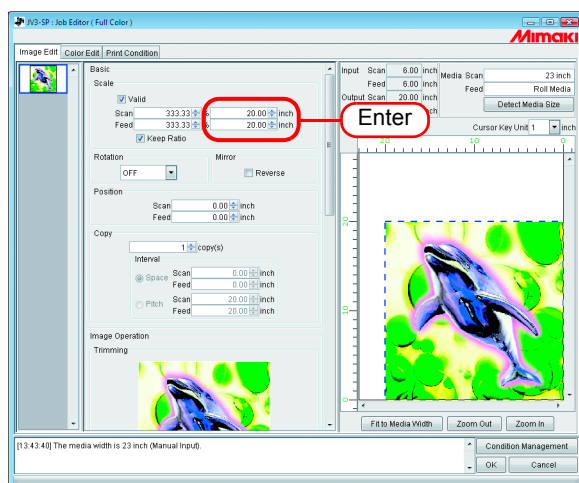

To Print at Different Ratio in Scan and Feed directions

Deselect “Keep Ratio”.


Set scale values in scan and feed directions, respectively by ratio or by value.

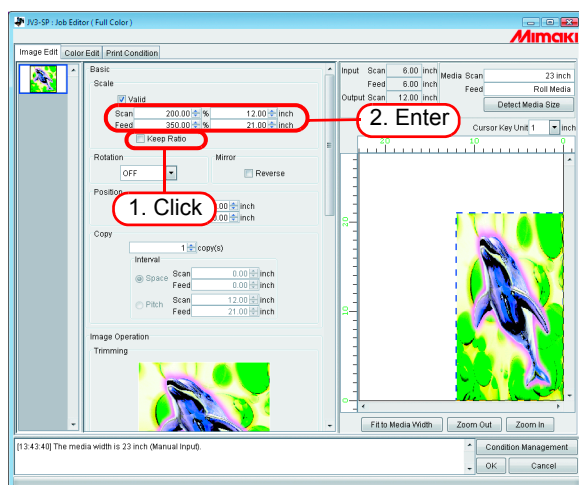

Rotating Print Data (Rotation)

Set the rotation angle.


Select Rotation Angle.

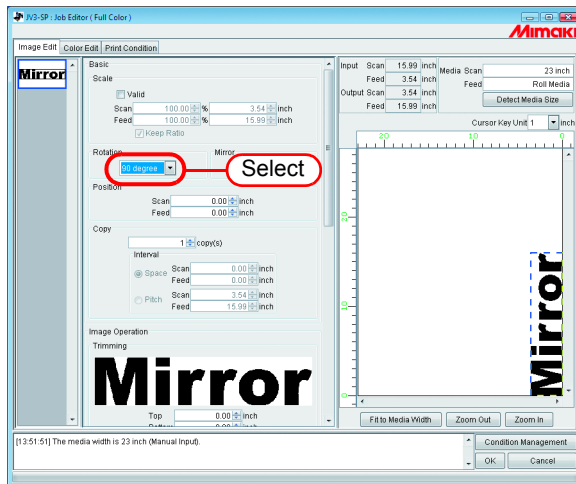

The image is also able to rotate by the following procedure.

Select a job to be subjected to rotation, and right-click in the Layout preview area.

Select Rotation angle from the pop-up menu.

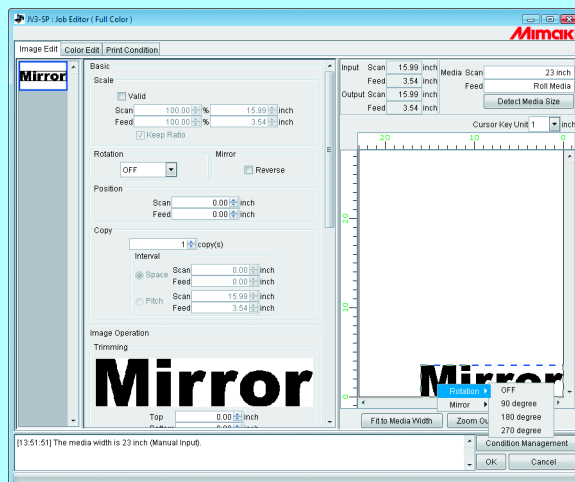


Printing a Mirror Image of the Print Data (Mirror)

Print mirror images.

The created image is mirrored only in scan direction.


Check “Reverse”.

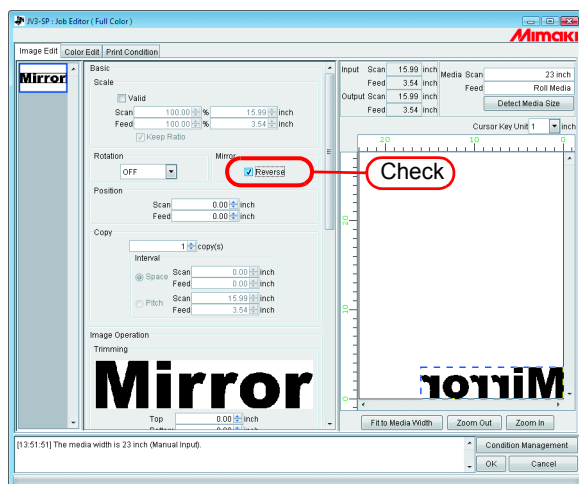

Mirror processing also able to by the following procedure.

Select a job to be subjected to be mirrored, and right-click in the Layout pre-view area.

Select “Reverse” from the pop-up menu.

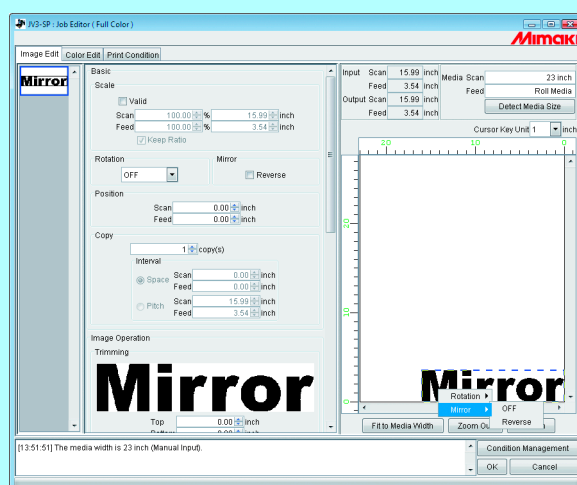

To Move an Image to Any Part of Media (Position)


The image can be moved to any part of media and print it.

NOTE!

- If a part of the image is projected from the effective drawing, it cannot be printed.
- When the image is completely projected from the effective drawing, the setting cannot be saved.

Moving an Image by Designating Numeric Values

Enter the moving amount in “Scan” or “Feed” moves.

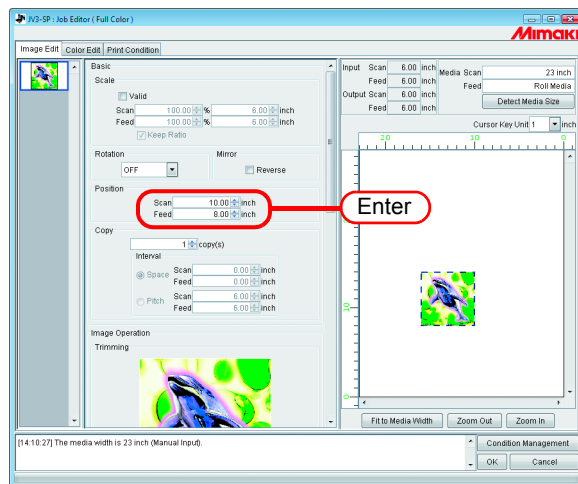


Moving an Image by the Mouse

The image is able to drag in the layout preview area and locate it in any desired position.

Click an image in the layout preview area to select a job.

The selected image is surrounded by a blue dotted line.


Drag the image to the target position

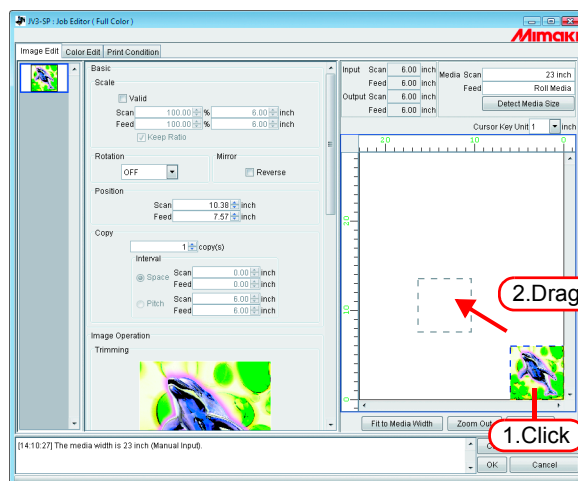

Moving an Image on the Keyboard

The image can move by pressing an arrow key on the keyboard.

- 1 At “Cursor Key Unit”, select the value of a step of the cursor moved by pressing an arrow key on the keyboard.

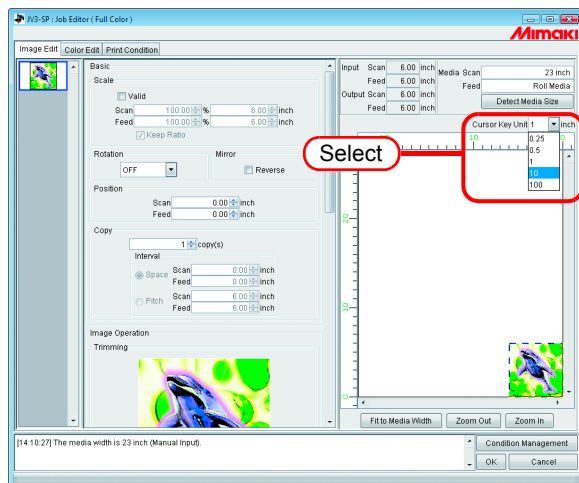


- 2 Click an image in the layout preview to select a job.

The layout preview is surrounded by a blue rectangle.

Layout previews can also be selected by repeatedly pressing the Tab key on the keyboard.

With a layout preview selected, press the arrow keys on the keyboard to move the image.

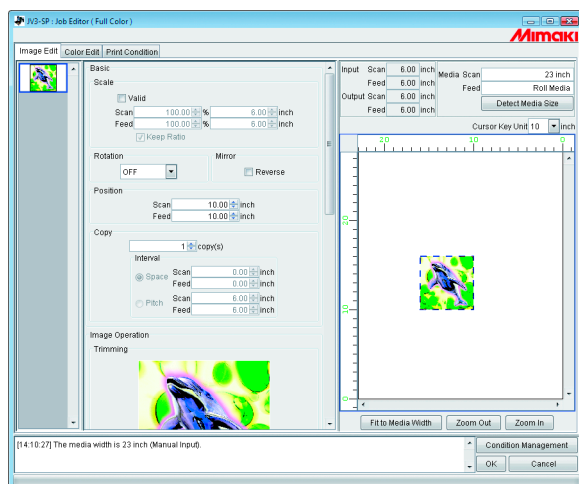

Copying Print Data (Copy)

Print the same image two or more times.

Ordinarily, Print data is copied in feed direction.


When there is a space that permits printing an image in the scan direction, the image is copied (subjected to nesting) in the scan direction.

By setting value at Interval is enabled, margins are set between images.


NOTE!

When multiple jobs are edited at the same time or when “Paneling” is set, the copy setting cannot be performed.

Enter Copy count.

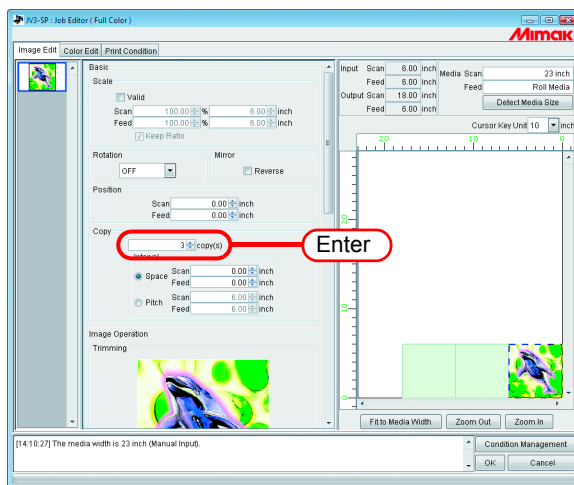

The copied images are automatically nested.

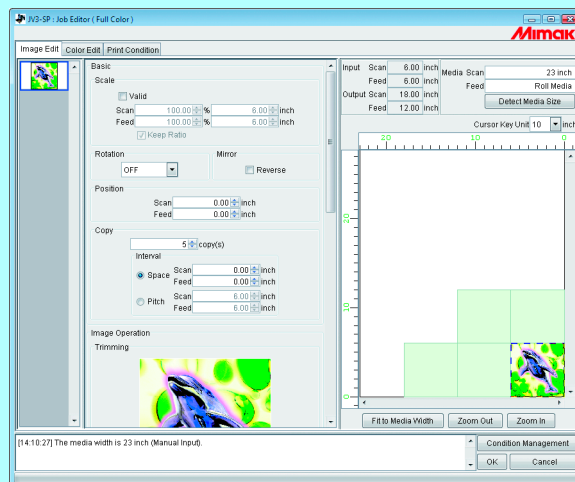

NOTE!

The number of nested sheets is determined by the current position setting and valid print width.



Setting Interval

When copies are set and printed, it is difficult to determinate the boundary between consecutive images.

Therefore, set the intervals so that the dividing line can be checked.

Space

Select “Space” and enter the amount of spaces both in scan and feed direction.

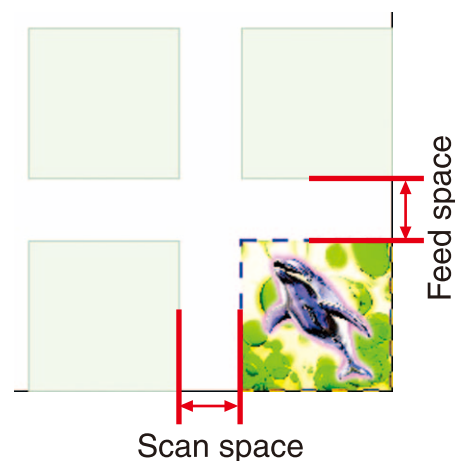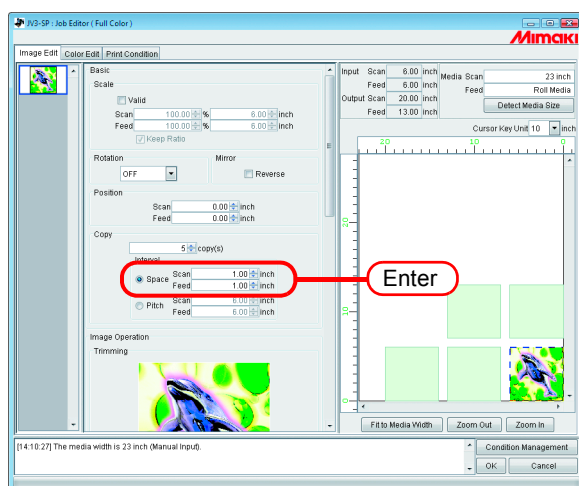



NOTE!

Depends on the image, spaces may be added to outside of the images during RIP process.

In that case, the spaces will be inserted even if setting the margin to “0”.

Pitch


Select “Pitch” and enter the amount of pitches both in scan and feed direction.

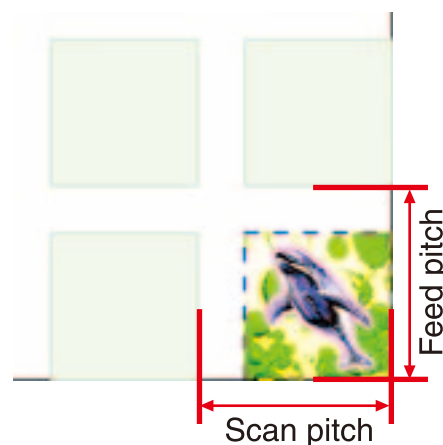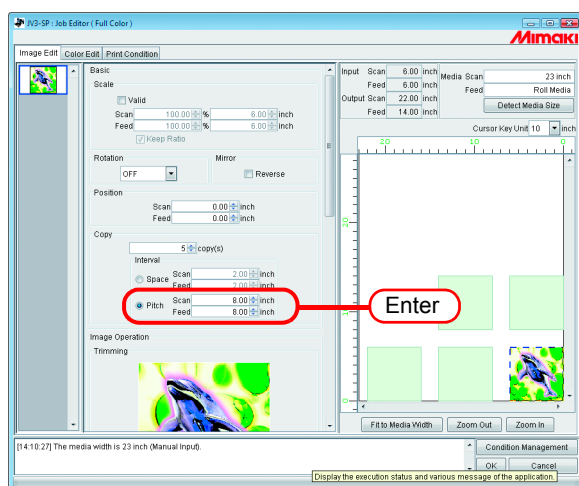

Trimmed printing (Trimming)

Adjusts the scope of printing of the image.

Enter the amount of trimming to “Top”, “Bottom”, “Left”, and “Right” columns.
You may also set the range of the trimming by dragging inside the displayed image.

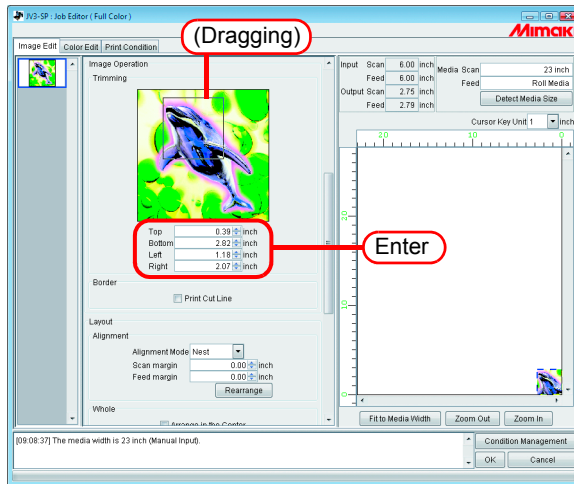

You may disable the trimming by entering “0” to each trimming amount or by clicking the image in the trimming area.

NOTE!

Scale and rotation are applied to images after trimming. Therefore, even if the scale and rotation settings are changed, the trimming position does not change. Furthermore, the trimming value is shown at the original size before scale is applied.


Print Cut Line (Print Cut Line)

Prints the cut lines around the image.

Check “Print Cut Line”.

NOTE!

When “Paneling” is set, the “Print Cut Line” setting cannot be performed. If “Paneling” is set with the “Print Cut Line” check box checked, the check on the “Print Cut Line” check box is cleared.

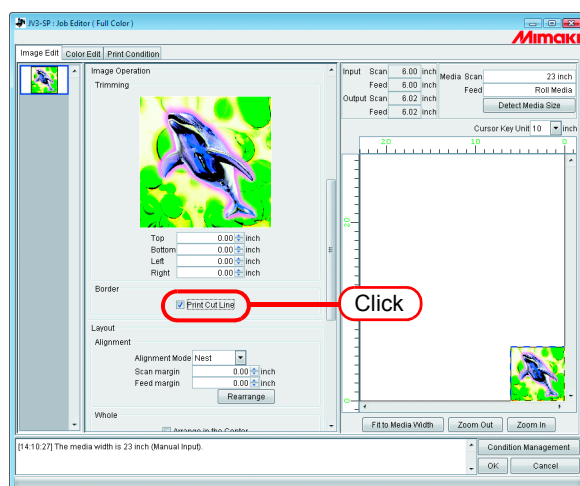

If you check “Print Cut Line”, the output size including cut lines is displayed.

Arrange the images (when there are multiple images)



- Arrangement and margin settings apply to all jobs.
- When “Job Editor” is opened, the previous settings are applied.
- The order in which thumbnail images are arranged can be set. (👉 P.12)


Arrange in the scan direction (nest)

Select “Nest”.

If necessary, enter the amount of margin for scan direction and feed direction.

In the example at left, the scan direction margin is set to 1 inch.

Click **Rearrange**.

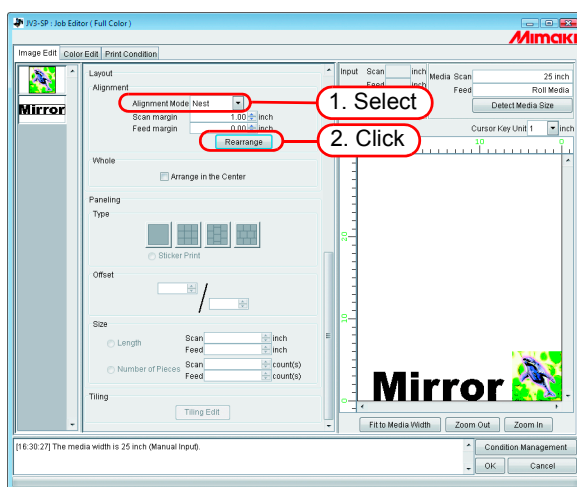


Arrange in the feed direction (sequential)

Select “Sequential”.

If necessary, enter the amount of margin for feed direction.

In the example at left, the feed direction margin is set to 3 inch.

Click **Rearrange**.

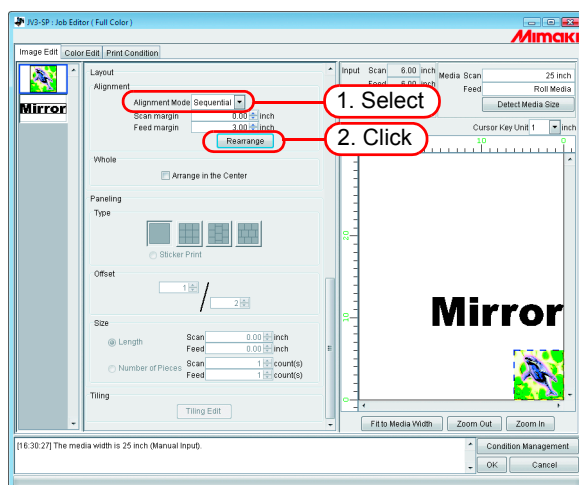

Arrange the image (when there is one image)

Clicking Rearrange positions the image at the origin, irrespective of the arrangement method.

Jobs with the number of copies set cannot be rearranged.


Arrange in the Center

Prints the image arranged in the center of the media widthwise at all times.


Click “Arrange in the Center”.

NOTE!

When Arrange in the Center is selected, movement in the scan direction is not possible.

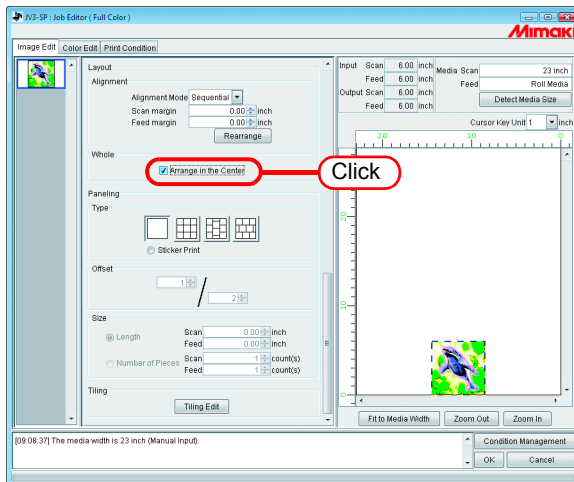

- Images are arranged in the center for multiple jobs, copying and paneling.
- When Arrange in the Center is canceled, the scan direction position returns to the original position.

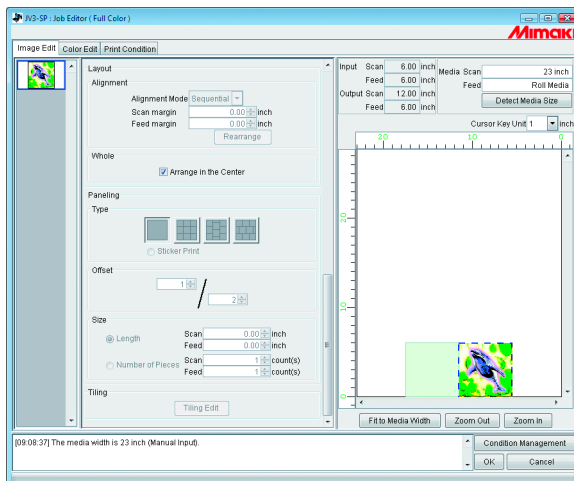


Paneling printing (paneling)

Prints images arranged in four types of pattern.


NOTE !

- “Paneling” cannot be set when editing multiple jobs at the same time, and when multipage jobs, color separation jobs, and “Copy” is set.
- When “Paneling” is set, “Immediate Print” is not possible.

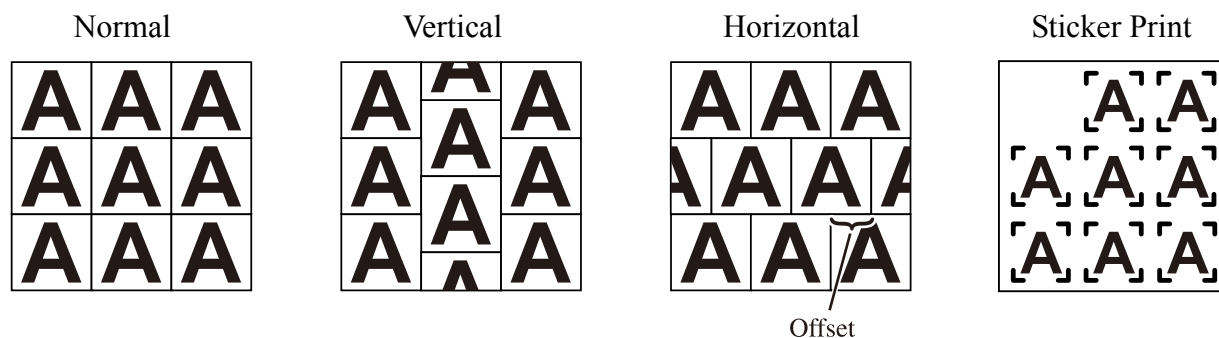


1 Select the type of paneling.

The paneling function is enabled when any type is selected.

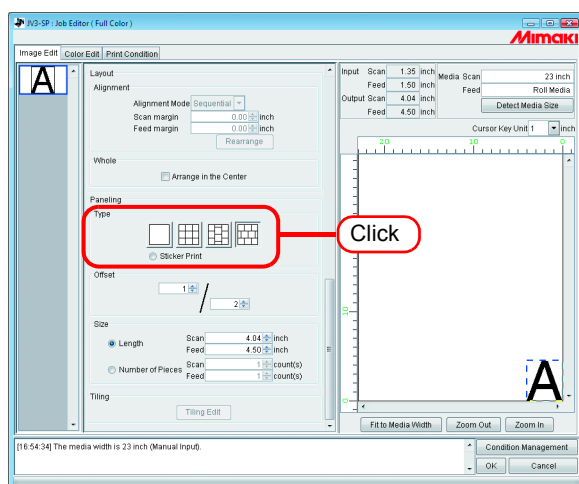

2 Specify the amount of “Offset” for arranging the image.

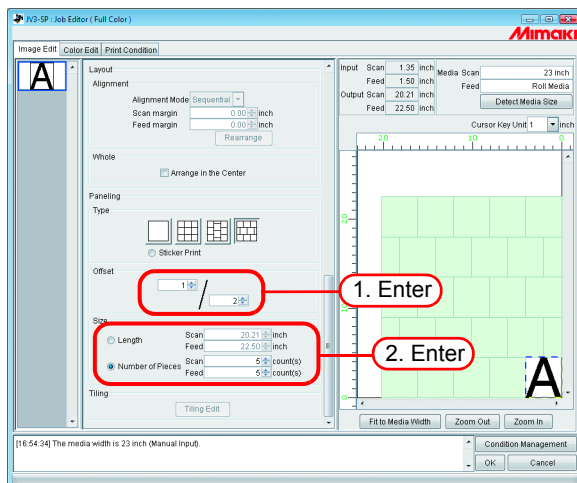

The offset is the amount by which the image is shifted.

NOTE! Offset is enabled when the paneling type is “Vertical” or “Horizontal”.

Specify the repeating length of the image.

- Length
Prints the image repeatedly at the length intervals specified for scan direction and feed direction.
- Number of Pieces
Prints the image repeatedly to the number specified for scan direction and feed direction.


Copy print images for cutting later (Sticker Print)

Copy print images for cutting created with the MIMAKI ENGINEERING cutting software FineCut.

With FineCut, it is possible to add register marks around the edge of images for cutting around the borders. When these images are read by Raster Link ProIII, if a printer driver is used, white space may be added outside the register marks. This happens especially when paper larger than the image is set for printing in the printer driver. In this case, if a Interval is set for the copy, since an extra margin is added to the white space around the images, the margin appears bigger than the margin set when the image is printed.

With this function, the margin added outside the register marks is removed, then the specified margin is added between the images for copying to avoid this problem.

Also when cutting the images with a cutting plotter, it is necessary to specify whether the cutting plotter will read the right or left register mark first. The Reference Line indicate which of the right or left register marks to specify in the cutting plotter.

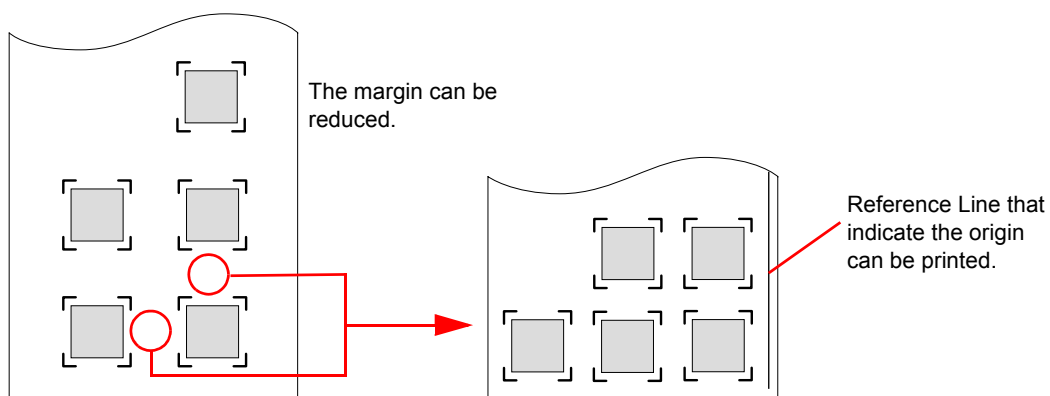


1 Select "Sticker Print".

The Sticker Print settings are shown.


NOTE !

When Sticker Print is selected, movement in the scan direction is not possible.

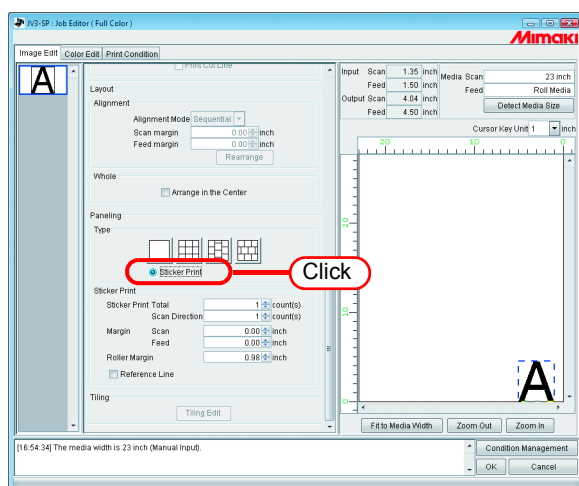

2 Specify the total number of images to copy, and the number of images to print in the scan direction.


- Total
Repeatedly prints the specified number of images.
- Scan Direction
Repeatedly prints the number of images specified in the scan direction.

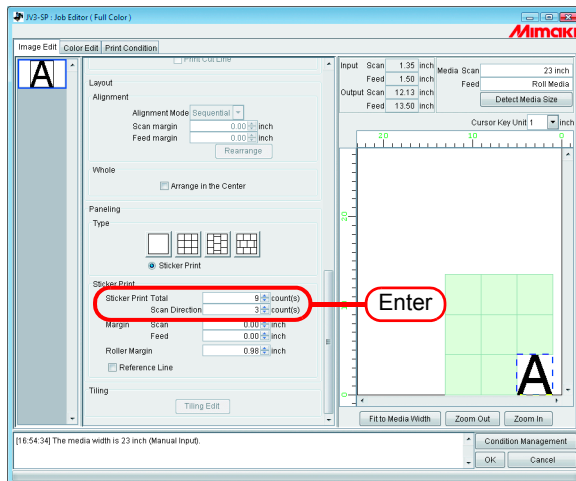

3 Specify the amount of margin for the scan direction and feed direction. Set the right margin value in “Roller Margin” For the margin value, see the cutting plotter’s manual.


NOTE!

Set the space between register marks wider than the length of a register mark. If the gap is too narrow, errors may occur when the cutting plotter reads the register marks.

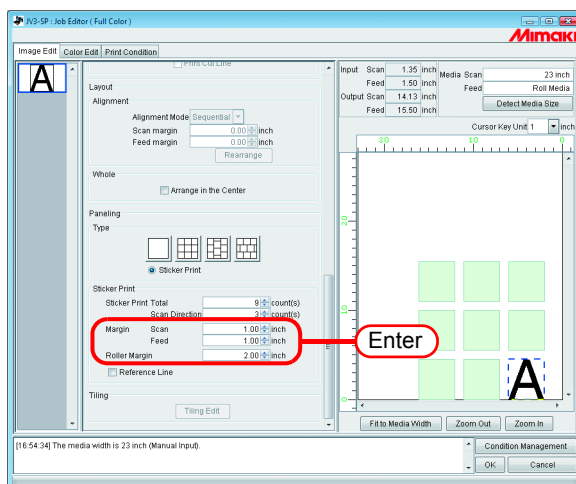

4 To print register marks that indicate the origin, check “Reference Line”.

NOTE! Check “Reference Line” when using a cutting plotter after printing.

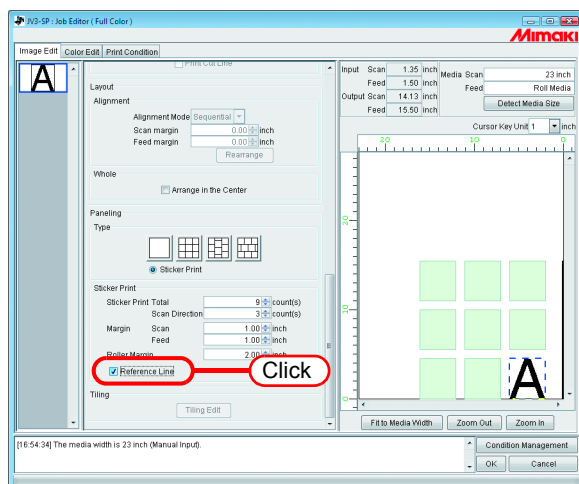

Print Information Label Printing

Print information label will be added at top left of a job when printing.

NOTE!

- If “Paneling” is set, print information label cannot be set.
If “Paneling” is set while “Add label” is checked, check on “Add label” will be cancelled.
- If the length in the scan direction is 1 inch (25.4 mm) or less, print information label cannot be added to the printout. If the length in the scan direction is short, print information label may not be printed completely.


Check “Add label”.

Check items to be printed as label.

Up to 64 arbitrary characters can be entered in the “Remark”



When “Add label” is checked, output size will include print information label.

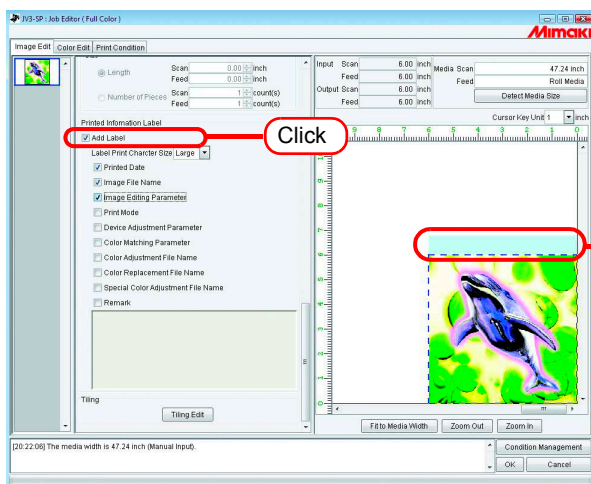


Rectangle of print information label is displayed.

Tiling Edit


Raster Link ProIII can print a larger image than the media that is set in printer by taking it apart. To make the whole image, put together tiles manually.

Besides many kinds of settings are executed so that the tiles can be put together easily.

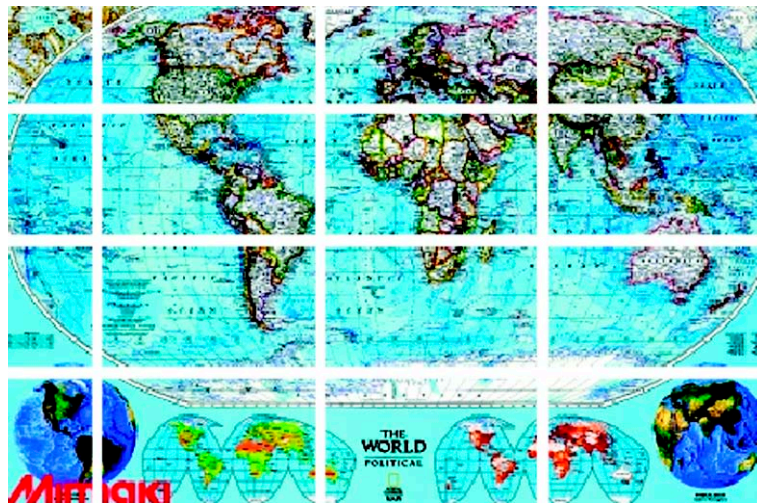


Flow of the Tiled Printing


The procedures of tiling are as follows:

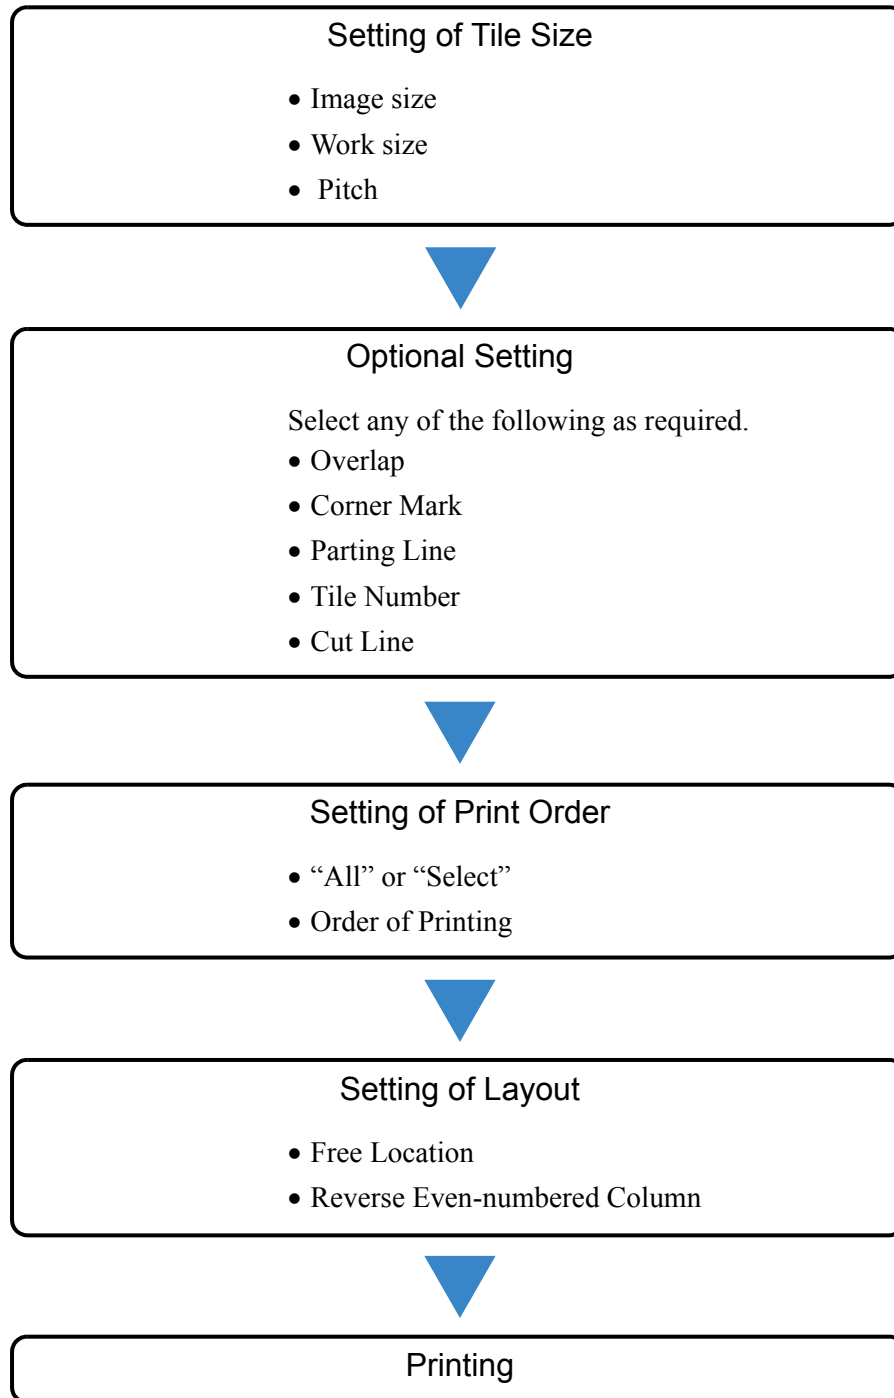


Tiling Setup Window

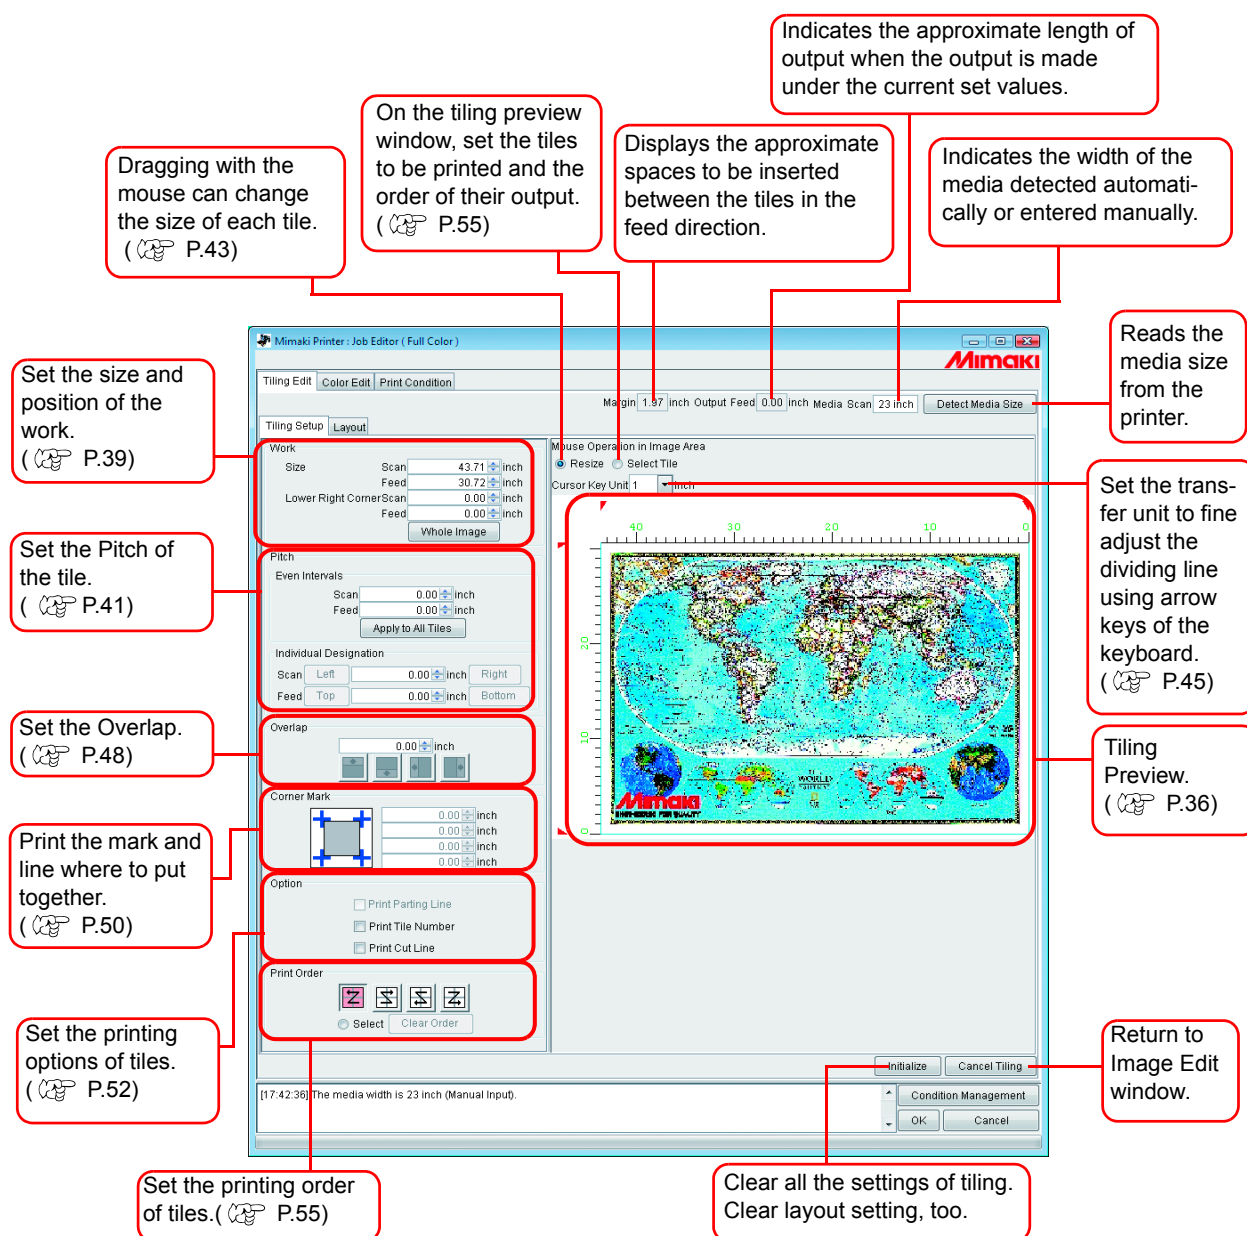


Tiling Preview

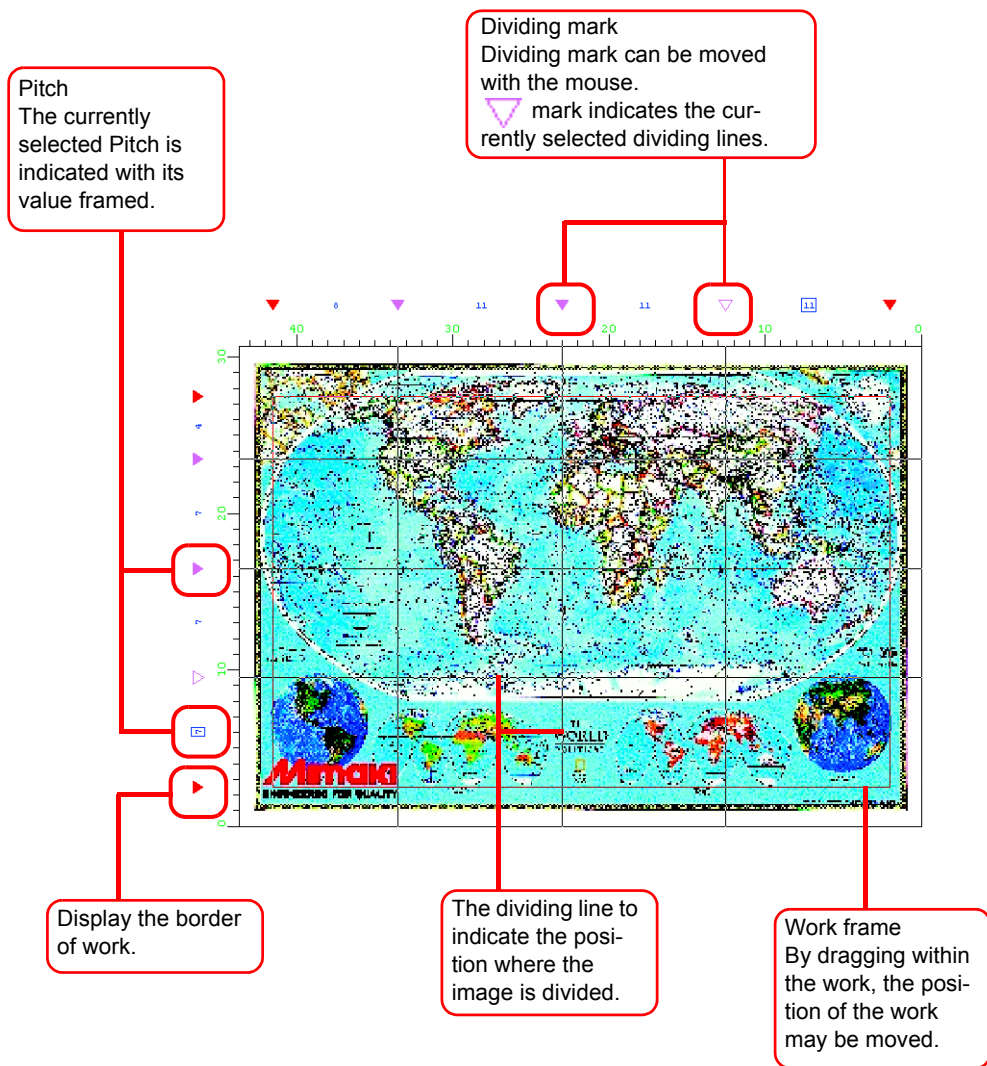

Layout Setting Window

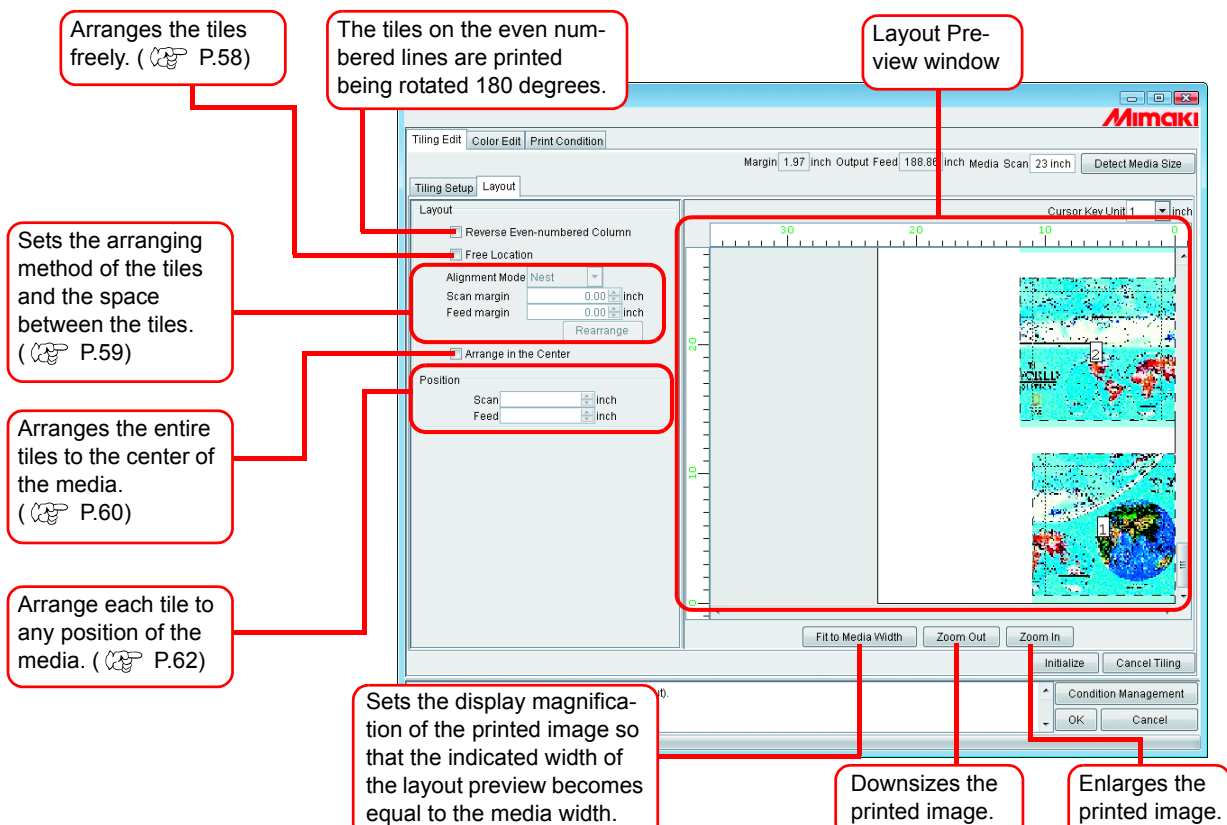

Layout Preview

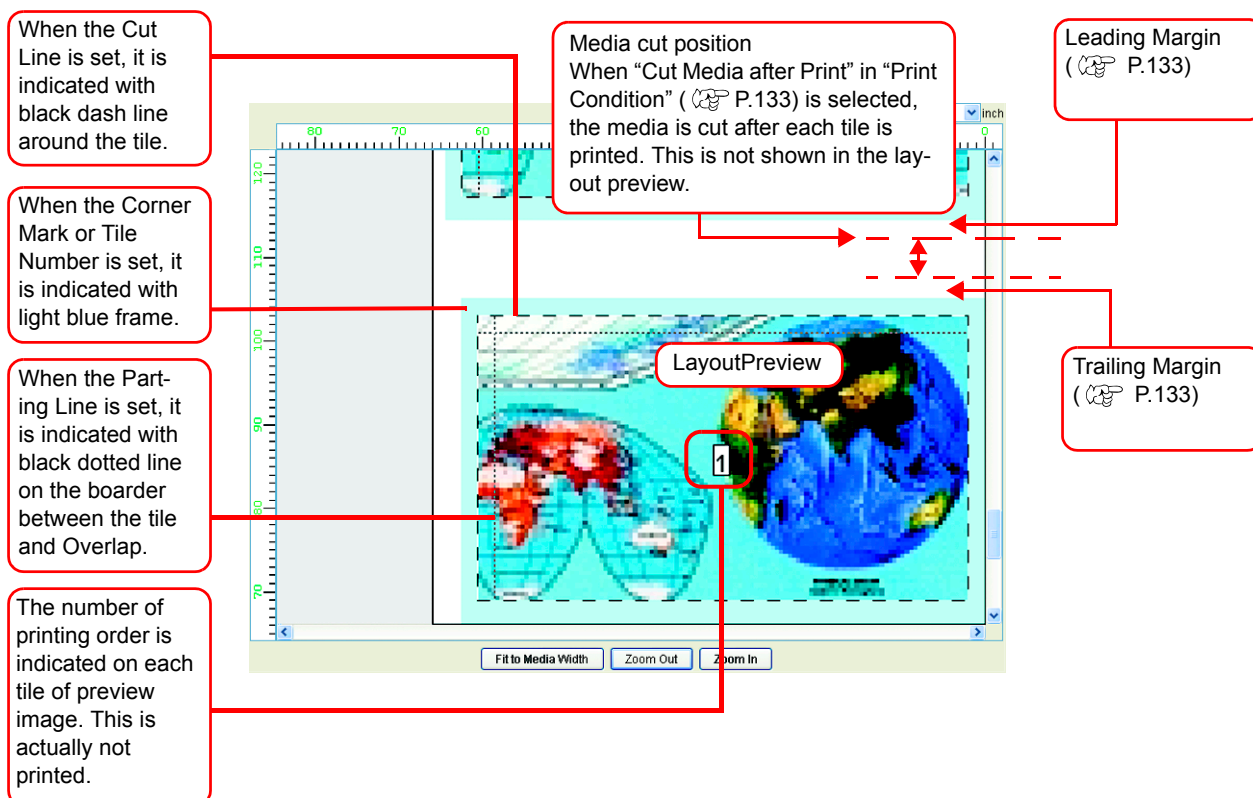


Editing Images before Setting Tiles

Before setting tiles, change the image size and set Rotation and Mirror.

If the editing of image is not required, proceed to Step 3.


- 1 Open the “Job Editor”.
- 2 Perform various settings:
Set “Scale”, “Rotation” and “Mirror.”

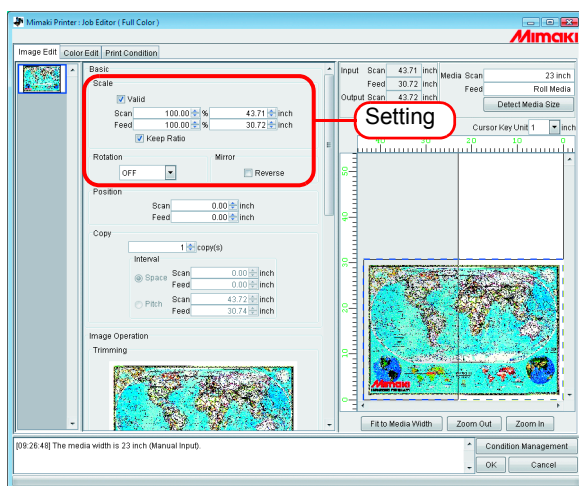

- 3 When the settings of the image to be tiled is completed, click Tiling Edit .

(NOTE!) Tiling cannot be set when editing multiple jobs at the same time, and when multipage jobs, color separation jobs, “Copy”, “Trimming”, and “Paneling” is set.

If to change “Scale”, “Rotation” and “Mirror” setting, click Cancel Tiling in the Tiling Edit Tab.

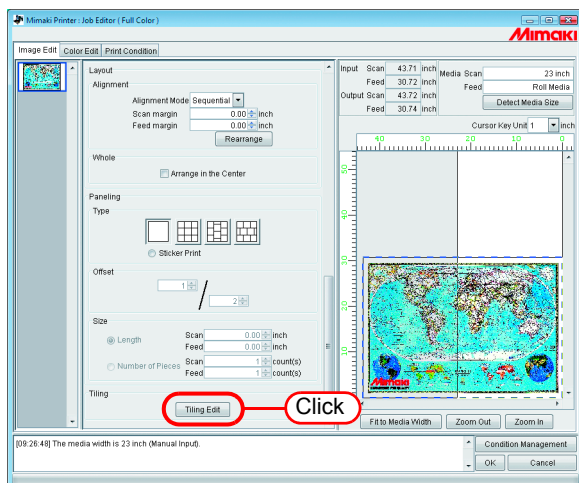

Setting the Work

Set which portion of the image is printed.

Setting Work Size


The working area of tiling is called “Work”.


If the Work is not set, the setting of the tiling cannot be performed.

Enter the “Size” (Scan and Feed) of the Work.


The Work is shown with red rectangle on the tiling preview.



- The work size can be set also by dragging from lower right of tiling preview area.
-  mark indicates the boarder of the Work. By dragging the four corners, you may change the size of the Work.

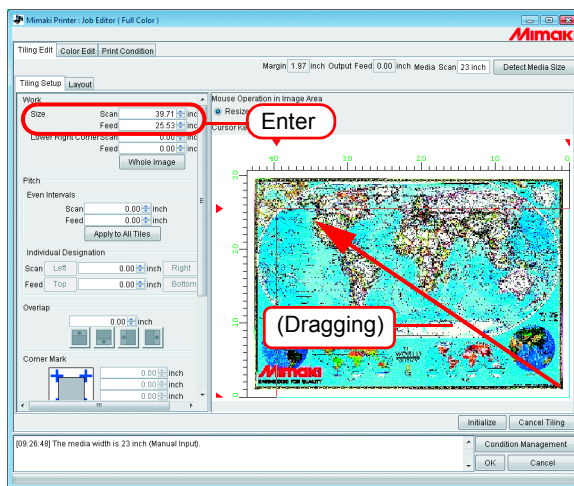

If you click **Whole Image**, the Work is set to the whole image.

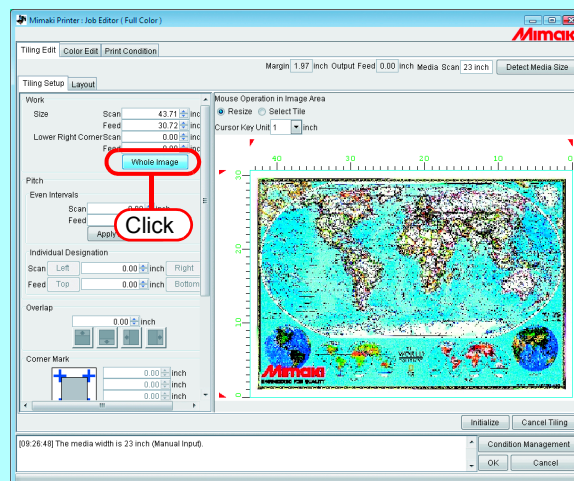


Moving the Work

Move the work to the area you want to print.

Enter the “Lower Right Corner” (Scan, Feed).



The frame can be also moved by dragging inside the frame.

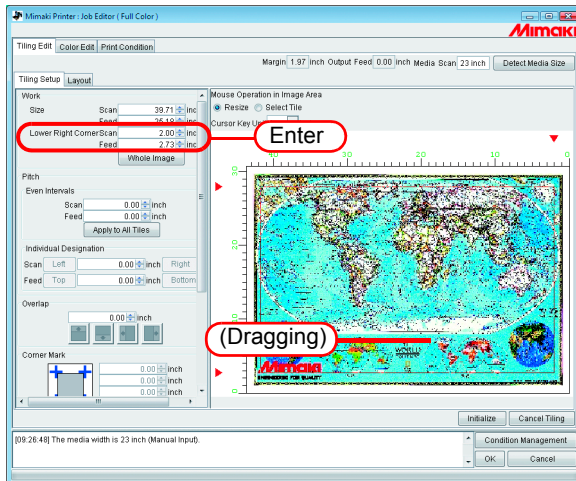

Dividing the Tiles


NOTE!

- The minimum size of a tile is 1 inch (25.4mm). If you enter a value smaller than this, it is automatically changed to 1 inch.
- The maximum number of tiles that can be printed is 100.
- The maximum number of divided tiles is scan direction 30 and feed direction 30. Tiles cannot be divided to exceed these numbers.

Dividing the Tiles at Even Interval

If you want to make fine adjustment, after setting the basic Pitch use “Even Intervals” for setting.

- 1 Enter the basic values of the Pitch to “Scan” and “Feed” of “Even Intervals”.

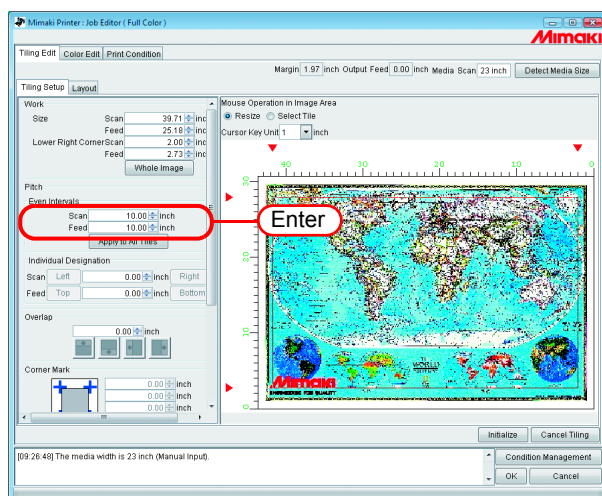


- 2 Click **Apply to All Tiles**.

The division line is displayed on the tiling preview screen.



If you enter 0 to “Scan” and “Feed” and then click **Apply to All Tiles**, the width will become the maximum value that can be entered (media width or work width, whichever is smaller) and the feed will become the feed size of the work.

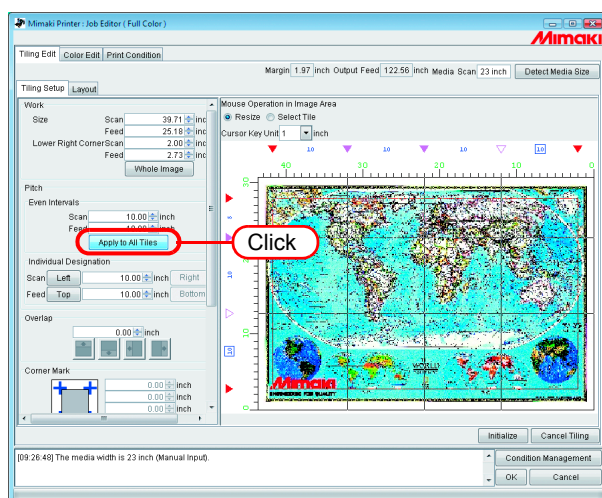

NOTE!

- When the division is made with Even Intervals, the dividing interval of the extreme upper left tile could become less than 1 inch. In this case, even if you click , an error message is shown and the setting cannot be completed.
- When the tile in question is not clear on the tiling preview, click , , , of “Individual Designation” to indicate the Pitch and confirm. Then, perform the adjustment using “Adjusting the Pitch of the Tile” (👉 P.44) as a reference.

Designating the Tile Intervals individually


When you want to enter the Pitch directly, set with Individual Designation.

1 Enter the values to “Scan” and “Feed” of “Individual Designation”.

The division intervals of the right end and bottom end are set and the division lines are shown on the tiling preview.



- In the scan direction, the initial value of the remaining dividing interval is the width of the media.
- If “Feed” is not entered and “Scan” is entered, the feed of the work is automatically entered in “Feed” as the default.

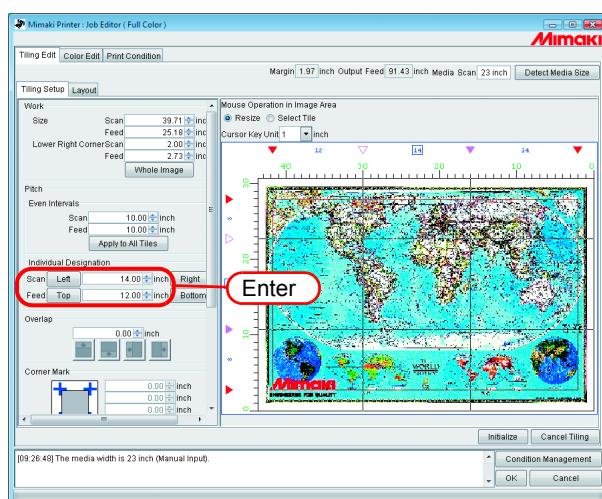


2 Click (setting of the scan direction) or (setting of the feed direction), and enter the next Pitch.

The division line is displayed on the tiling preview.



In the case of “Individual Designation”, the respective tile interval can be entered continuously.


If you enter “Scan” to the dividing interval of the extreme right and press key, the focus moves to button. If you press key again, the focus moves to numerical figure entering area. Enter the neighboring division interval.

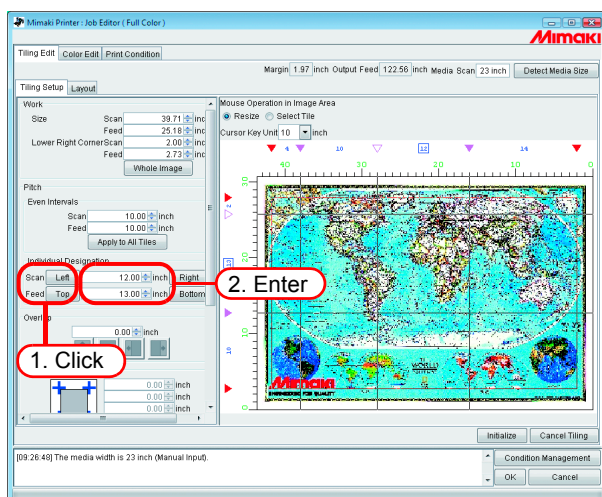

Adjusting the Pitch of the Tile

Adjust the Pitch. When the adjustment is not required, proceed to “Setting the Options of Tiles (☞ P.48)”.

1 Select “Resize” of “Mouse Operation in Image Area”.

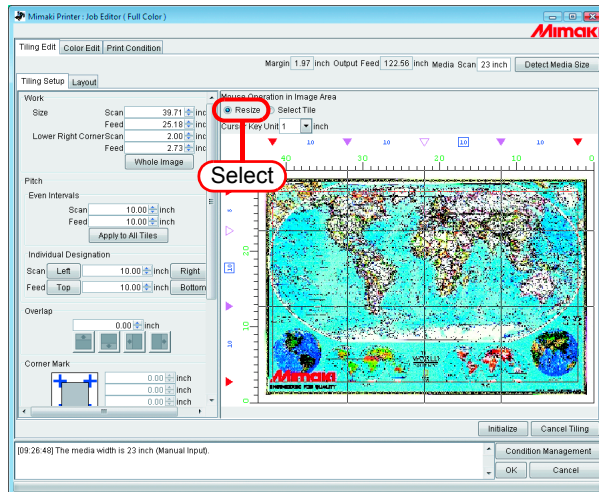


2 Click the division mark ▼ you want to adjust and drag it.

When the division mark is clicked for selection, it is reversed to white.

Adjustment can also be made by entering figures to “Scan” and “Feed” of “Individual Designation”.



- The minimum value for a tile is 1 inch. Even if the figure less than the minimum value is entered, it will automatically be changed to 1 inch.
- The maximum value in the scan direction is either media width or work width, whichever is smaller.
When the figure exceeding the maximum value, it will automatically be changed to the maximum value.
- The division line other than that is to be changed will move together keeping the original Pitch.

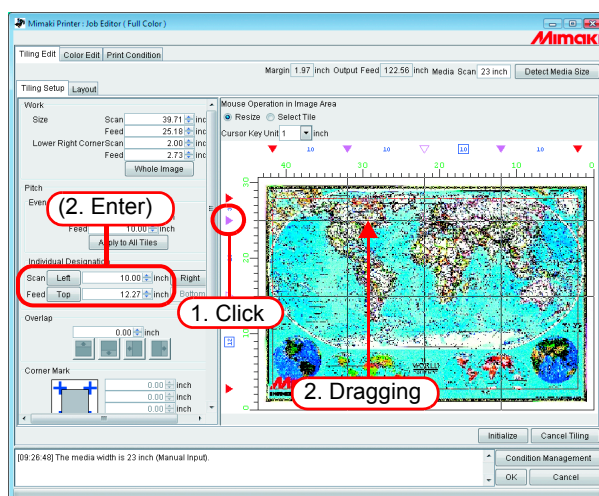

Fine adjustment to the location of the dividing line using a keyboard

The location of the dividing line is adjusted to some extent by using a mouse.

Fine adjustment is available by using a keyboard.

Use following keys.

- **Tab** key : Select each setting item of the tiling window.
When the tiling preview area is selected, the area is framed in a blue rectangle.


Move dividing lines in feed direction.

- **Q** key : Select dividing lines above the currently selected line.
- **A** key : Select dividing lines beneath the currently selected line.
- **↑** key : Move the selected dividing line upward.
- **↓** key : Move the selected dividing line downward.


To move dividing lines in scan direction

- **Z** key : Select dividing lines on the left hand side of the currently selected line.
- **X** key : Select dividing lines on the right hand side of the currently selected line.
- **←** key : Move the selected dividing line leftward.
- **→** key : Move the selected dividing line rightward.


1 Select “Cursor key unit”.

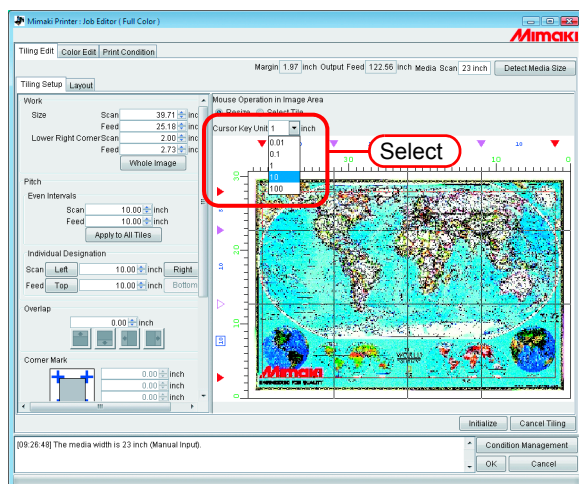


- 2 Push Tab key a few times and select the tiling preview area.
Clicking the tiling area by a mouse is also available.
Tiling preview area is framed in a blue rectangle.

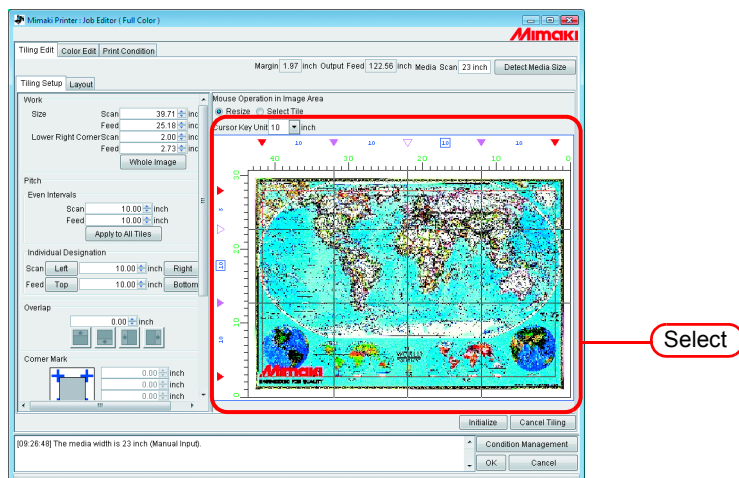

- 3 Select the dividing line that you want to move by pushing alphabet keys Q key, A key, Z key, X key.
The dividing mark of the selected line changes into an open triangle.

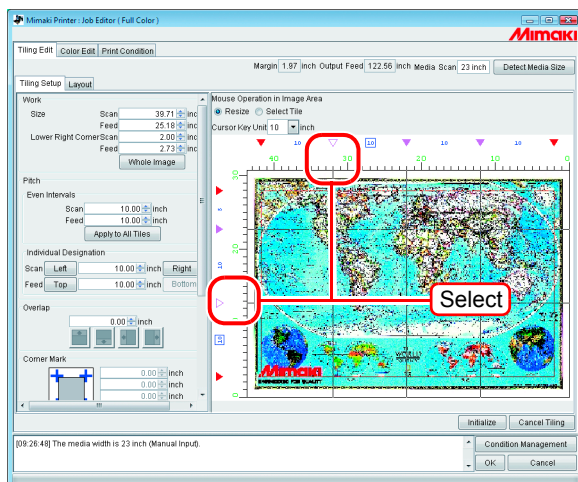

- 4** Move the dividing line by pushing an arrow keys \uparrow key, \downarrow key, \leftarrow key, \rightarrow key. The line moves the size has been set by “Cursor key unit” per push. The line keeps moving by keeping pushing the key.

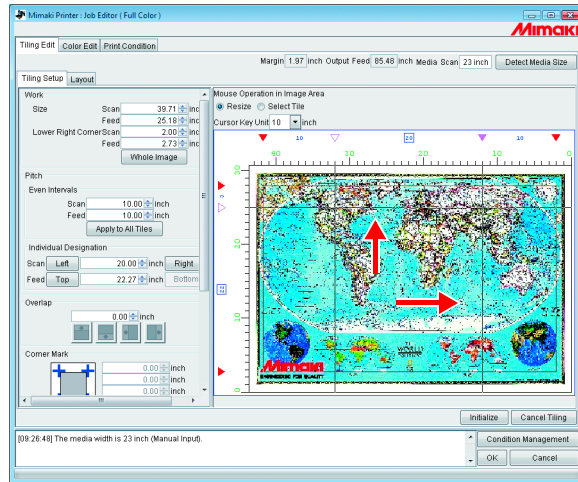

Setting the Options of the Tiles

The effective functions when tiles are pasted together can be set using Option.

When this option is not specifically required, you may proceed to “Setting the Printing Order of Tiles (🔗 P.55)”.

Setting the Overlap of Tiles

Set the overlap length and position on tile.

Print an image on the part of overlapping.

The overlap can be set in any direction such as top or bottom, and right or left.

However, the Overlap cannot be printed to the tiles at the corners and at the end.

The Overlap is not displayed on “Tiling preview” window.

The “Layout Preview” shows an image of the overlap part.

Tile at the Corner



As the position of the tile is at the right-bottom corner, the Overlap is not set to the right and bottom.


Tile in the Bottom End



Overlap

As the position of the tile is in the bottom end, the Overlap is not set to the bottom.

Tile in the Center

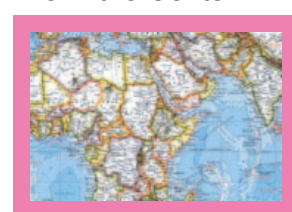


As the position of the tile is in the center, the Overlap is set to all sides.

NOTE!

- The maximum value of the Overlap is 3.94inch (100mm), and the minimum value is 0.2inch (5mm).
- When the total of Pitch and Overlap exceeds the media width, Pitch and Overlap will be adjusted automatically so that the image be contained in the media width. In this case, even if Cut Line and Corner Mark are set, they might be printed only partially.

1 Enter the length of the Overlap.

When the length of the Overlap is entered, the items to set the position of the Overlap will be activated.

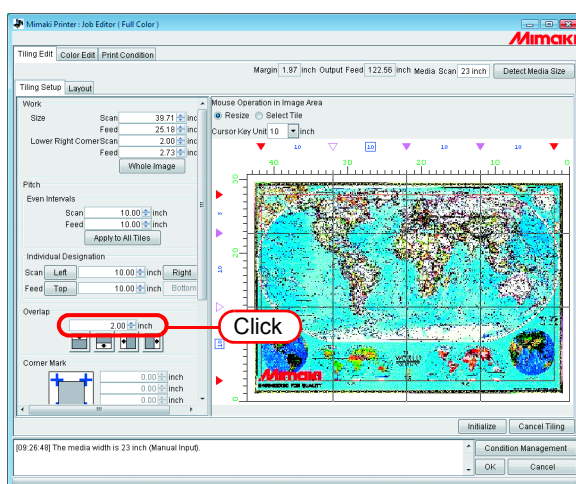


2 Select the setting position of the Overlap.

If you click again, the selection is cleared.

NOTE !

When there exist tiles that are smaller than the length of the Overlap, even if you click , an error message is shown and the setting cannot be completed.

Confirm the Pitch of the Top and the Left. Make the size of the Overlap smaller than the size of the tile or adjust the pitch of the tiles.

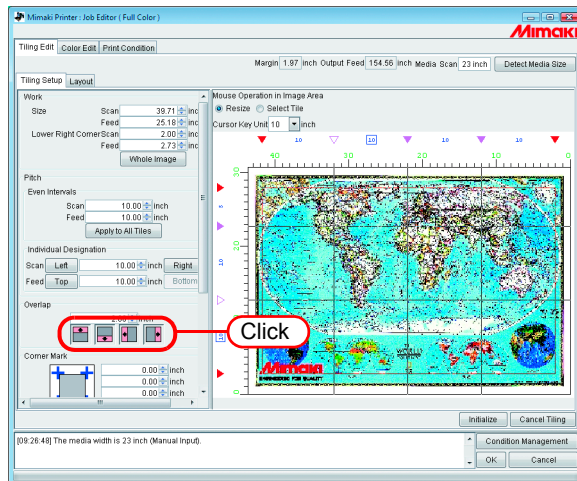


Print mark on the overlap (Corner Mark)

Print marks to make tiles easier to put together.

When the overlaps are not set, it is not allowed to attach the corner mark. Return to “Setting the Overlap of Tiles (P.48)” and set the Overlap.


The corner marks will not be displayed on the “Tiling Preview” window.

They are indicated on the “Layout Preview” with light blue frame.

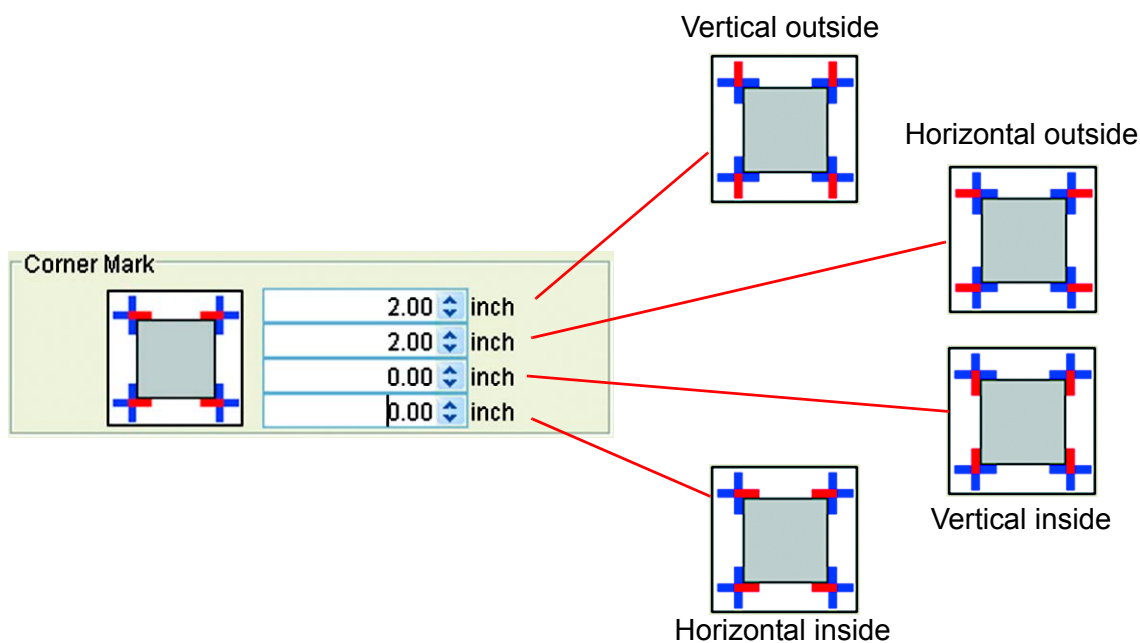

Enter the length of the Corner Mark into the entering boxes.

The maximum value is 3.94inch (100mm).

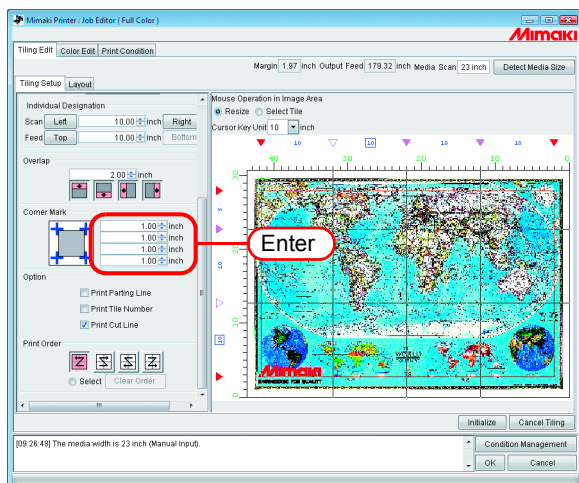



If you place the cursor on the numerical figure-entering box, the corresponding mark portion turns red.
It is not displayed on the “Tiling Preview”.



When the corner marks are set to all 4 corners

Printing the Parting Line of the Images (Print Parting Line)

Along the border of the tiles and the Overlap, white and black lines with 0.004inch (0.1mm) width and with 1.9inch (50 mm) length will be drawn alternately.

The Parting Line is not displayed on the “Tiling Preview” window.


The “Layout Preview” is shown with a black dotted line.

NOTE!

When the Overlap is not set, it is not allowed to enter the Parting Line.



Check the “Print Parting Line”.

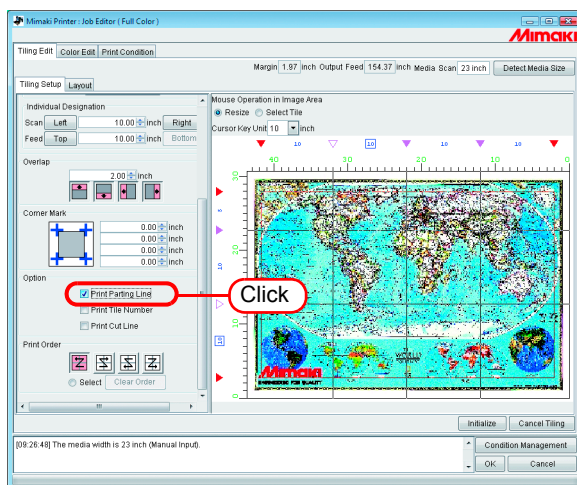

Print the tile number on each tile (Print Tile Number)

In order to indicate where the tile drawn corresponds in the image, the tile number is printed at the bottom left of each tile. (when the Overlap exists, outside of the Overlap)

When reversing the even-number lines is set, the position of the tile number is also reversed.


“Tile number” will not be displayed on the “Tiling Preview” window.

On the “Layout Preview”, it is displayed with light blue frame.


The size of the tile number is 0.6inch (15mm) high, and the width is 2.7inch (67.5mm) max.

NOTE!

The “Tile Number” is different from the figures indicated on Tiling Preview when “Print Order” is activated.

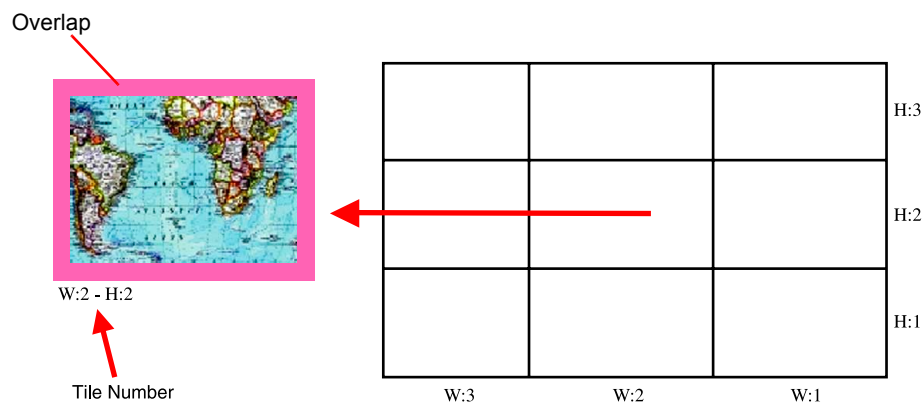

Check the “Print Tile Number”.

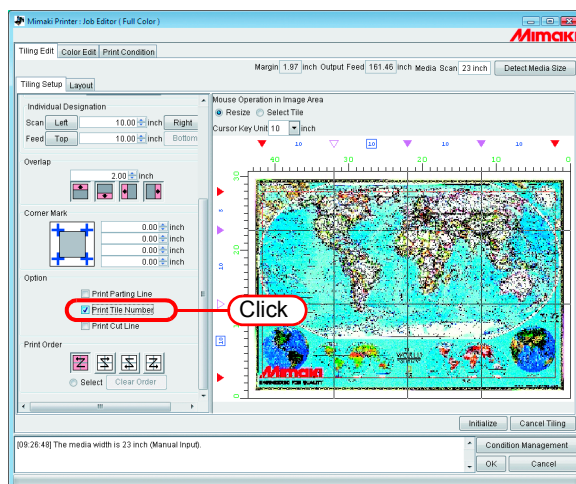

Printing Cut Line of the Tile (Print Cut Line)

Print the 3.9inch (100mm) interval black dashed lines that are used as reference when the printed media is cut into individual tiles.

The cut lines are printed around the tiles including the Overlap.


“Print Cut Line” is not displayed on the “Tiling Preview” window.

The “Layout Preview” is shown with a black dotted line.

When the “Print Cut Line” of Job Editing is checked, a check mark has already been placed in it.



Check the “Print Cut Line”.

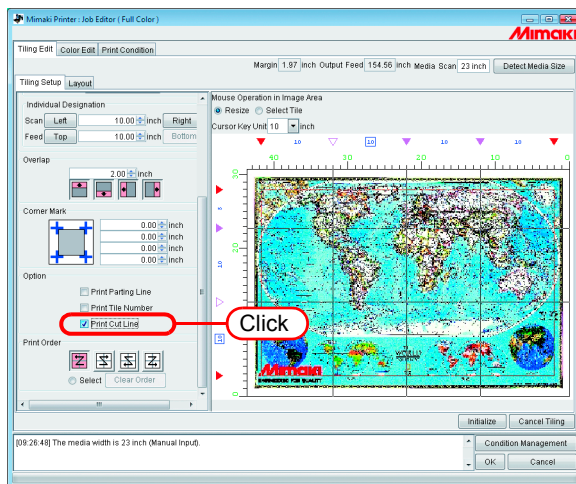

Setting the Printing Order of Tiles

Printing the tiles sequentially


Designate the order of printing tiles.

When you want to decide the order of printing freely, or when you want to print the designated tile only, refer to “Designating the Tiles to be Printed Freely (☞ P.56)”.

Click “Select Tile”.

The order number of printing of tiles is indicated on the “Tiling Preview”.

Select any one of the following printing orders and click it.

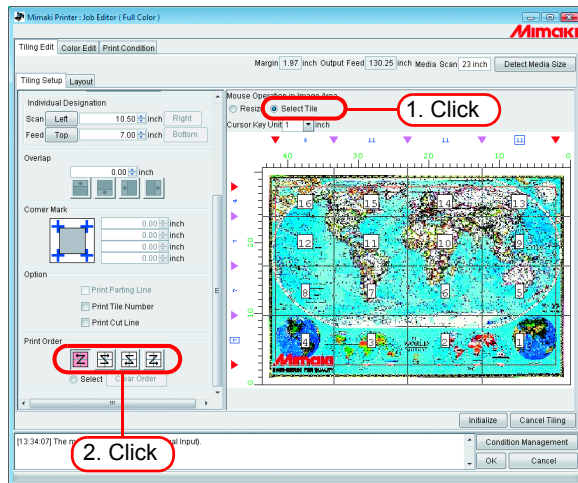

: Printing is made sequentially starting from No.1 to No. 16 at the left example.



: Printing is made sequentially starting from No.4 to No.13 at the left example.



: Printing is made sequentially starting from No.13 to No. 4 at the left example.



: Printing is made sequentially starting from No.16 to No. 1 at the left example.

Designating the Tiles to be Printed Freely


Set this when you want to decide the order of printing tiles freely, or when you want to print only the designated tiles.

1 Click “Select Tile”.

The order number of printing of tiles is indicated on the “Tiling Preview”.


Select “Select” of “Print Order”.

Clear Order button becomes active.

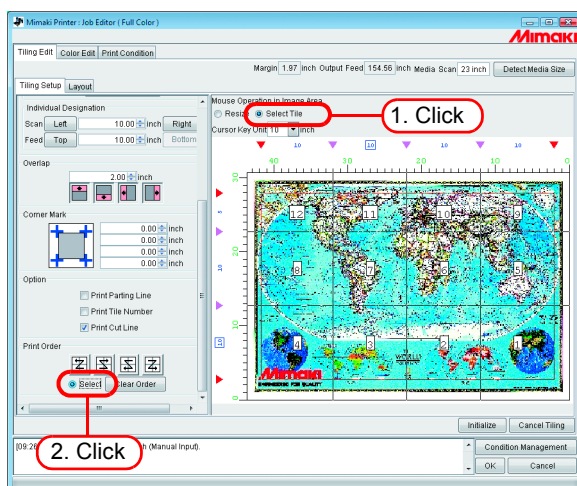


2 Click **Clear Order**.

The order number of printing are disappear in “Tiling Preview”.

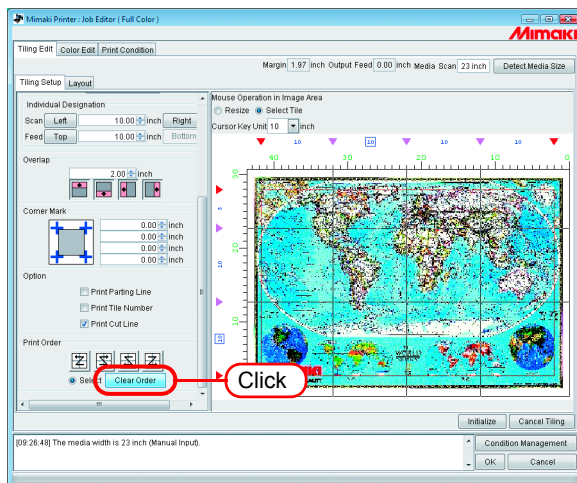

3 On the “Tiling Preview”, click the tiles you want to print one by one.

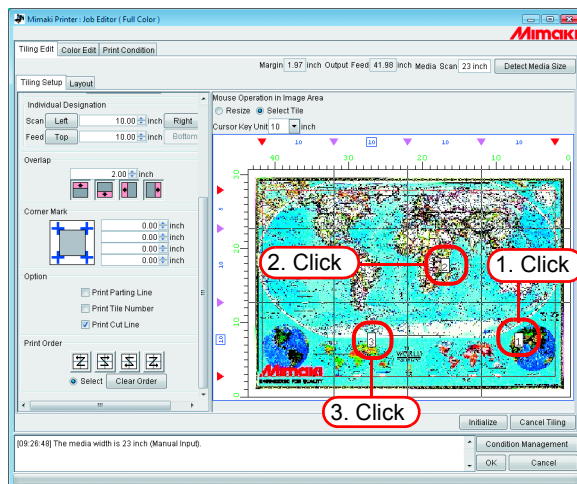

When mistakes of printing order has made, click **Clear Order** and try again.

NOTE!

If the tiles to be printed are not designated after clicking **Clear Order**, the setting will not be completed even if you click **OK**. Designate the tiles to be printed.

Laying out the Tiles

In the default state, the preset margin (“Leading Margin” + “Trailing Margin” in “Print Condition”) and the printer automatic feed amount interval are set between the tiles, and the tiles are arranged in the feed direction in the specified tile order.

NOTE!


Before and after printing, the printer inserts automatic feed. Since the amount of automatic feed differs according to the printer and print settings (resolution, pass, and with JV4, the Front and Rear setting of the head), the “Margin” value is not an accurate value.

Reversing the even-numbered column

If there appears the difference in colors between the right and left side of each tiles when you print, the “Reverse Even-numbered Column” function is effective.

NOTE!


Tiles of the even-numbered columns mean the tiles of the columns on the Tiling Preview located at even-numbered from the right end.

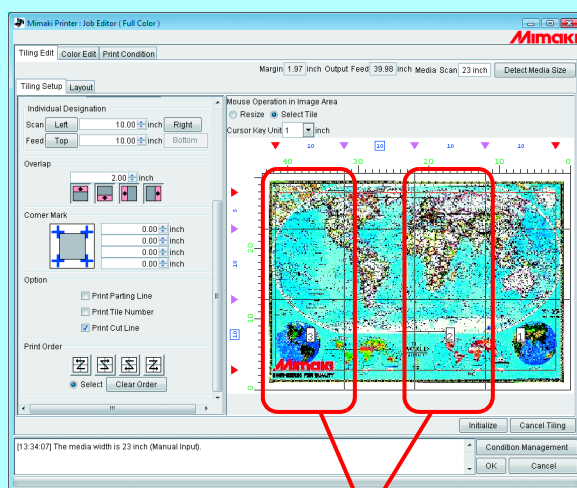

Even-numbered Column

Click “Reverse Even-numbered Column”.

You may confirm the reversed tiles on the “Layout Preview”.

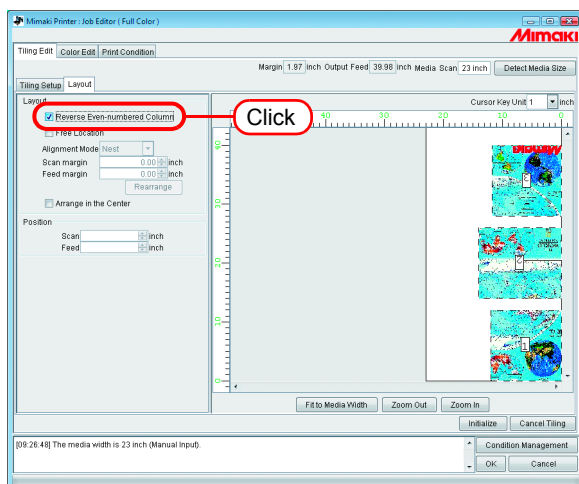

Arranging the Tiles to the position of your choice


The arrangement method of tiles and the margins may be set freely at your choice.

NOTE!

For tile layout, there are “Fixed Arrangement” and “Free Location”.

- With “Fixed Arrangement”, RIP and printing is performed for each tile.
- In the case of “Free Location”, the printing will be started after completion of RIP of all tiles.
- When the “Free Location” is selected, the time before starting the printing becomes longer. Also the disk has to have enough capacity as the Ripped data are made for all tiles designated to be output.


1 Click “Free Location”.

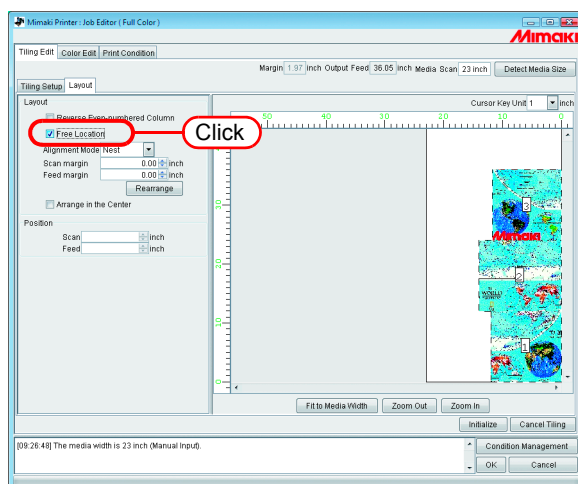

2 Select “Alignment Mode”.

Enter the “Scan margin” and “Feed margin” as required.

Click **Rearrange**.

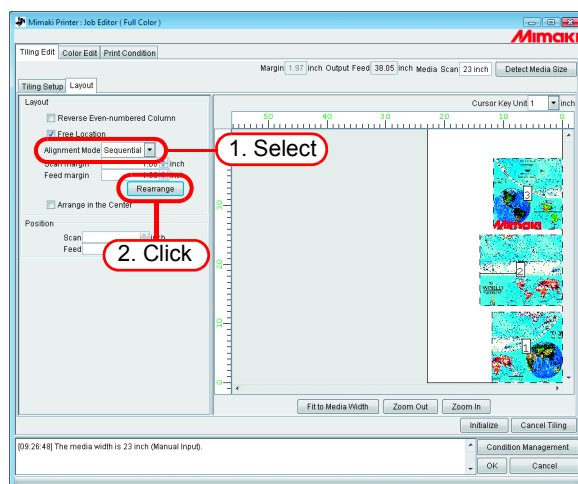


Arranging in the Center of the Media

You may arrange the tiles in the center of the media.


When the “Arrange in the Center” of “Image Edit” is checked, a check mark has already been placed in it. “Arrange in the Center”, is common to “Tiling” and “Image Edit” and the same setting is applied.

Click “Arrange in the Center”.

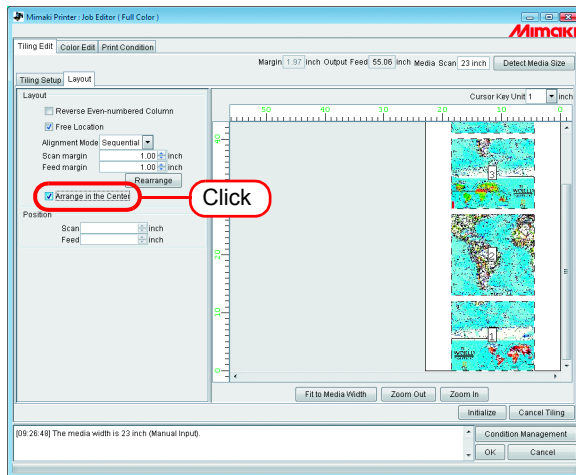




- When “Arrange in the Center” is canceled, the scan direction position returns to the original position.
- Fixed Arrangement:
(When “Free Location” is not checked)
The arrangement is made aligning the center of each tile to the center of the media.

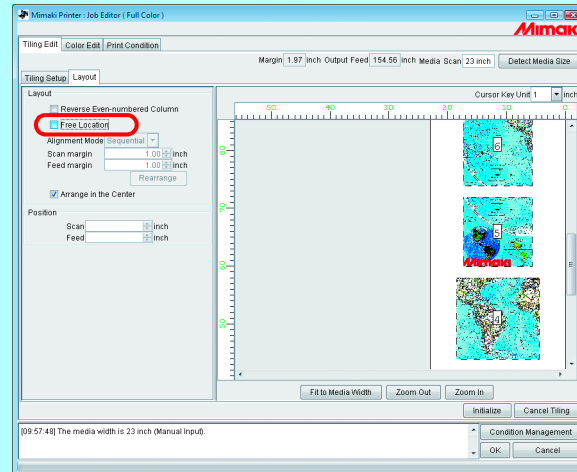

- Free Location:
(When “Free Location” is checked)
The arrangement is made aligning the center of all tiles designated to be output to the center of the media.

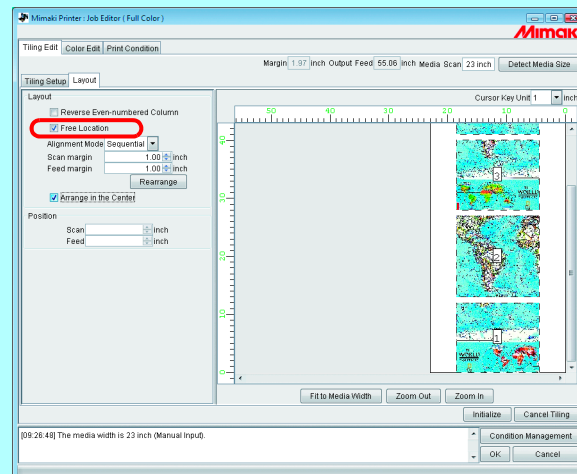


Moving the Tiles to the position of your choice

When the “Free Location” is checked, each tile may be moved freely to any position.


1 On the “Layout Preview”, click the tile you want to move.

The clicked tile is surrounded by the blue dotted lines and the “Position” figure entering boxes will be activated.

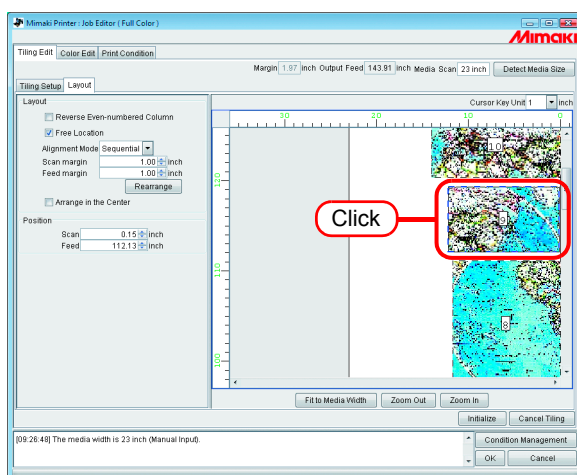

2 To the “Scan” and “Feed” of the “Position”, enter the moving amount.

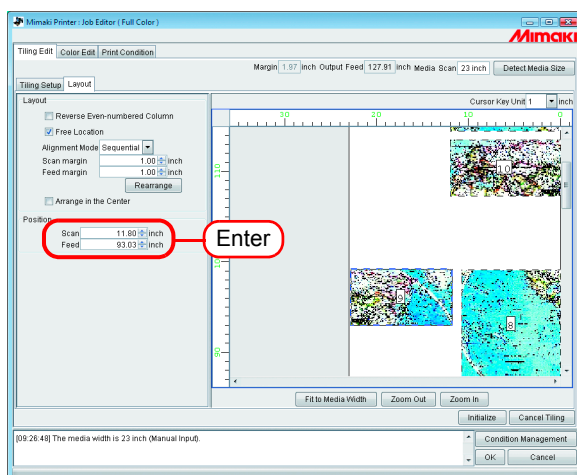



The tile will move accordingly.




NOTE!

- When the tiles are overlapping one another, even if you click , the setting cannot be completed.
- When even one tile is completely outside of the printing area, even if you click , the setting cannot be completed. You have to relocate such tile or if that tile is not necessary, select again the tiles to be printed.

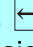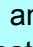


- Using the dragging, you may move the tiles.
- With arrow keys , ,  and , you may also move the tile with the amount of movement designated by the “Cursor Key Unit”.

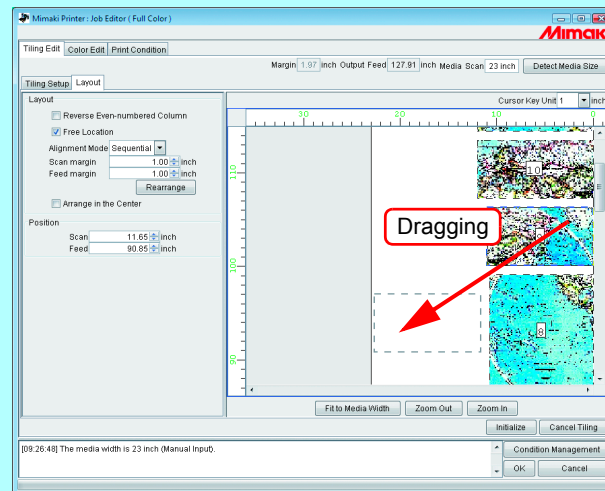


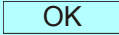
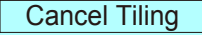

Ending the Tiling Setting

When the setting of the tiles is completed, save the setting.

Click  .

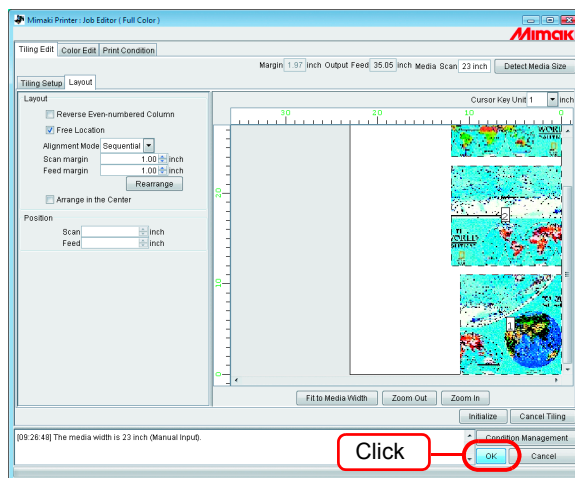

NOTE !

- If you click  and then click  without setting anything, the setting will not be completed. Perform the Tiling Setup.
- If you click  and then , the tiling function is invalidated. (The setting parameters remain).

Printing the Tiles




To print tiles, you may select, as in the case of normal printing, “Immediate print”, “RIP and Print”, “RIP only” or “Print only” (when there are Ripped Data).

For the procedures for printing, refer to Reference Guide, Common Features for Every Printer “Printing”.

Set the following items as required:

NOTE!

When the “Free Location” is set, the “Immediate print” cannot be performed.

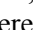Ripped Data		Explanation
Not Exist	Wish to keep	<p>If the Ripped Data are kept, the printing time when you reprint them can be shortened.</p> <p>However, as the big amount of hard disk space is used, the free capacity could become insufficient.</p> <p>For printing, select “RIP and Print”.</p> <p>Or, alternatively, check “Create Ripped Data during Immediate Print” in the “Option Setting” (“Reference Guide, Common Features for Every Printer”  P.86) and perform “Immediate Print”.</p> <p>Reprinting can be done with “Print Only”.</p>
	Not required	<p>When reprinting is not required, the Ripped Data is not needed.</p> <p>In the “Option Setting” (“Reference Guide, Common Features for Every Printer”  P.86), clear the check of “Create Ripped Data during Immediate Print” and perform the “Immediate Print”.</p> <p>Or, alternatively, check “Delete job after print” in the “Option Setting” (“Reference Guide, Common Features for Every Printer”  P.86) and select “Delete Only Ripped Data”. And then perform “RIP and Print”.</p>

Ripped Data	Change in set value	Explanation
	Printing tiles	
Exist	No change	There exists Ripped Data of all tiles.
	Print all tiles	Printing is performed with “Print only”.
	No change	Designate the tiles to be printed. (“Designating the Tiles to be Printed Freely” (P.56))
	Print specified tiles	Printing is performed with “Print Only”.
	To be changed	<p>When the tile settings are changed, at the time you click <input type="button" value="OK"/> on the “Job Editor”, delete the Ripped Data.</p> <p>If you execute “Immediate Print” or “RIP and Print”, RIP is performed again.</p> <p>However, the following changes in the setting, the Ripped Data will not be deleted.</p> <ul style="list-style-type: none"> - Printing Tile Designation - “Free Location” ON/OFF - The printing position of each tile when the “Free Location” is ON. - “Arrange in the Center” ON/OFF <p>In the case all tiles are to be RIP performed again, perform “Delete Ripped Data” and then “Immediate Print” or “RIP and Print”.</p>
Partially Exist		<p>If you perform RIP with selecting the tiles to be printed or the processing is canceled during the printing, the “Ripped Data” column will show “Partially Exist”.</p> <p>In order to research which tiles are RIP-performed, display the “Job Properties” of the Job. (“Reference Guide, Common Features for Every Printer” (P.85)), and then click the [Results] tab to confirm.</p> <p>When all the Ripped Data are ready (there is no change), you may print with the “Print Only”.</p> <p>When you print the tiles that are not RIP-performed at the same time, select “RIP and Print”.</p> <p>If there is no change in the RIP-performed tile, the RIP will not be repeated. When there exists any change, when you check [OK] of the “Job Editor”, the Ripped Data is deleted. However, depending on the nature of the change, the Ripped Data is not deleted. Refer to (Ripped Data, “Exist”, “To be changed”).</p>

Twin roll printing (using JV3-250SP)

With JV3-250SP, it is possible to set two rolls of media at the same time for printing. This is called “Twin roll printing”.

The area corresponding to the left and right rolls is one printing area.

This is enabled when two rolls are set in the printer.

NOTE!

Twin rolls cannot be set when the printer status cannot be acquired.


Layout Preview

In the “Layout Preview”, the two rolls are each shown as valid printing area.

The area between the media is not valid printing area.

NOTE!

If an image is arranged to straddle the media, the “Job Editor” displays an error message when finishing, and the settings cannot be saved. Arrange images to fit completely on the roll.

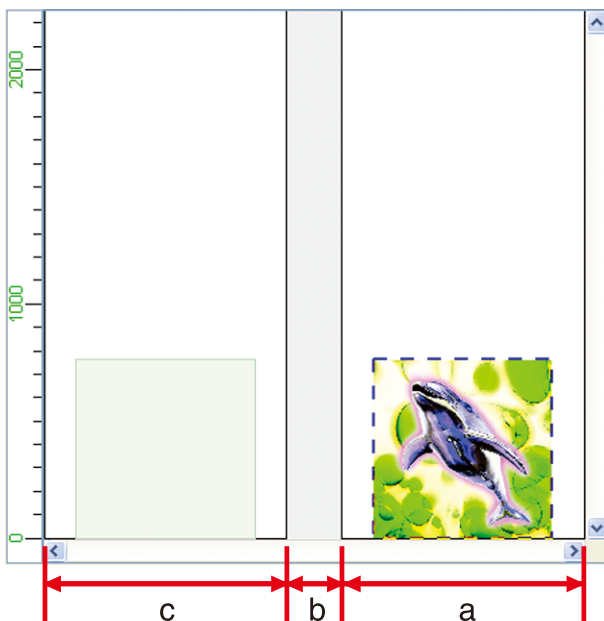

a	Right roll (valid printing area)
b	Outside valid printing area
c	Left roll (valid printing area)

Print multiple jobs at one time


By grouping jobs, multiple print data can be printed at one time.

Grouping

NOTE!

- When grouping jobs with different print conditions, the print conditions of the other jobs adopt those of the first job.
- Depending on the images, white space may be introduced between them even if they are arranged without spacing.
- Jobs with tiling, paneling, jobs with two copies or more set, multipage jobs, and application separation and RIP separation jobs cannot be grouped.
- Jobs with a status other than “Ready”, “Cancel”, and “Error” cannot be grouped.
- Jobs with a different “Printer Name” cannot be grouped.

1 Select jobs to group from the Job List.

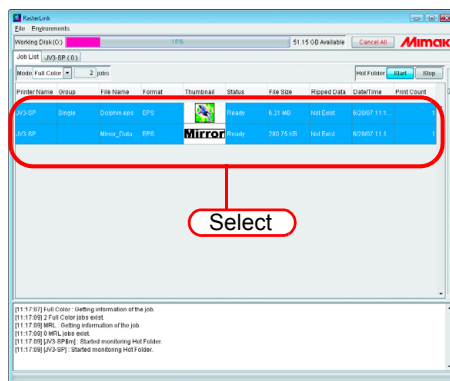


- Clicking a job with the **Ctrl** key pressed selects only the clicked job.
- Clicking a job with the **Shift** key pressed selects all jobs from the job selected first to the next job clicked.
- When selecting jobs, jobs that belong to other groups can also be selected. In this case, all the jobs in that group become grouped.

2 Hold down the Shift key and double click the selected job to open the “Job Editor”.


Refer to “Reference Guide - Common features for every printer” (👉 P.70) for how to open the “Job Editor”.

Edit the jobs and click OK .

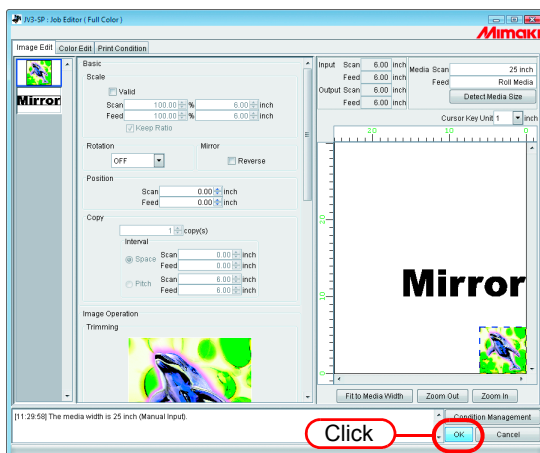


NOTE!

- When images overlap, they are printed superimposed, with the image displayed at the top of the thumbnail list first.
- The overlapping parts of the images are printed with priority given to the valid pixels of the topmost image.

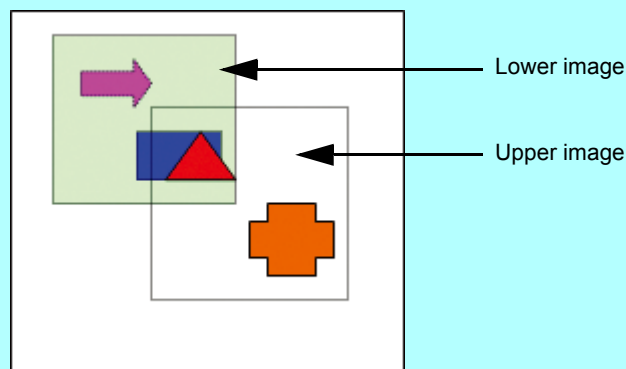

Example of overlapping printing

3 They are shown in the “Group” field of the “Job List” as “Arranged”.

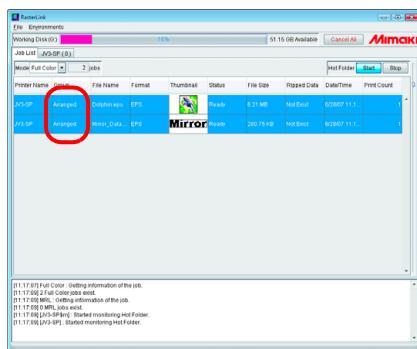

When a grouped job is opened in the “Job Editor”, all grouped jobs appear in the “Job Editor”.

Add grouped jobs to jobs being edited

Grouped jobs can be added to jobs being edited in “Job Editor”.

Add jobs to the job list in “Job Editor”.


NOTE!

- Jobs being edited with tiling, paneling, jobs with two copies or more set, multipage jobs being edited; application separation and RIP separation jobs; and jobs being edited with a different “Printer name” cannot be added.
- Jobs with tiling, paneling, jobs with two copies or more set, and multipage jobs cannot be added.
- Jobs with a status other than “Ready”, “Cancel”, and “Error” cannot be added.

1 Select a job to add with the “Job Editor” open, and double click it.

Jobs can also be added with the following method.


- Right click it and select “Edit”.
- Hold down the **Ctrl** key and press the **E** key.

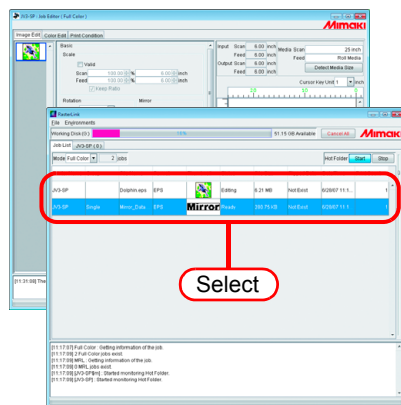


Already grouped jobs can also be added. In this case, all the jobs in that group are added.

2 The jobs are added in “Job Editor”.

Edit the jobs and click **OK**.

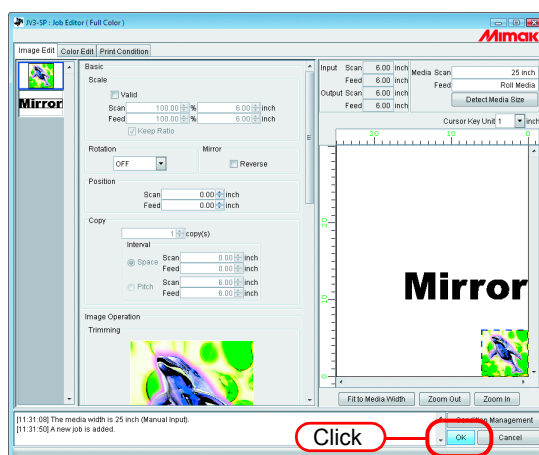

3 They are shown in the “Group” field of the Job List as “Arranged”.

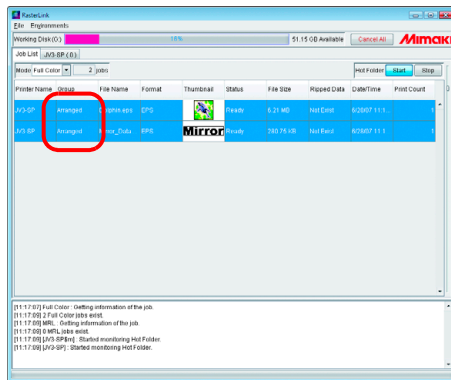

When a grouped job is opened in the “Job Editor”, all grouped jobs appear in the “Job Editor”.

Clear grouping


There are two methods for ungrouping grouped jobs.

NOTE !


Jobs with a status other than “Ready”, “Cancel”, and “Error” cannot be ungrouped.

Ungrouping in the Job List

- 1 Select one grouped job.
Right click it and select “Clear Group”.
Or hold down the Ctrl key and press the E key.

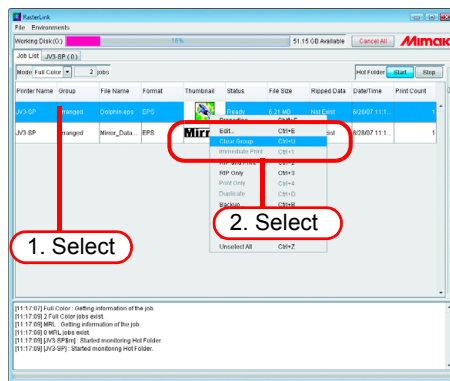


- 2 They are shown in the “Group” field of the Job List as “Single”.

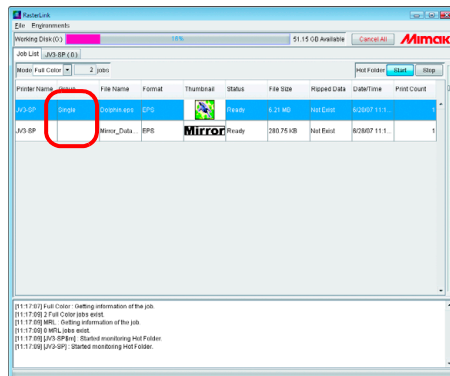

Ungrouping on the edit screen


When editing multiple jobs, you can clear the grouped status from the “Job Editor”.

Right click on the thumbnail of a job to ungroup to display a pop-up menu.
Select “Clear Group”.

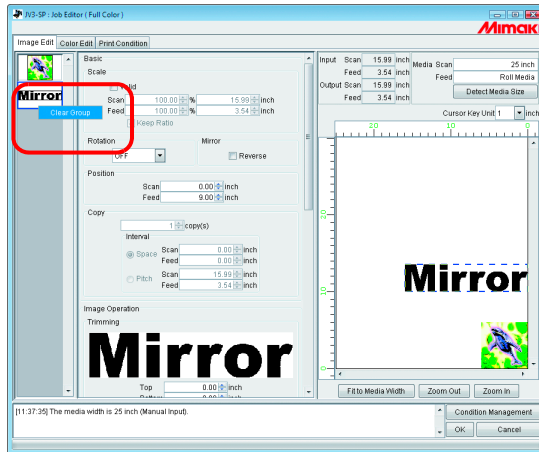

Editing Multiple Jobs

In the “Job Editor”, it is possible to specify Scale, Rotation, Mirror, Position, and Cut Line printing for multiple arranged jobs at the same time.

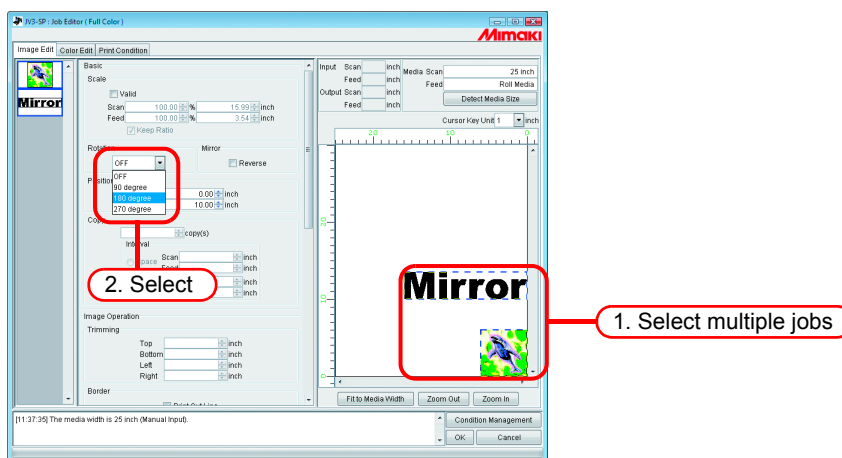

Color Edit


Make setting for Color matching, etc. by “Color Edit” in the “Job Editor” window.

Select a job to be subjected to Color Edit from the list of thumbnails at left.

NOTE!

Perform color editing for a single job at a time. When you are editing two or more jobs, select a job to be subjected to “Color Edit” from the thumbnail list and perform setting.

Setting Color Matching

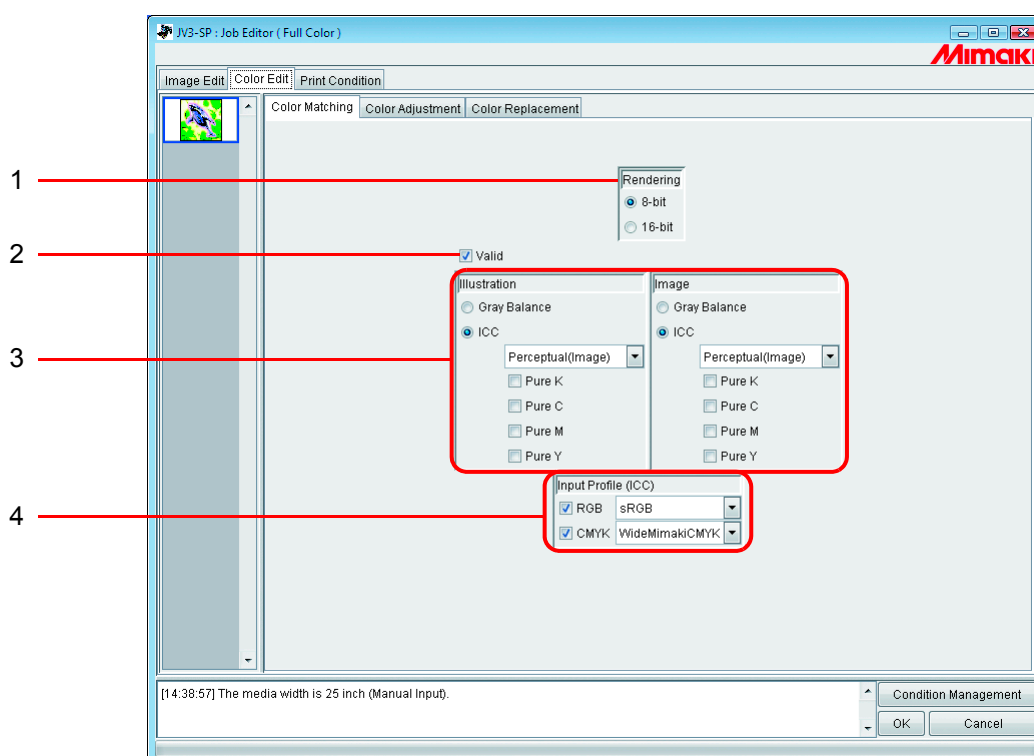

1. Rendering

If a version 3.0 device profile is selected in the Print Conditions window, the Rendering screen is displayed.

8 bit Applies the same print quality as before.

16 bit Prints with smoother gradation.

If a version 2.0 device profile is selected, the Rendering screen is not displayed.

8-bit print mode applies as before.

2. Valid

Makes the Color matching function active.

Performs printing according to the conditions you have set on the “Color Matching” menu.

3. Illustration/Image

Set Color matching for each of the illustration part and image part in one file separately.

Gray balance:	Available with CMYK data. The colors designated by data are mixed in such a way that no other color is mixed. Gray balance is inferior to ICM in the accuracy of color matching. If a Version 3.0 device profile generated by converting a Version 2.0 device profile is selected on the [Print Condition] screen, you cannot select gray balance.
ICM:	Color matching is processed with ICC Profile. Usually, select this option.
Perceptual:	Suitable to print images (photos). Color matching is performed so that the brightness of the whole image will be highly near to that of the input image.
Colorimetric:	Suitable to illustrations. Color matching is performed so that printing will be achieved in as deep color as possible.
Relative:	Color matching is performed so that the print colors relative to white will approximate to those of the input image. When the color of the media is different from the white that works as a reference for the colors of the input image, the print colors vary with the media. For example, if yellowish media is used for printing, the whole print is slightly yellowish compared with the input image.
Absolute:	Color matching is performed so that the print colors will approximate to those of the input image without being affected by the media color. When the color of the media is different from the white of the input image, an effort is made so that the color of the media will be near to the white of the input image. Therefore, there may be a case where ink is ejected even without any image to be printed.
Pure K, Pure C, Pure M, Pure Y:	For data prepared in primary colors, that is, cyan, magenta, yellow, and/or black, printing is carried out without color matching, thus preventing any other ink from being mixed.

4. Input Profile (ICM)

Select an Input Profile for RGB data and CMYK data individually.

The profile is Gray balance mode when the check box is unchecked.

NOTE!

In case the input image has the specific profile such as scanner, specify the profile as the input profile to improve the color repeatability.
The profile is needed to be registered on the Profile Manager.

Editing Color Adjustment


Adjust the color of an image. Register a color adjustment set.

Register color adjustment set for each Device Profile in “Color Adjustment” page.

List of file names of color adjustments.
When you select “Standard”, editing of color adjustment is not allowed.
When you perform Color Edit, prepare a color adjustment set newly.
(P.76)

Click the tab for the adjustment to be made.

Density (P.78)
Ink curve (P.82)
K-CMY Mixing Ratio (P.88)

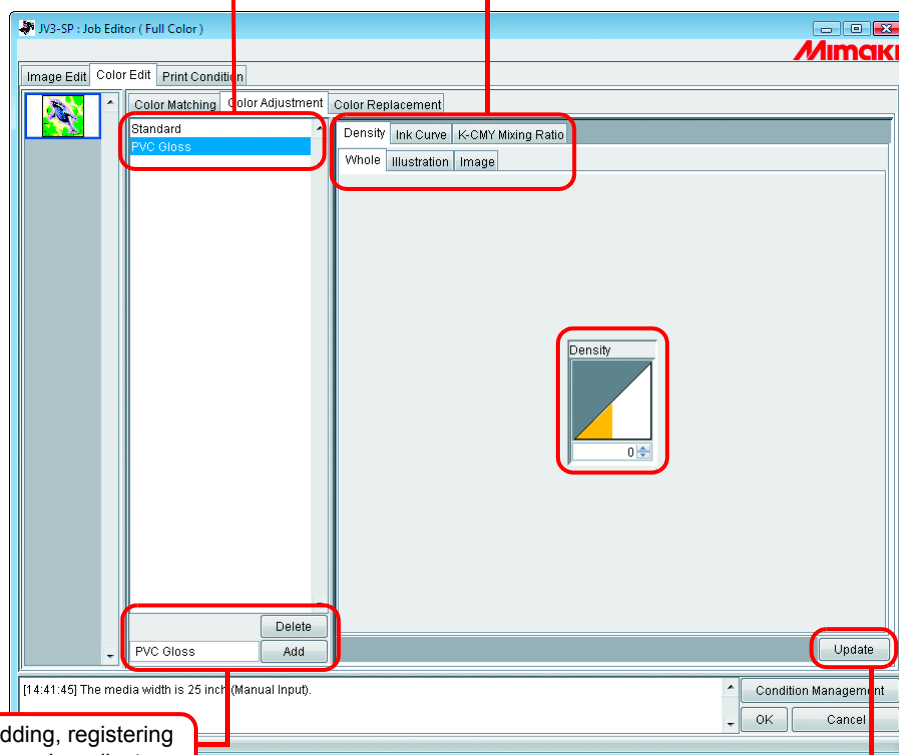

Used for adding, registering and deleting color adjustment set names for settings.
(P.76)

Applies the selected color adjustment set to the settings.

Preparing a Color Adjustment Set

Make a Color Adjustment Set for each Device Profile.


1 Click [Print Condition] page.

Click the Device Profile for which you would like to prepare a color adjustment set.

NOTE!

Make color adjustment set for each Device Profile.

To Print by Using Color Adjustment Set, select the Device Profile that specified with the Color Adjustment Set is Prepared.

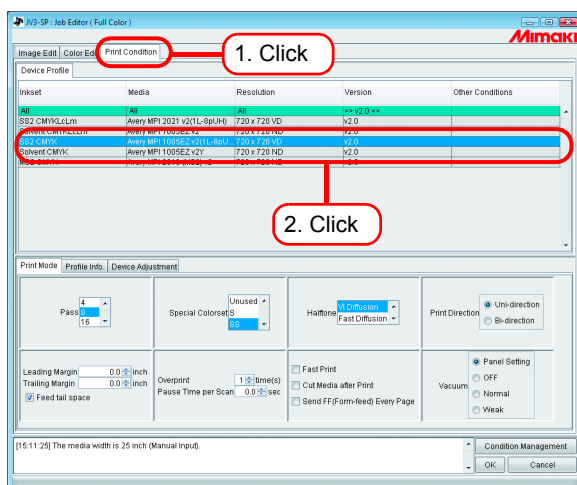

2 Click [Color Edit] page.

Click [Color Adjustment] page.

Enter the Color Adjustment Set name.


NOTE!

The following characters cannot be entered.

\ / : * ? " < > |

Click **Add**.

When there is already the same name, a confirmation message for overwrite is displayed.

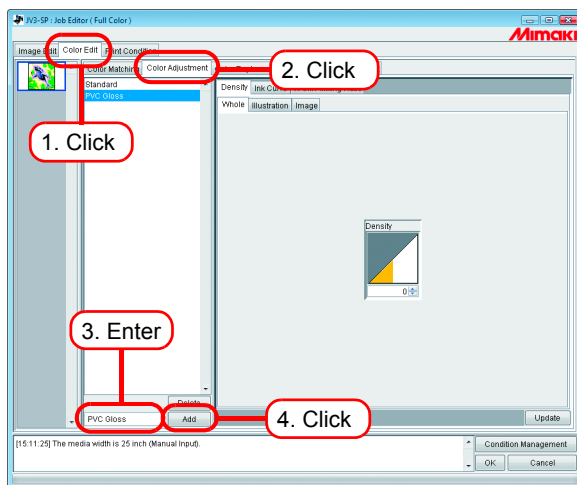



- When making new Color Adjustment Set, select “Standard” before click .
- When registering anew by editing registered color adjustment set, select and rename them to click .


Deletes Color Adjustment Sets

Click a Color Adjustment Set to set.

Click to delete the selected color adjustment set.


NOTE!

The “Standard” set can not delete.

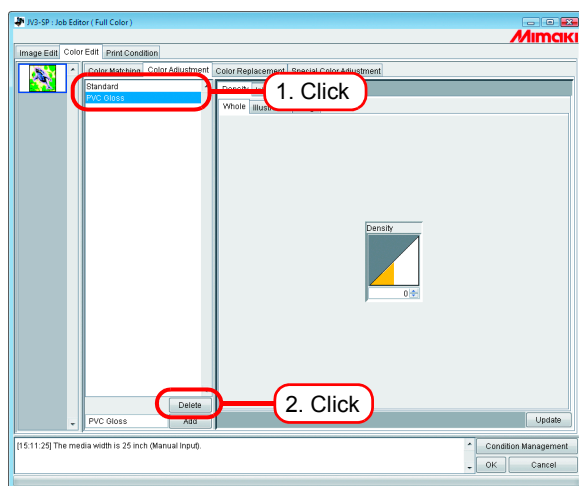

Updating Color Adjustment Sets


To update the color adjustment information, click or , and exit the “Job Editor”.

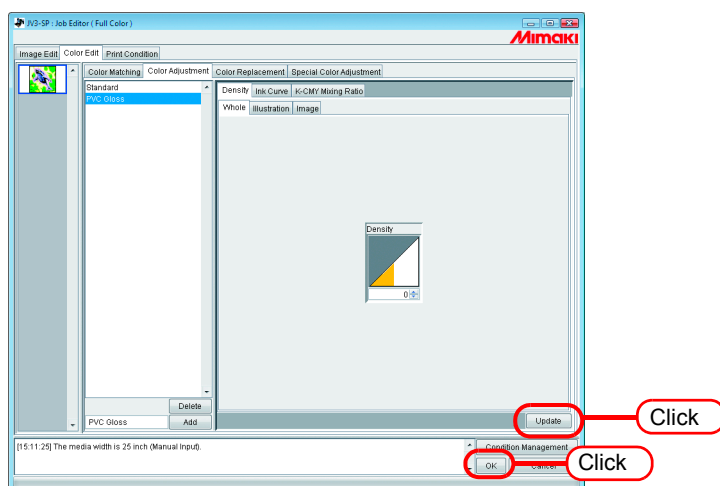


Adjusting Ink Density

Adjusting All Ink Densities

Adjust the maximum amount of each ink.

When click , the value changes every five. Also enter any value in a box. The value can be set in a range from minus 50 percent to 50 percent.

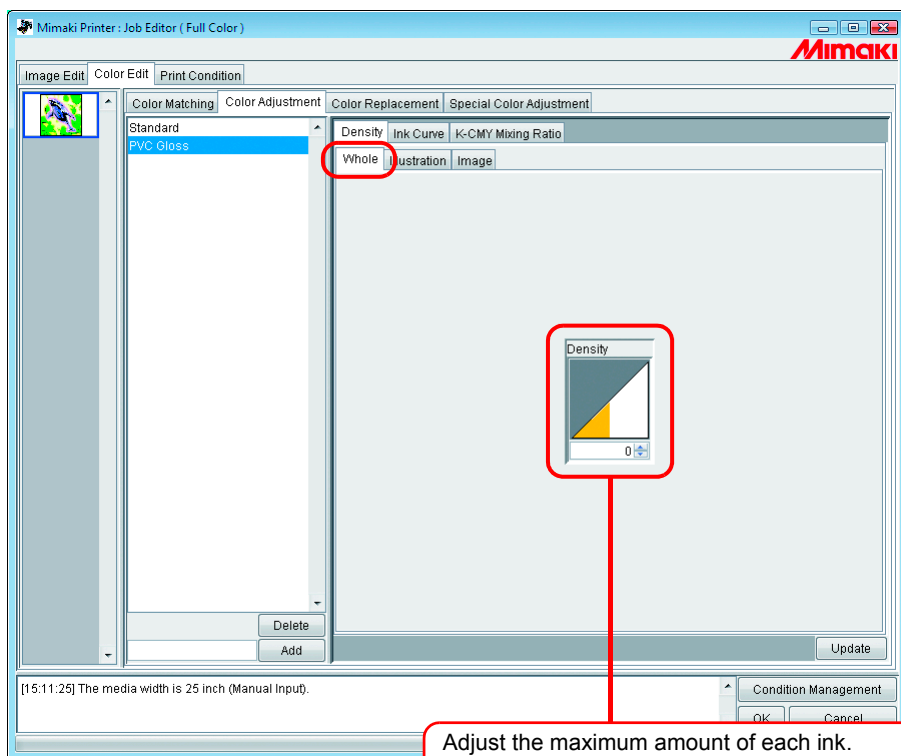

Adjust the maximum amount of each ink.
This setting is reflected on both illustration and image.
Printing with exceeding ink limit of each color is possible by setting the whole density to plus.

Adjusting the Ink Densities for Illustration Part and Image Part

Adjust the ink amount for each of the illustration part and image part in one file.

Adjust contrast of an image. Contrast becomes higher with larger value and lower with smaller value.

Black ink density settings Adjust the amount of black ink used.

1 to +50 Reduces the amount of cyan, magenta, and yellow, and increases the amount of black ink. For more detailed settings, use K-CMY adjustment.

0 The function is disabled, and K-CMY adjustment is enabled.

-50 to -1 Reduces the amount of black ink used.

When a value other than 0% is specified, the K-CMY mixing ratio setting is disabled.

Adjust the amount of ink in Highlight, Middle, or Shadow. To set in detail, adjust ink curve. (P.80)

To Adjust Color in Detail (Ink Curve)

If output is not obtained in your desired colors even by changing ink densities, adjust the ink curve of each kind of ink.

The method of adjusting ink curves differs according to the version of the device profile.

Version 1.0 and 2.0 device profiles

Ink Limit : Adjust ink density to all the colors.


Gray Balance : Adjust ink density using only four colors of Black, Cyan, Magenta, and Yellow.
Gray Balance is only available in Version 2.0.

NOTE!


“Gray balance” is valid only when you have selected gray balance on the “Color matching” menu (P.73).

The setting of Ink curve is reflected over the whole area without distinction between the image part and illustration part.

“Ink Limit” Curve

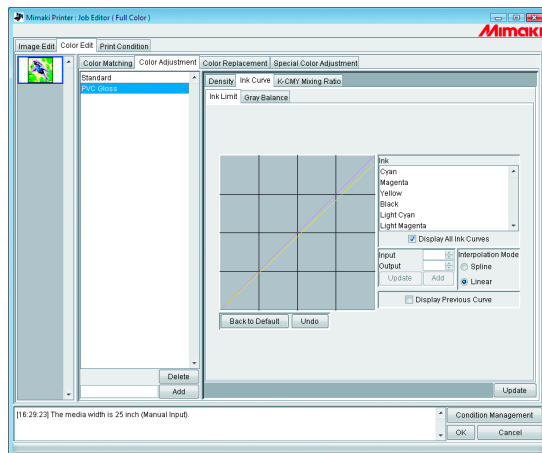

“Gray Balance” Curve

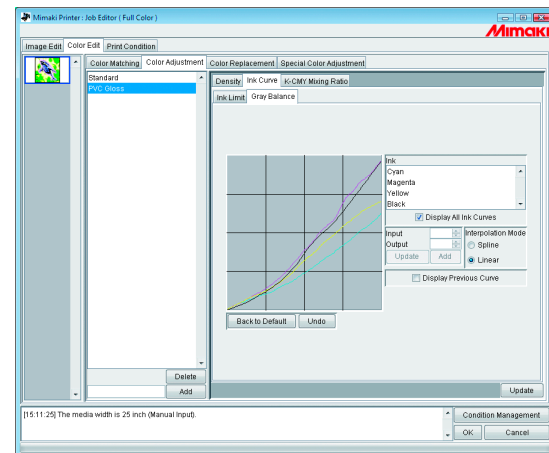


Refer to “Adjusting Ink Curves” (P.82) for how to adjust ink curves.

Version 3.0 device profile


Ink limit: Sets the maximum density of the ink.

Linearization: Adjusts the density of ink in all areas.

“Ink Limit” Curve

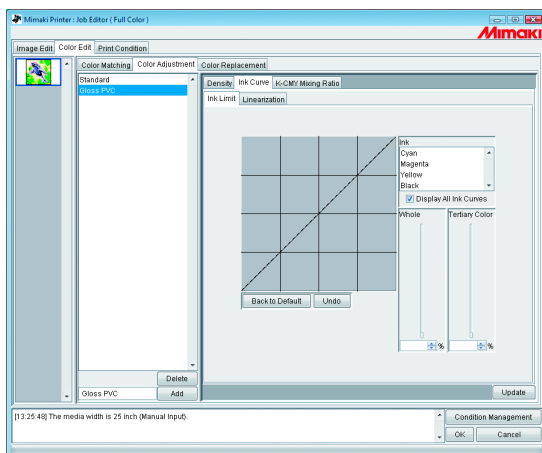

“Linearization” Curve

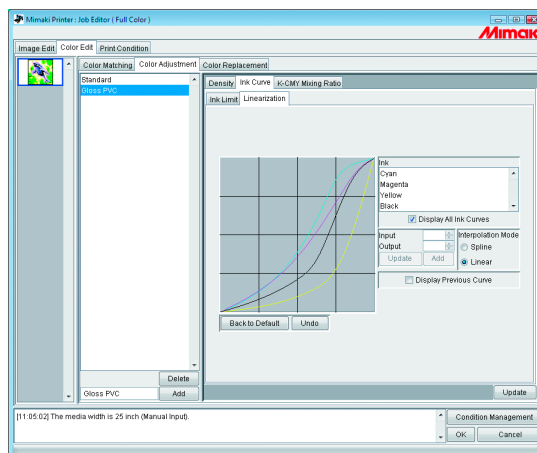

Adjust the “Ink Limit” curve using the slider.

“Whole” adjusts the density for all ink colors.

“Tertiary Color” adjusts the density of each ink color when 3 or more colors are mixed.

The density of “Whole” is the upper limit value for Tertiary Color.

When the upper limit value for Ink Limit of “Whole” is changed, the upper limit value for Ink Limit of “Tertiary Color” also changes.

Refer to “Adjusting Ink Curves” (P.82) for how to adjust linearization curve.


Adjusting Ink Curves

Display the ink curve of ink selected from the “Ink” list.



The horizontal-axis indicates the ink density before adjustment (input tone) and the vertical-axis indicates the ink density after adjustment (output tone). Both axes indicate in a range from 0 to 255.

The output tone is set to 0 if below 0 and to 255 if over 255.




Click an adjusting point to make a control point. Up to 30 points can be added. A selected control point changes from a white rectangle into an ink color one.

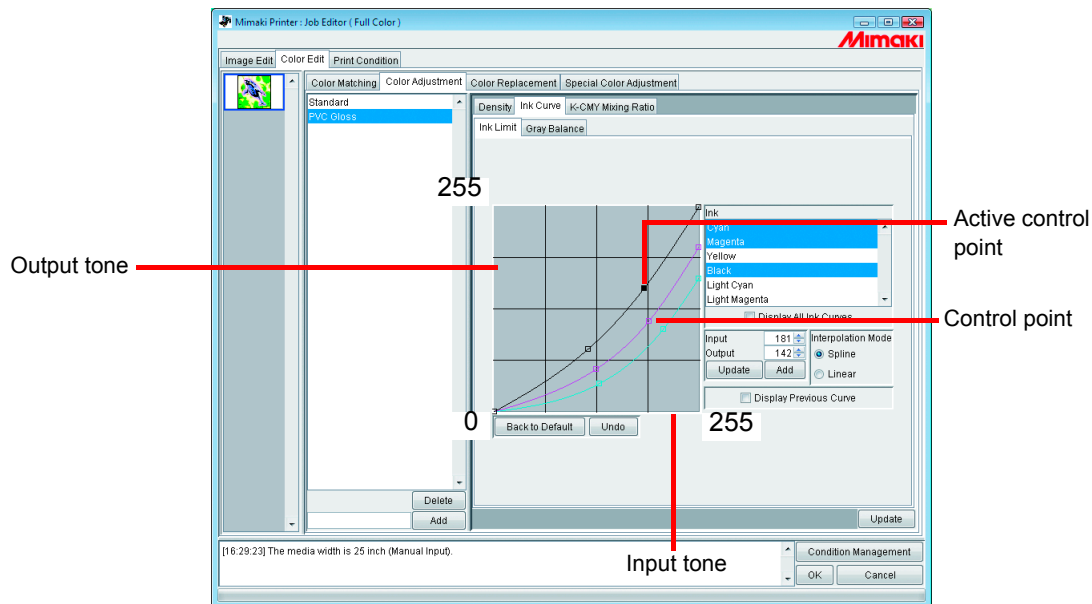

When changing several ink curves at a time, drag a point where the ink curves of several colors are intersecting or adjoining each other. Or push Arrow key to move that control point.

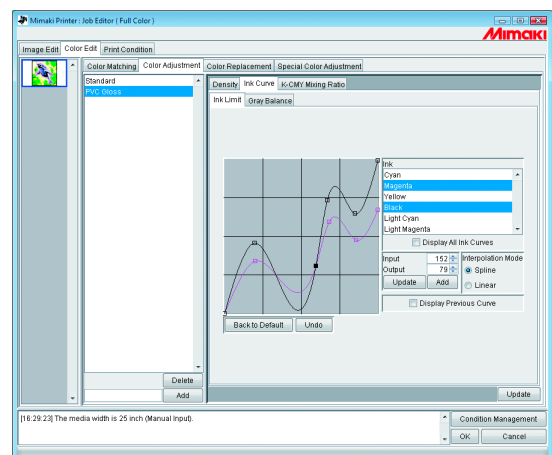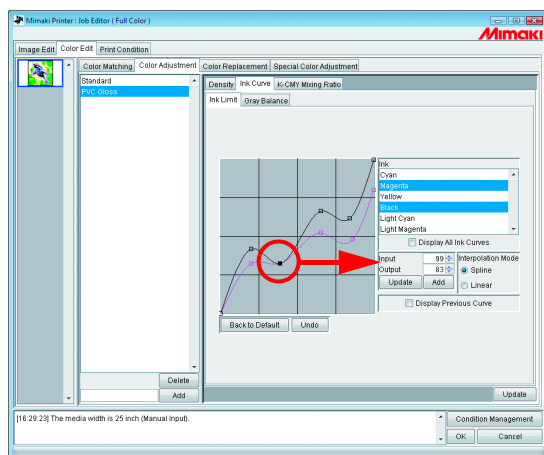

To delete a control point, drag the point to outside the adjacent one. Or push **Delete** key or **Back Space** key.

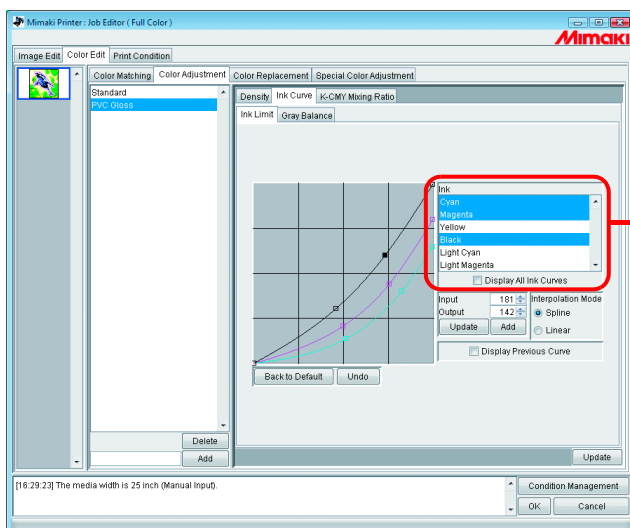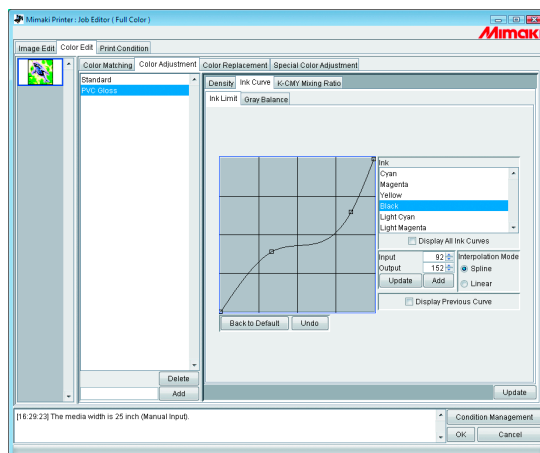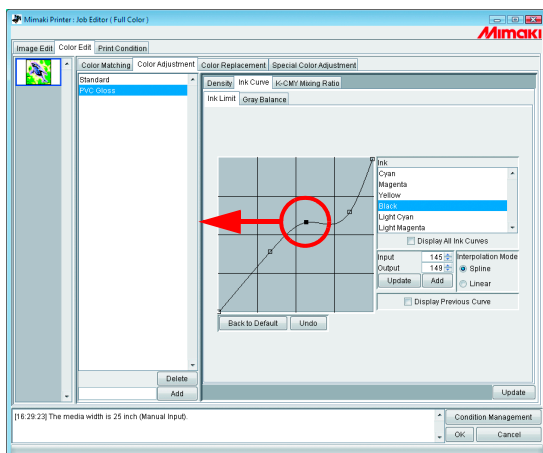

Select ink list:
Display the inks selected from the ink set in the "Print Condition" window.
To select more than one ink, click ink names while pressing the **Ctrl** key.
To deselect, click the ink name again.

Display All Ink Curves:
Display all ink curves.
When unchecked, only the ink curve selected from the "Ink" list is displayed.

Interpolation Method:
Select Spline or Linear.
When click an ink name on the "Ink" list, display the current Interpolation Mode.
When select several inks and their Interpolation Mode are different, display the Interpolation Mode of the first ink on the ink list that has been selected.


Display Previous Curve:
Display the previous ink curve with a broken line.
If **Update** is clicked, the previous ink curve is disappear.

Enter the value of input tone and output tone to adjust control point. When add the control point, enter the value, and click **Add**.
When altering the control point position, first select the control point, and then input the value. For update the control point position, click **Update** after inputting the value.
Note that the changed control point can not be set across the adjacent one.

Update button:
Register the updated ink curve.

Undo button:
Restore the ink curve selected before **Update** button executed.

Back to Default button:
Read in default ink limit value of the ink selected on "Ink" list.
When setting a smaller value than the limit, the color becomes thin and a larger value, the ink becomes thick therefore hard to dry.

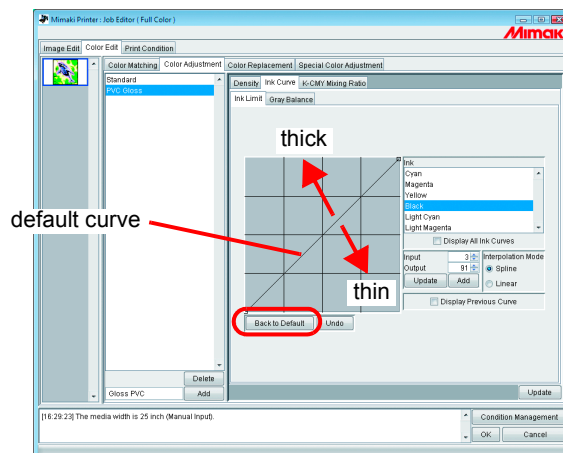

Set an Ink Curve by Keyboard

Adjustment of an ink curve is available either by keyboards or mouse.


Use the following keys.

- **[Z]** key: Select control points to the left way.
- **[X]** key: Select control points to the right way.
- **Delete** key / **Back Space** key: Delete control points.
- **←, →, ↑, ↓** Key: Move control points in the direction of Arrow key.

When adjust control points where several ink curves are intersecting or adjoining at a time, adjusting by keyboard is more convenient.


In this section, explains how to adjust several ink curves.

1 Select the adjustment ink On “Ink” list.

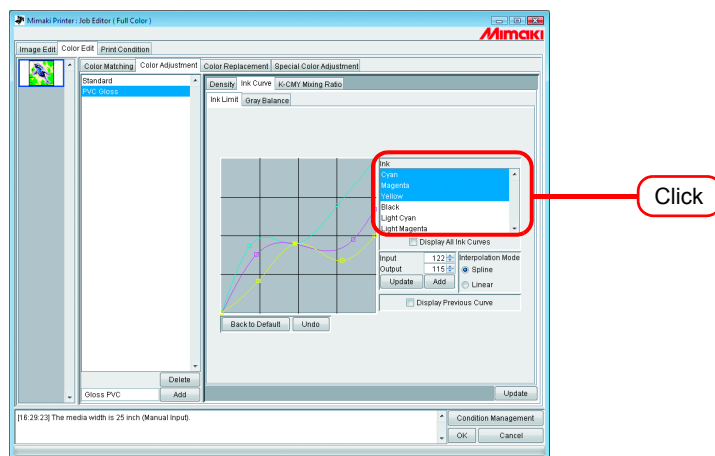

2 Click the ink curve area with the mouse.

The ink curve area being surrounded by blue frame, the ink curve area is selected.

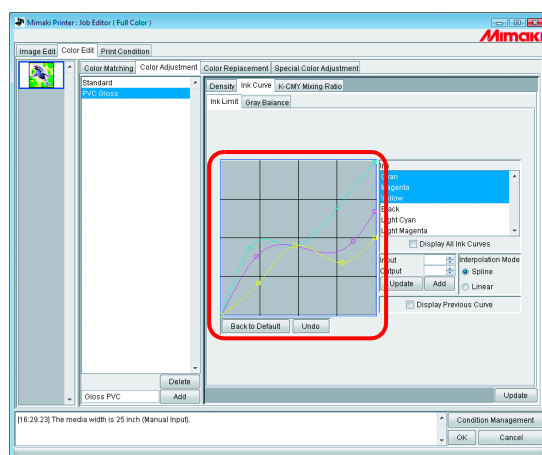


3 Select control points by [Z] or [X] key.

NOTE!

When the control points can not be selected even by pushing keys, check the following.


- Is the ink curve area selected?

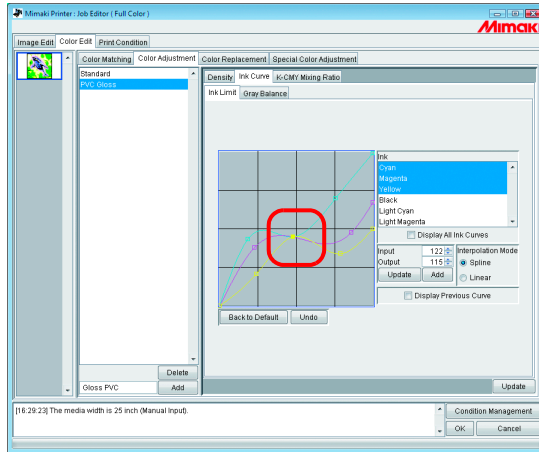

4 Adjust a control point by Arrow key.


Click [Update] .

Update the ink curve.

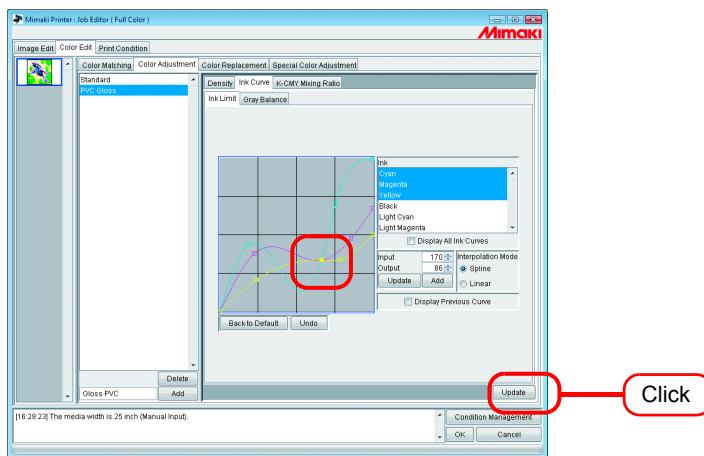

5 Click OK .

The color adjustment set is updated, and the “Job Editor” is closed.

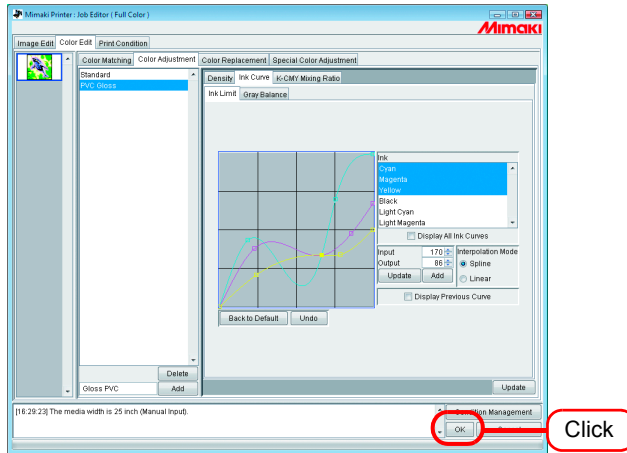


K-CMY Mixing Ratio

Replaces parts expressed as black with cyan, magenta, and yellow (mixed black) with single color black.

Adjustment is possible for each illustration and image.

It is effective in the following cases.

- 1) For reducing the ink density in RGB images
- 2) For printing RGB images with sharp black

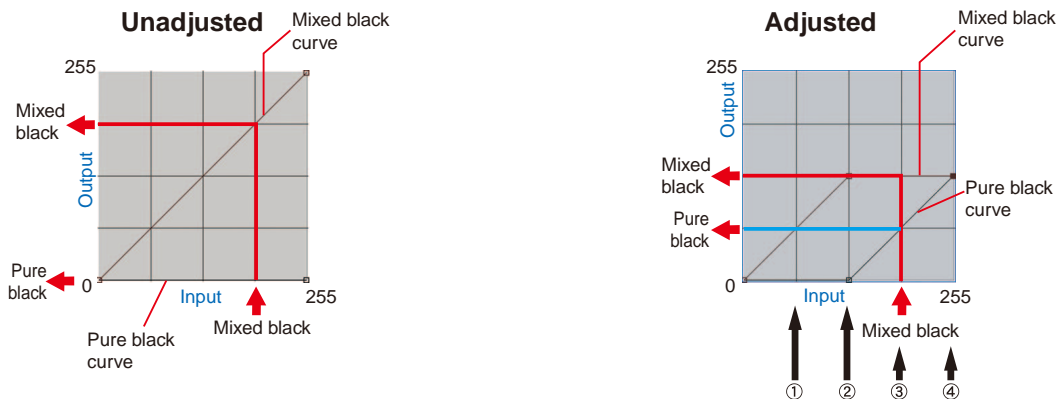


The adjustment method is the same as for ink curve.

Example:


Value of adjusted curve													
Input color				Mixed black		Single color black		Output color				Explanation	
A			B										
C	M	Y	K	Input	Output	Input	Output	C	M	Y	K		
(1)	64	85	64	5	64	64	64	0	64	85	64		5
(2)	128	150	160	5	128	128	128	0	128	150	160	5	No change
(3)	200	192	200	5	192	128	192	64	136	128	136	69	A part of CMY changes into K.
(4)	255	255	255	5	255	128	255	128	128	128	128	133	A part of CMY changes into K.

Calculation of (3)


$$\begin{aligned}
 C &= 200 - 192 + 128 = 136 \\
 M &= 192 - 192 + 128 = 128 \\
 Y &= 200 - 192 + 128 = 136 \\
 K &= 5 + 64 = 69
 \end{aligned}$$

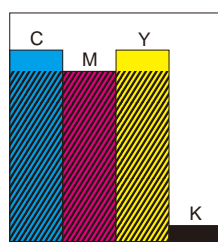

The shaded area is mixed black of CMY.

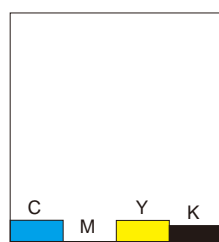


The input of mixed black is removed from CMY.

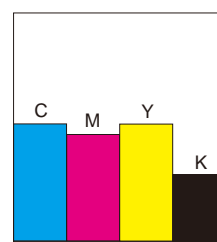

The output of mixed black is added to CMY.
The output of single color black is added to K.

Color Replacement

This section explains the function (Color Replacement) for setting the ink color and ink density used for a specific color in the original image.

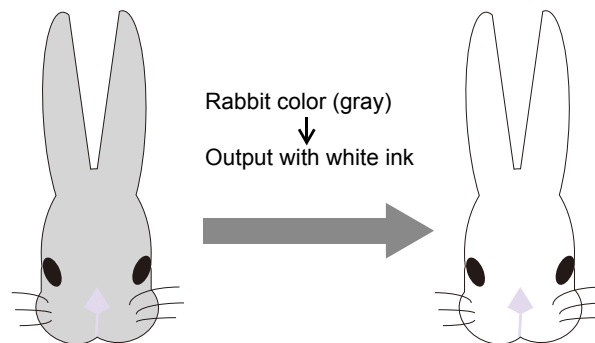


Color Replacement method

There are four methods for Color Replacement.

Color Replacement of spot color names

In Adobe Illustrator and the like, special colors called “spot color” or “special colors” can be created.


Spot colors must be named. In Raster Link ProIII, an ink color and density is specified for these names.

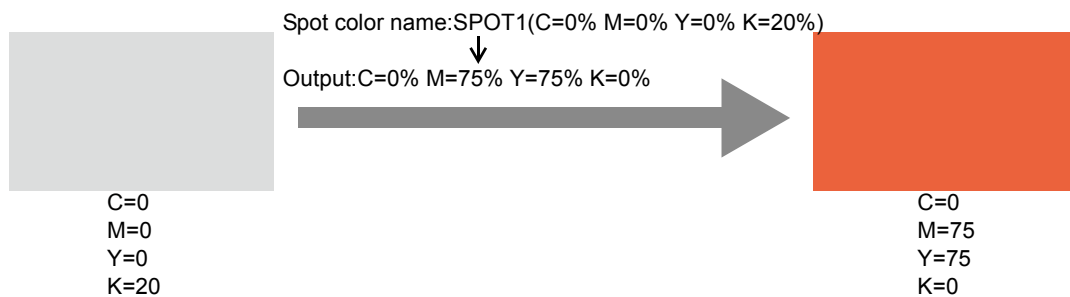

Color Replacement of CMYK

It is possible to replace the CMYK colors of vector objects with other ink colors.


When the same color is being used for a different vector object in the image, that color will also be changed.

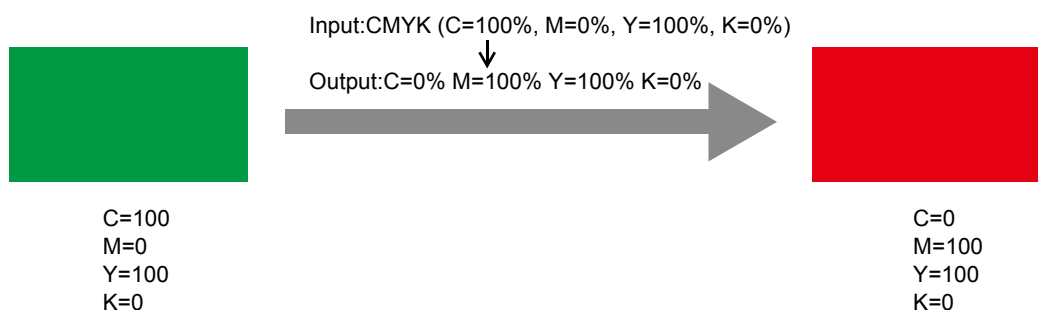

Color Replacement of gradations

Specify the ink color and density of gradations.

For example, replace color from a cyan gradation to a white gradation, with specified density.

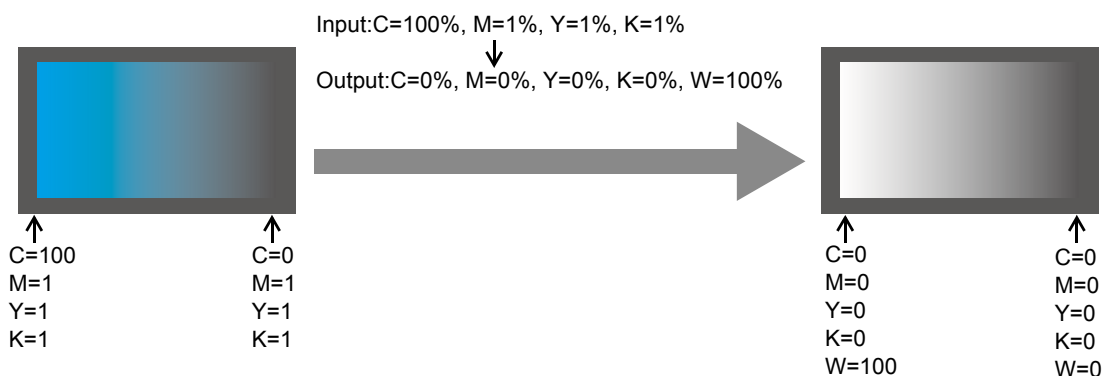

Replace any one color of CMYK with multiple inks


Print an image in CMYK color mode with specified inks for any one color of CMYK.

Multiple inks can be selected. However, light ink cannot be specified.

In this mode color replacement of raster images is also possible.

This is used when printing the entire image with only specific inks.

For example, this is convenient when printing monotone images with white ink.

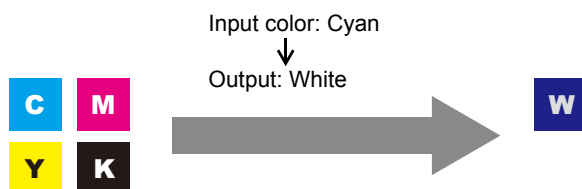

Combination with Auto Special Color Composition

Color Replacement and Auto Special Color Composition can be specified at the same time.

Auto Special Color Composition: Special Color Print Area is “Valid Pixel”

When specifying Special Color for Color Replacement, the density of Color Replacement has a priority.

e.g.)

Color Replacement	: Spot color = Special Color 20%	} Print is performed with Spot color = Special Color 20%.
Auto Special Color Composition	: Special color ink density = 50%	

Auto Special Color Composition: Special Color Print Area is “Whole Image”

When specifying Special Color for Color Replacement, the density of Auto Special Color Composition is added to Special color ink density of Color Replacement.

e.g.)

Color Replacement	: Spot color = Special Color 20%	} Print is performed with Spot color = Special Color 70%.
Auto Special Color Composition	: Special color ink density = 50%	

Auto Special Color Composition: Special Color Ink Density is 0%

Special color is not generated by Auto Special Color Composition. The special color that Color Replacement is performed to will white Layer Print for JV3-SP series.

NOTE!

On the “Special Color Adjust” menu, when the special color ink limit curve is adjusted on the “Ink Limit” menu, the value specified for special color density may not be achieved. (👉 P.128)

Method of creating Color Replacement images

Conditions for Images where Color Replacement is Possible

There are some conditions for images to replace the color.

Only CMYK color mode images are supported.

	Image format	Convertible part
Color Replacement of spot colors	EPS, PS, PDF	Vector objects only
Color Replacement of CMYK colors	EPS, PS, PDF	Vector objects only
Color Replacement of gradations	EPS, PS, PDF	Vector objects only
Replacement of one of CMYK color with multiple inks	EPS, PS, PDF, TIFF	Vector and raster


Creating spot colors


The following explains how to create and use spot colors in Adobe Illustrator 10.


For details, refer to the Adobe Illustrator manual.

1 Open the image to edit in Adobe Illustrator.

If the swatches window is not open, select [Window] - [Show Swatches] to display the swatches window.

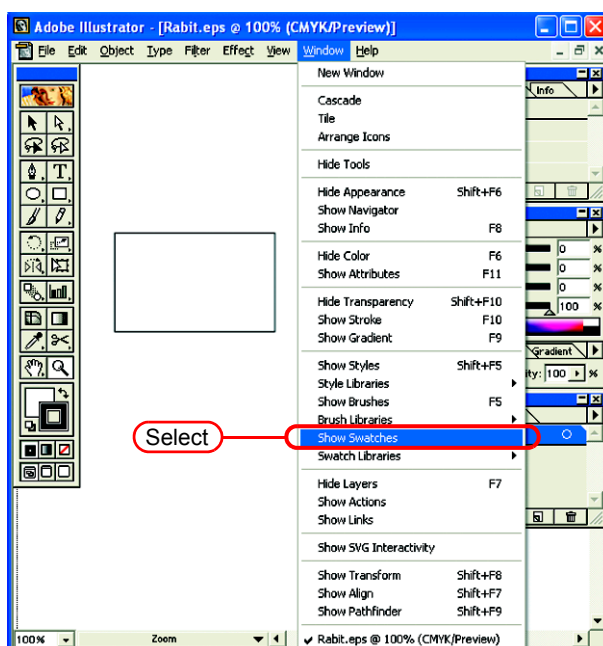


- 2 Click the  and select “New Swatch” from the menu.
A new swatch window appears.

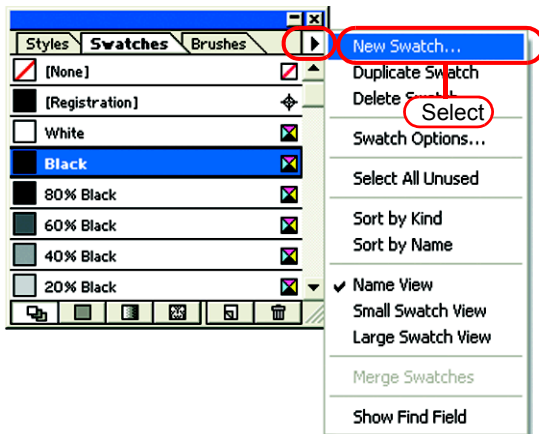

- 3 Enter a name in “Swatch Name”.
In “Color Type”, select “Spot Color”.
In Adobe Illustrator CS, select “Special”.

In “Color Mode”, select “CMYK” and specify the display color.
Click .

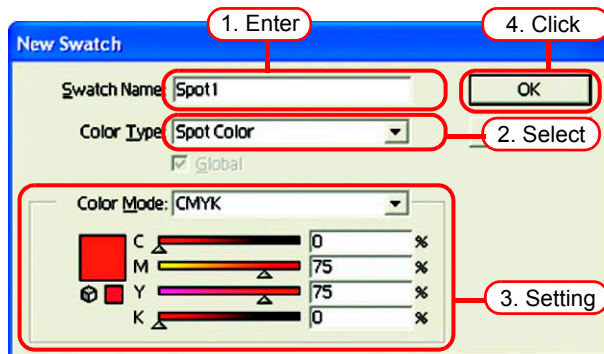


4 A new swatch is created.

To use it, select the created swatch in the Swatches window.



In the Color window, the swatch is displayed with [Swatch Name] and [T].

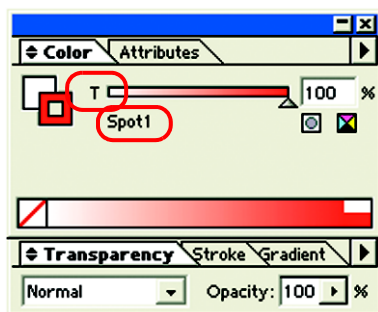


Color Replacement screen

There are three types of Color Replacement screen, “Spot Color”, “Gradation” and “Mono Color”.

Spot Color

Sets color replacement of spot colors and CMYK colors.

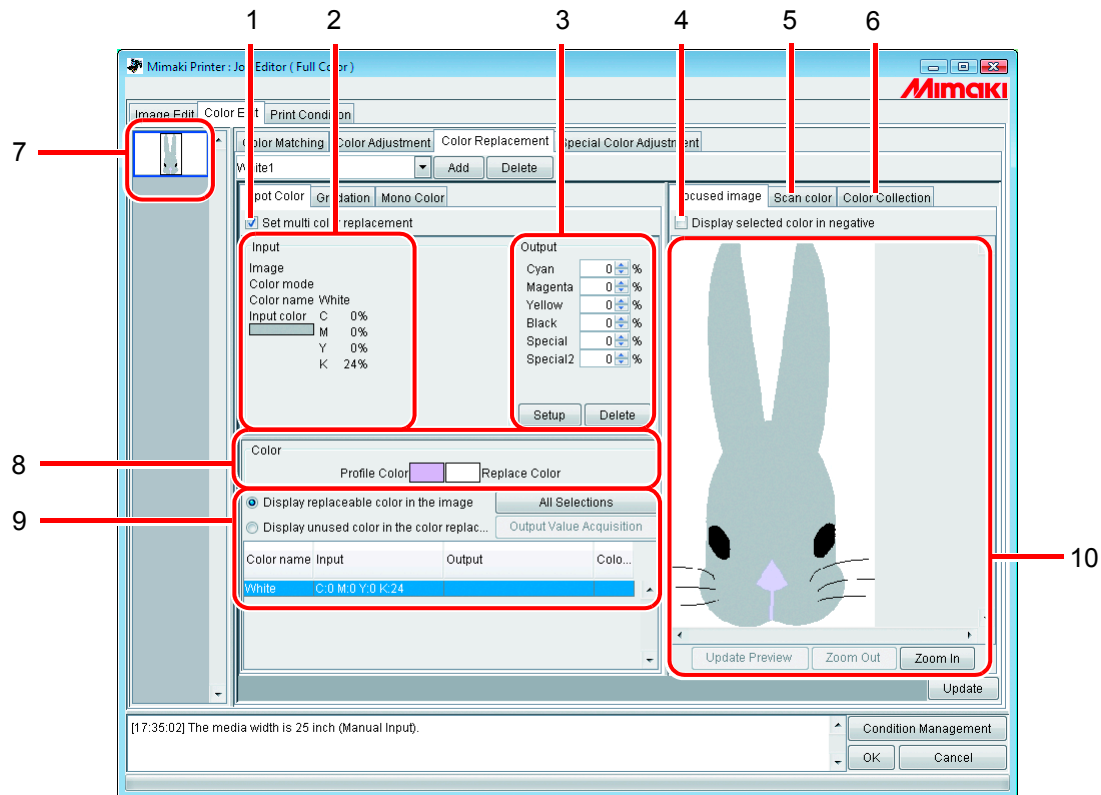

1. Set multi color replacement

Allows multi Color Replacement. It is possible to perform Color Replacement of spot colors and gradations.

2. Input information

When the cursor is placed on the preview screen, the color information at the cursor position appears.

Alternatively, the information selected from the Color Replacement information list is displayed.

3. Output information

Set the density after replacement for the colors currently shown in “Input” information.

4. Display selected color in negative

When this is checked, colors that are currently editable appear flashing in the preview.

5. Scan color

Scan some of the colors of an original document such as a comprehensive layout, and bring the colors closer.

6. Color Collection

Color Collection shows DIC color information.

7. Thumbnail

Jobs for editing appear as thumbnail images. When editing multiple jobs at the same time, or multipage jobs, selecting an image in the thumbnail list displays it in the preview screen. The replacement information list also displays the information of the selected image.

8. Color

Color shows a profile color (before color replacement) displayed in the current input information and its replacement color (to be generated after color replacement.)

9. Replacement information list

Shows ink information for an input color before replacement and its output color after replacement.

Use the set of radio buttons above the list to select information to be displayed.


Obtains ink information after replacement (output) from the color collection.

10. Preview screen

Shows a preview of the image. When the cursor is rolled over the preview, the pixel information appears in “Input” information. Clicking the pixel allows the color of the pixel to be edited.

Gradation

Sets Color Replacement of the gradation.

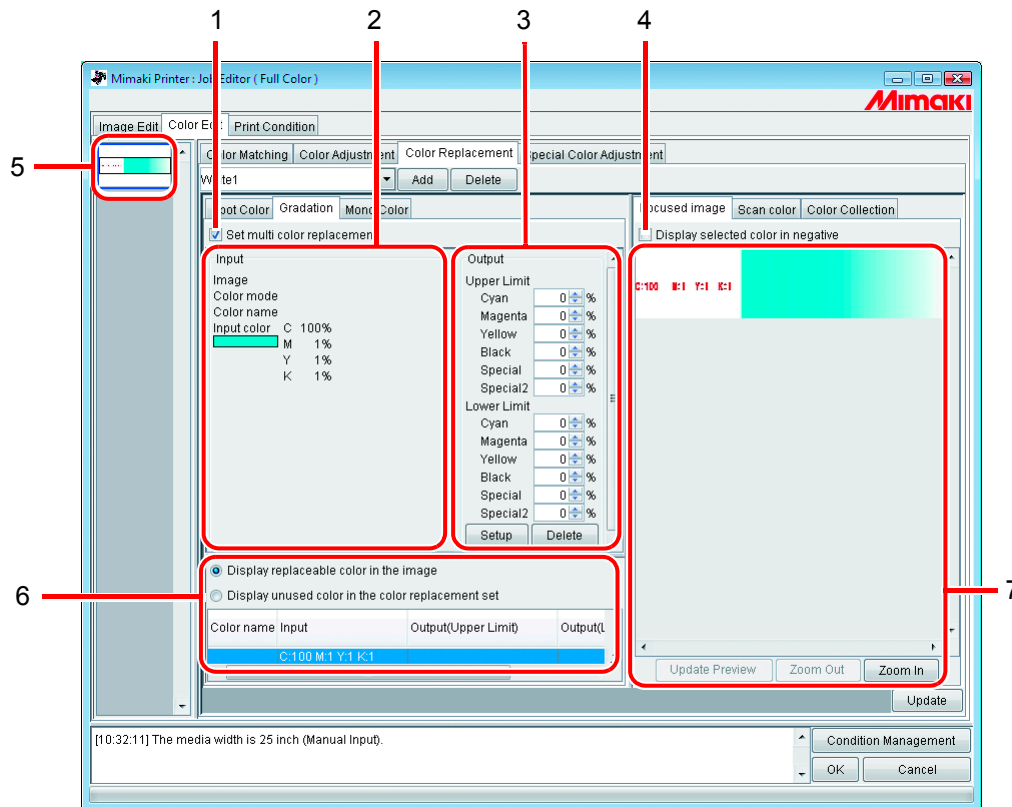

1. Set multi color replacement

Allows multi Color Replacement. It is possible to perform Color Replacement of spot colors and gradations.

2. Input information

When the cursor is placed on the preview screen, the color information at the cursor position appears.

Alternatively, the information selected from the Color Replacement information list is displayed.

3. Output information

Set the density after replacement for the colors currently shown in “Input” information.

The darkest part and lightest part of a gradation respectively can be specified.

4. Display selected color in negative

When this is checked, colors that are currently editable appear flashing in the preview.

5. Thumbnail

Jobs for editing appear as thumbnail images. When editing multiple jobs at the same time, or multiple jobs, selecting an image in the thumbnail list displays it in the preview screen. The replacement information list also displays the information of the selected image.

6. Replacement information list


Shows the ink information for the color before replacement and after replacement. The information to display is selected with the radio buttons at the top of the list.

7. Preview screen

Shows a preview of the image. When the cursor is rolled over the preview, the pixel information appears in “Input” information.

Mono Color

Sets Color Replacement of a single color.

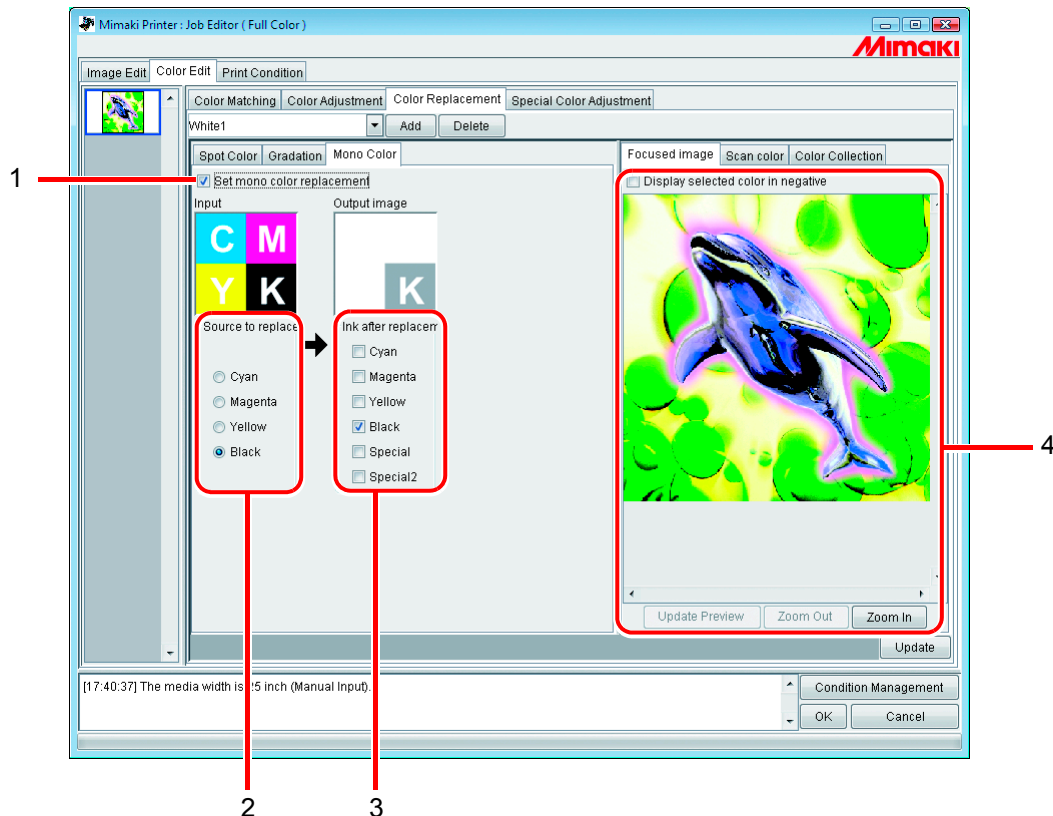

1. Set mono color replacement

Allows Mono Color Replacement.

When this is checked, any one color of the input CMYK is allocated to the specified ink.

Light ink cannot be specified.

2. Source to replacement

Specifies the color in the image to replace.


3. Ink after replacement


Specifies the color of the ink to use after replacement.

4. Preview screen

Shows a preview of the image.


Create a Color Replacement set

- 1 Click the [Print Condition] menu.
Select a Device Profile for which to create a Color Replacement set.
If the model selected has a special color slot, select “Special Colorset”.
Refer to  P.132 for “Special Colorset”.

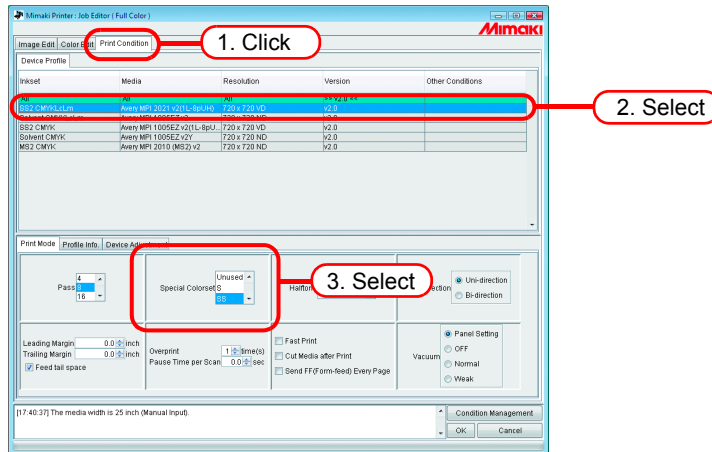

Color Replacement set are created for each combination of Device Profile and Special Colorset.


- 2 Click the [Color Edit] menu.
Click the [Color Replacement] menu.

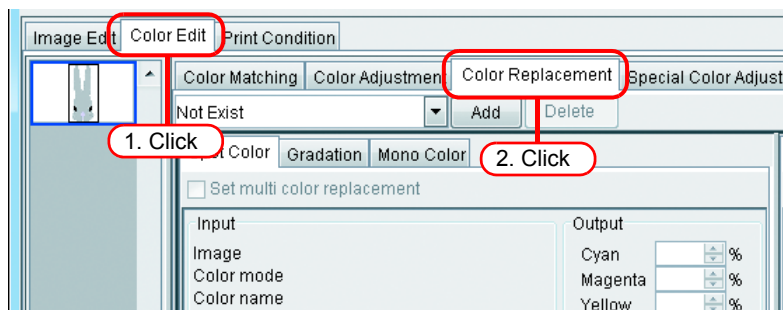


3 Enter a name in the Color Replacement set name field.

NOTE! The following characters cannot be entered.
\\ : * ? " < > |

Click .

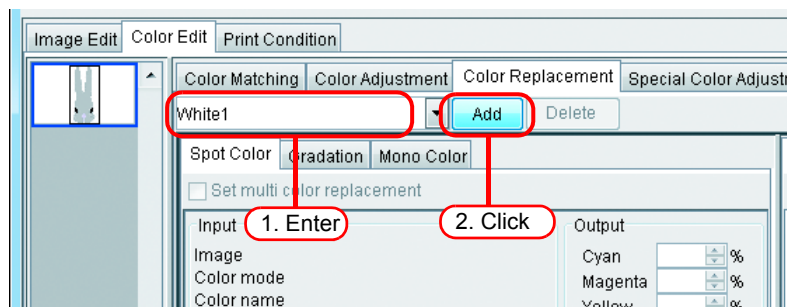


If a Color Replacement set with the same name already exists, an overwrite confirmation message is displayed.

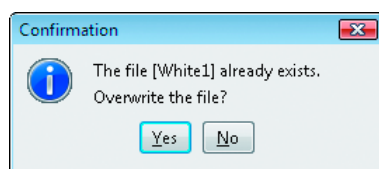


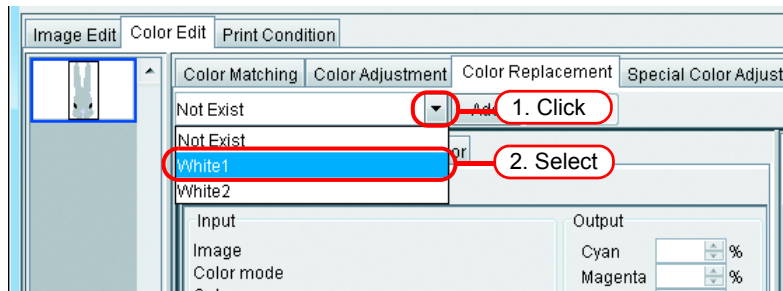
Update a Color Replacement Set

To update the Replacement information, click or , and finish the “Job Editor”.

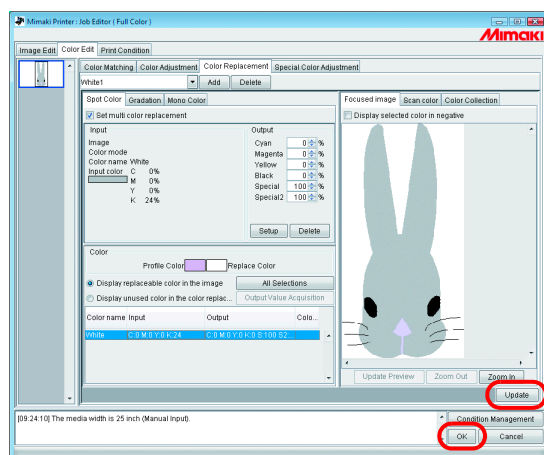


Select a Color Replacement set

Click  in the Color Replacement set name input box at the top of the [Color Replacement] menu, and display and select from the list.




Delete Color Replacement set


- 1 Open the “Job Editor” and open the [Color Replacement] menu.
Select a Color Replacement set to delete.

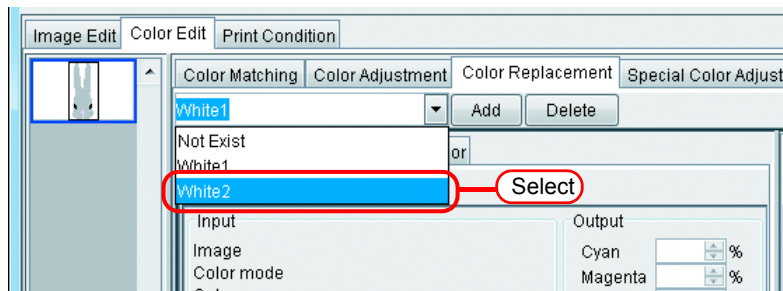

- 2 Click  .

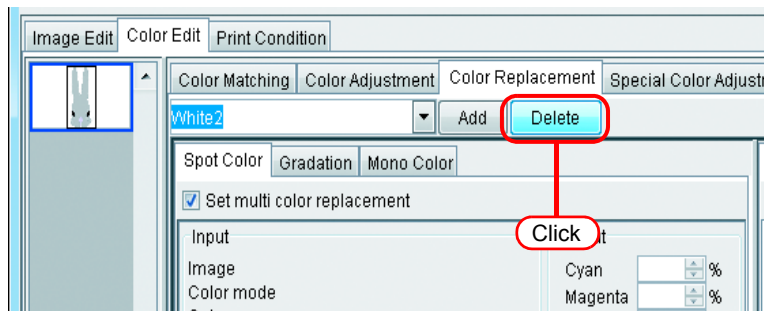

- 3 The set is deleted.

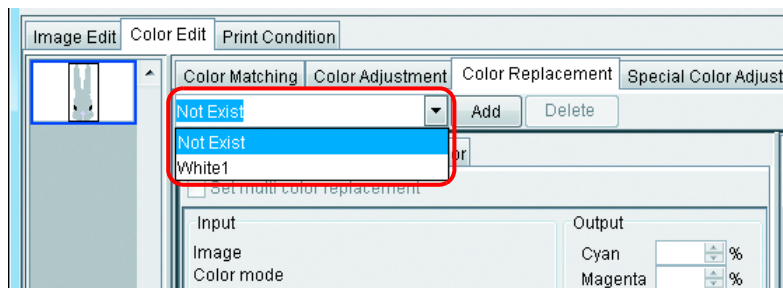

Replacing spot colors and CMYK colors

This section explains the spot colors and CMYK colors replacement method.

NOTE!

- When replacing CMYK colors, if the same color is being used for a different vector object, that color will also be changed.
- Replacement of colors where Adobe Illustrator filter effects such as drop shadows, transparency, and gradations are applied may not be performed correctly.

Specify the original color for replacement

There are two methods to specify this.

When the original color for replacement is specified, the replacement information setting screen can be edited.

To replace multiple colors, check “Set multi color replacement”.

(1) Select from the Replacement information list

Select the color name from the list for replacement.

Spot colors and registered CMYK colors are displayed.


(2) Select from the Preview screen

Place the cursor over the Preview screen, and click the location for Color Replacement.

Since CMYK colors are not initially displayed in the Replacement information list, select this method.

NOTE!

When a original color is specified, until it is unselected, the color information specified by the cursor on the preview cannot be displayed on the input screen.

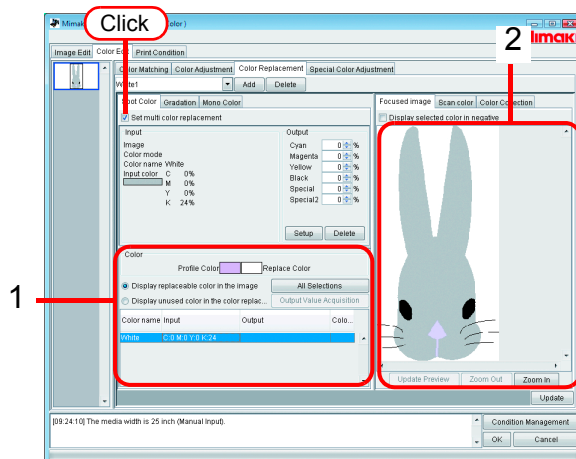

Unselect the original color for replacement

There are two methods for unselecting the color.

 
(1) When the Replacement information list is selected, press the Esc key.

(2) Place the cursor over the preview, and right click.

There are two ways to create ink information after replacement: entering an ink density manually, and retrieving it from a color collection.

- 1 Select the original color to replacement.

Click .




- For version 3.0 device profiles containing highly accurate color replacement information:

- For version 3.0 device profiles containing highly accurate color replacement information:
Colors closer to DIC colors can be reproduced.
- For other device profiles:
Accurate colors may not be reproduced.

Retrieving from a color collection1

1 Select a color to be replaced.


On the Color Collection screen, open a color collection folder for color replacement.

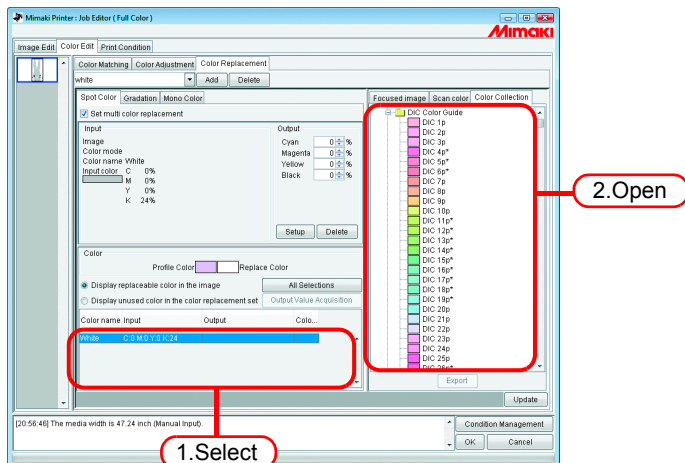

2 Select a color patch.

Click **Setup**.

The color replacement information is set.

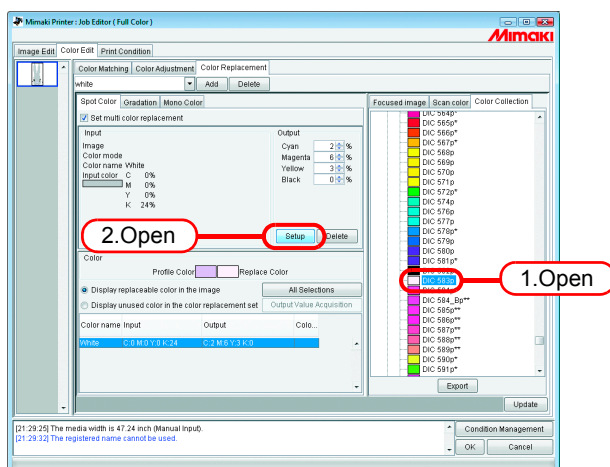


Obtain ink information from color collection2

If the original color to be replaced is a DIC spot color registered in a color collection, the appropriate output value can be automatically retrieved from the color collection without needing to set an individual output value.

1 Click **All Selections**.


You can select an individual color to be replaced from the list.

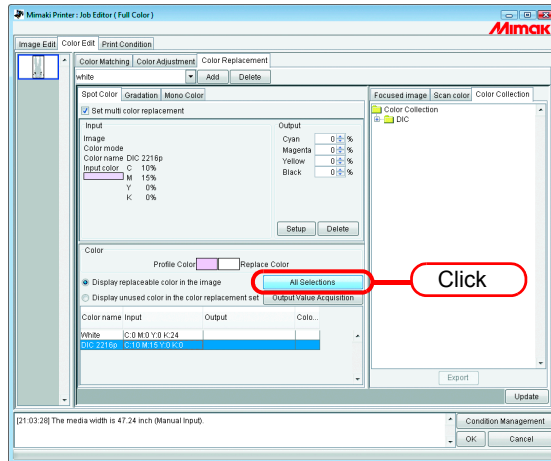

2 Click **Output Value Acquisition**.

If the original color to be replaced is a DIC color, and its replacement color is beyond the color reproducibility of the printer, the color difference between the original color and its replacement color is shown.

-> This indicates that the DIC color cannot be reproduced.

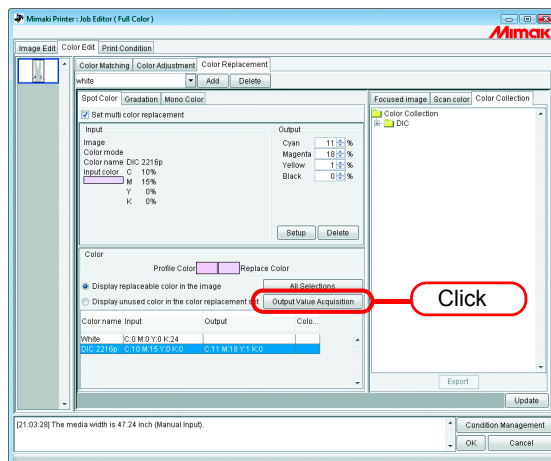

The color replacement information is set.

Retrieving from a color collection3

Colors other than DIC colors in an image can also be retrieved from a color collection and registered into the current color replacement definition file.


This eliminates the need for setting individual color replacement values by using the color replacement definition file if DIC colors in the image match spot colors registered in the file.

- 1 On the Color Collection screen, open a color collection folder for color replacement.


Select a color patch.

Press the **Ctrl** key + **A** key on your keyboard. (You can select more than one patch, pressing the **Ctrl** key.)

Click **Export**.

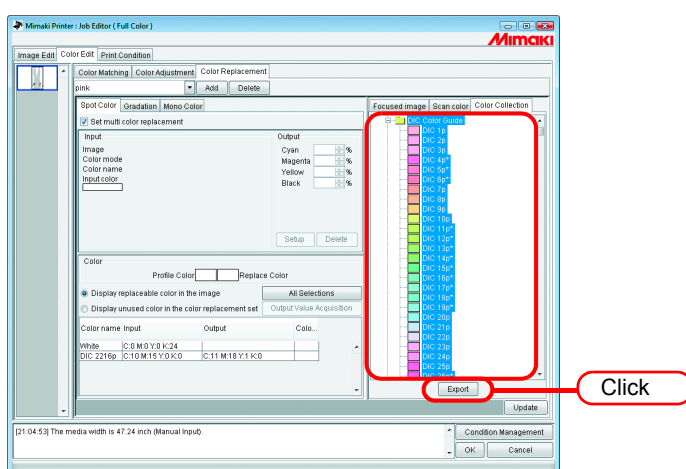

- 2 Select "Display unused color in the color replacement set".
The output values for the spot colors not in the image are set.

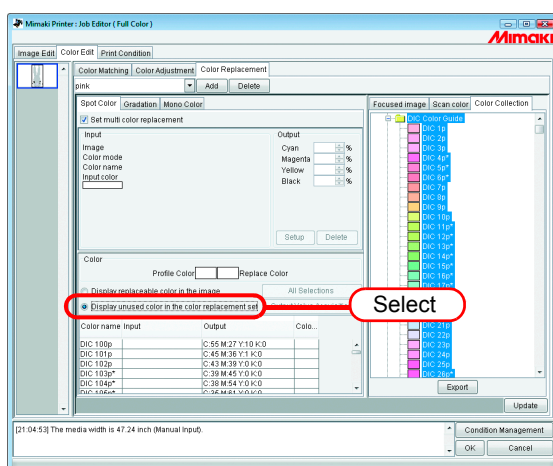


Delete ink information after replacement

Select the replacement information to detect the ink information after replacement.

Click **Delete** on the “Output” information screen.

The Color Replacement information is deleted.

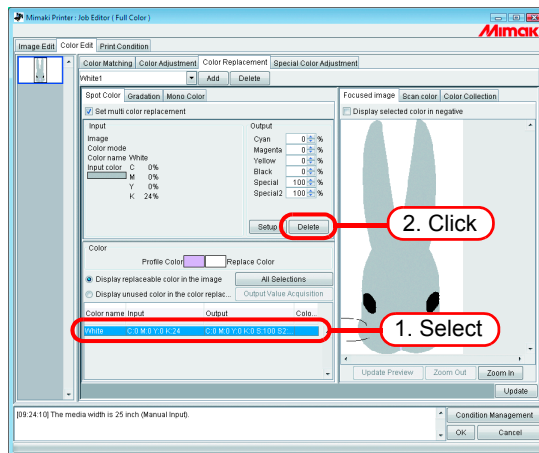


Switch displays

Replacement information list

The Replacement information list can be changed as follows.


Display replaceable color in the image

Shows only the colors used in the image.

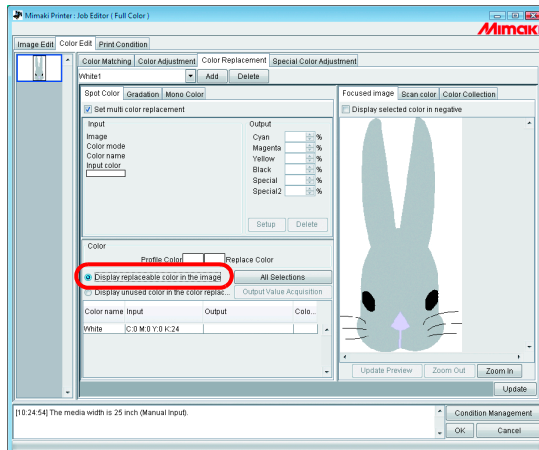

Display unused color in the color replacement set

Shows the Color Replacement information in the Color Replacement set, with colors that are not used in the image.

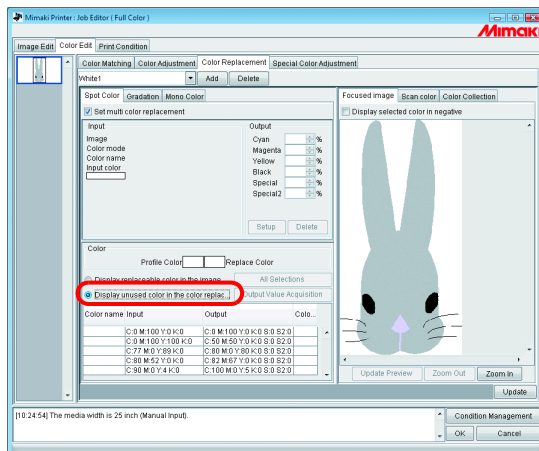


Preview

When [Display selected color in negative] is checked, colors that are currently editable appear flashing in the preview.

NOTE !

- When [Display selected color in negative] is checked, even when colors for editing are changed, colors that were previously selected appear flashing. To change the locations that appear flashing for reselected colors, click **Update Preview**. Alternatively, check [Display selected color in negative] again.
- When gradation replacement is displayed in negative, only high density parts appear in negative.

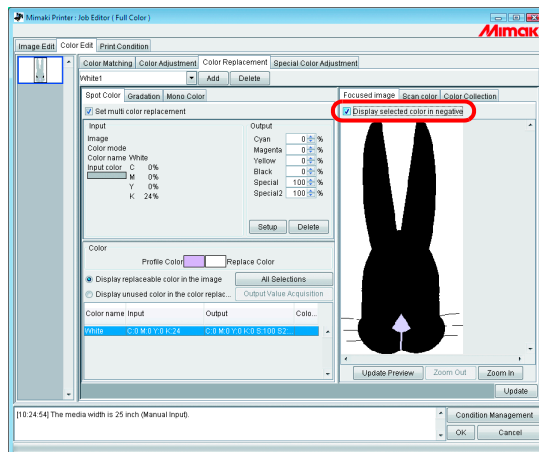

Replacing gradations

Restrictions on gradations for which Color Replacement is possible


The following restrictions apply to gradations for which Color Replacement is possible.


- Only vector objects created with Illustrator
- Color Replacement cannot be performed for vector objects created with Illustrator that are treated as follows
 - Objects with “split, extension” applied
 - Rasterized objects
- Color Replacement cannot be performed for gradations created with Photoshop and for rasterized gradations.

The colors of gradations that can be specified are as follows.


The combination of maximum density and minimum density of gradations are as follows.

Maximum density (%)				Minimum density (%)			
C	M	Y	K	C	M	Y	K
100	1	1	1	0	1	1	1
1	100	1	1	1	0	1	1
1	1	100	1	1	1	0	1
1	1	1	100	1	1	1	0





Maximum density



Minimum density


NOTE!

- If a midpoint is introduced between the maximum density and minimum density of a gradation by “Gradation slider” and the color is changed, color replacement cannot be performed.
- Color Replacement of gradations that include a lot of clipping paths may not be performed correctly.
- Color Replacement of gradations that use Illustrator filter effects such as Drop Shadows and Transparency may not be performed correctly.
- Illustrations with the same colors as those included in the gradation are also replaced.
Example:
Maximum density C = 100, M = 1, Y = 1, K = 1
Minimum density C = 0, M = 1, Y = 1, K = 1
If a C = 50, M = 1, Y = 1, K = 1 illustration is included in the data, it will be color replaced.
- Even if the setting of replacing gradations seems can be performed on the “Gradation” screen, the replacement will not be performed depending on the data. Check if the replacement will be performed or not, by reduced print in advance without fail.
- When the Illustrator setting “Compatible Gradient and Gradient Mesh Printing” is checked, gradation replacement cannot be set.


Gradation replacement settings

The settings for Color Replacement of gradations are similar to those for spot colors.


- 1 Click the maximum density part of the gradation on the preview screen.
The selected color in the Replacement information list is displayed in negative.
Specify the maximum density area of the ink density after replacement.

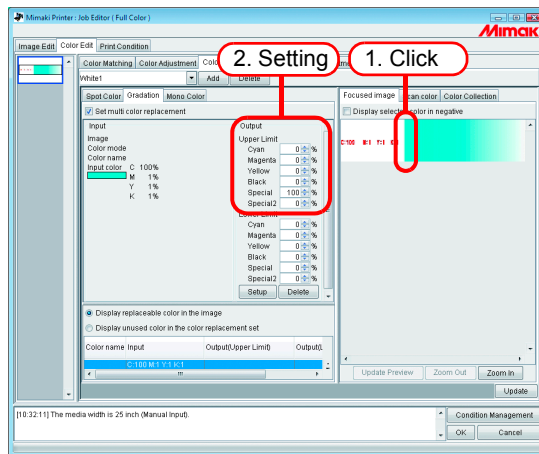

- 2 Next, specify the minimum density area of the ink density after replacement.
Click **Setup**.

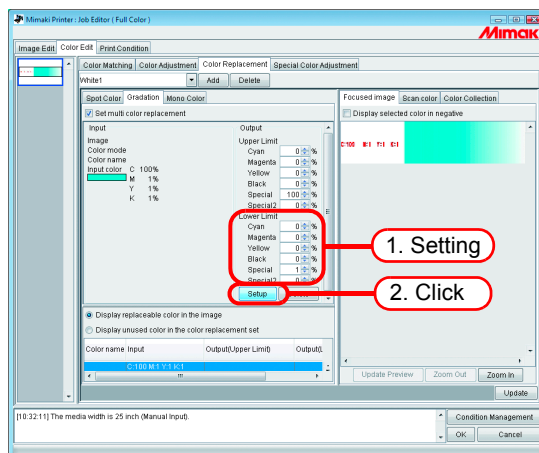

- 3 The Color Replacement information is set.

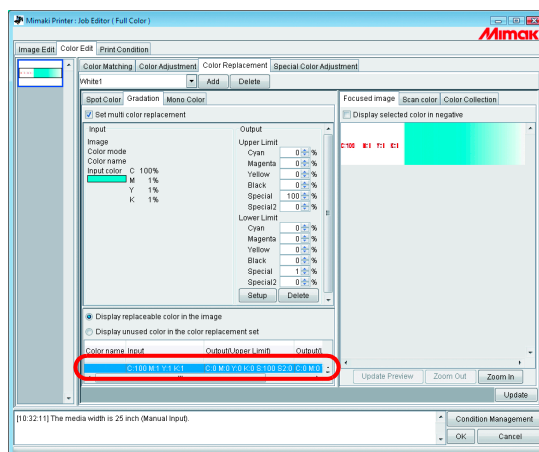


Mono Color Replacement

Open the “Job Editor” and display the [Color Edit] - [Color Replacement] - [Mono Color] menu.

Check “Set mono color replacement”.

From “Source to replacement”, select a color to replace.

From “Ink after replacement”, select ink colors to use for output.

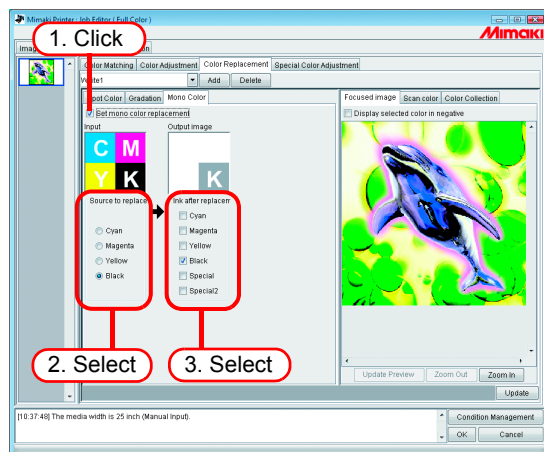

Acquire the color from original document (Scan color)


The scanner can be used for specifying the color after Color Replacement. For the types of scanner that can be used, refer to “The color acquisition function and supported scanners” (P.176).

NOTE!

- With this function, color matching with the color read by the scanner is not guaranteed. Be sure to check the colors with a small sample.
- Depending on the original document, the scanner may not be able to scan the colors correctly.
- The range of colors that can be brought closer differs according to the print conditions (Device Profile).
- Color Replacement with a spot colors and CMYK colors only is possible.

Outline of color acquisition

The procedure for color acquisition is as follows.

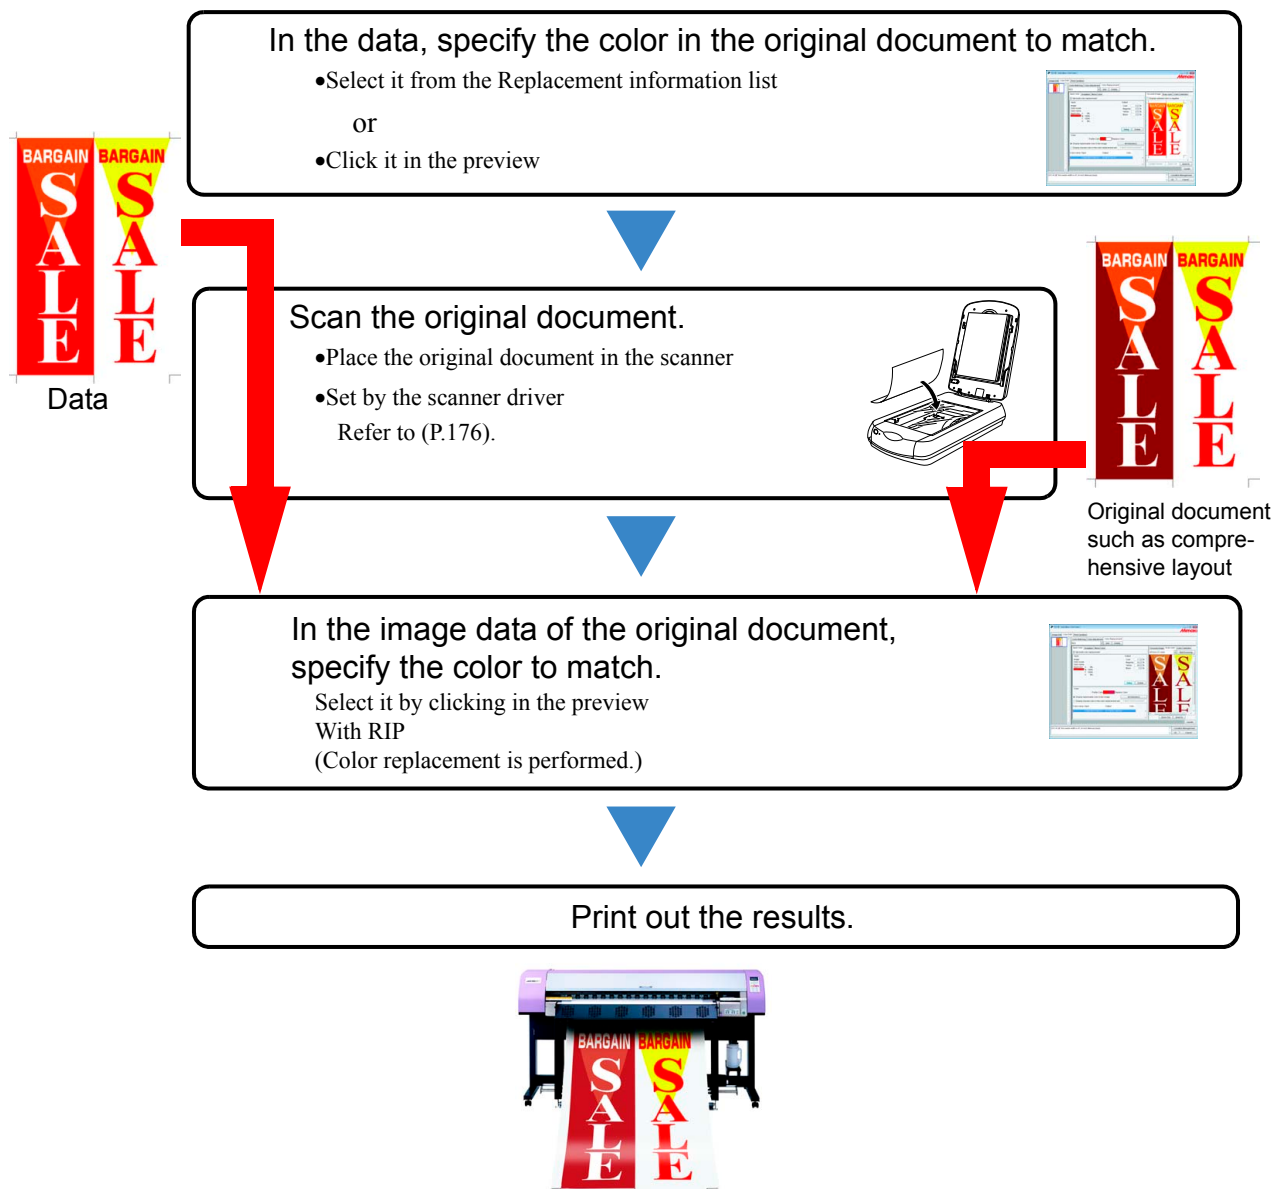

Color acquisition

Color acquisition operates as one function of Spot Color Replacement. With Spot Color Replacement, a value for ink density after the source to replacement is replaced is specified, but with this function, instead of the ink density setting after replacement, the color information scanned with the scanner is set.

1 Click the [Spot Color] menu.


Select the color to be replace.

1. Select from the Replacement information list

Select the color name or CMYK value from the list for Color Replacement.

2. Select from the Preview screen

Place the cursor over the Preview screen, and click the location for Color Replacement.

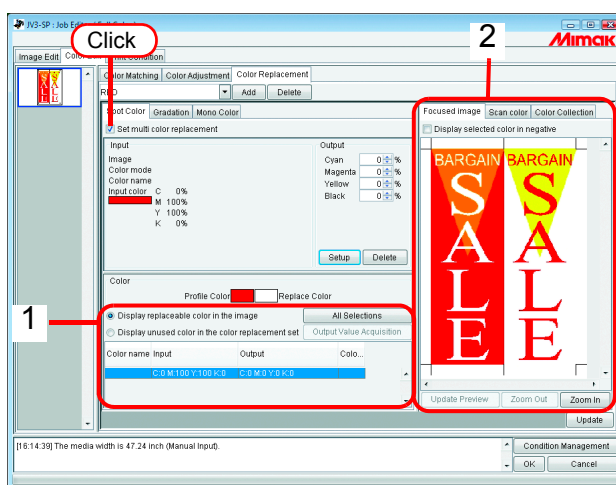


2 Click the [Scan color] menu.

Select the type of scanner to use.

Check that the scanner is turned on, and click **Start scanning**.

The scanner driver screen (TWAIN screen) appears.

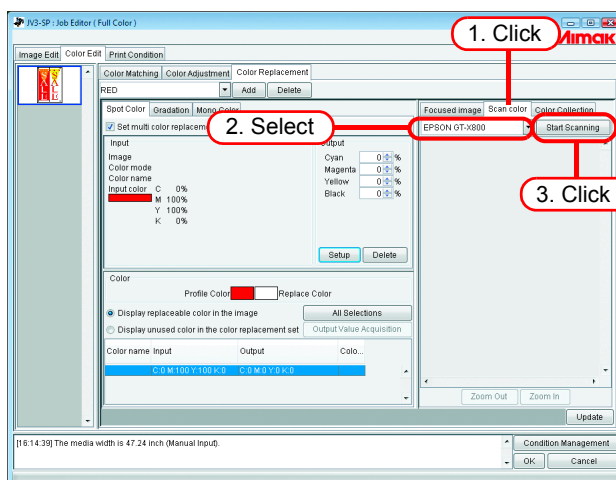


3 Place the original document in the scanner and scan it.

Set the scanner driver according to “Scanner driver settings” (P.177), and scan the original document.

NOTE!

- When scanning the image data, it is necessary to use the settings for color acquisition set in the scanner driver screen (TWAIN screen). The settings differ according to the type of scanner. For details, refer to “The color acquisition function and supported scanners” (P.176).
- Refer to the manual packaged with the scanner for how to operate the scanner.

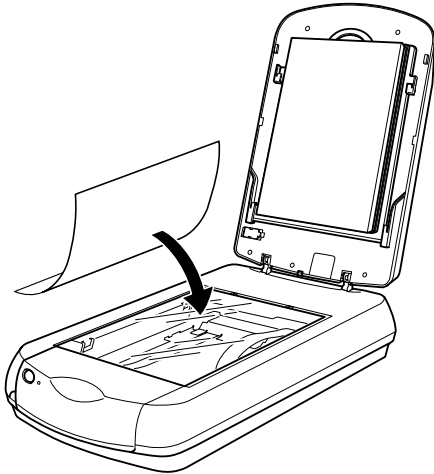


4 The scanned image data appears in the preview.

Use **Zoom In** and **Zoom Out** to display the color area to acquire, and click the color.


The value where clicked is set as the ink density after replacement.



Click a part that the color is uniform.

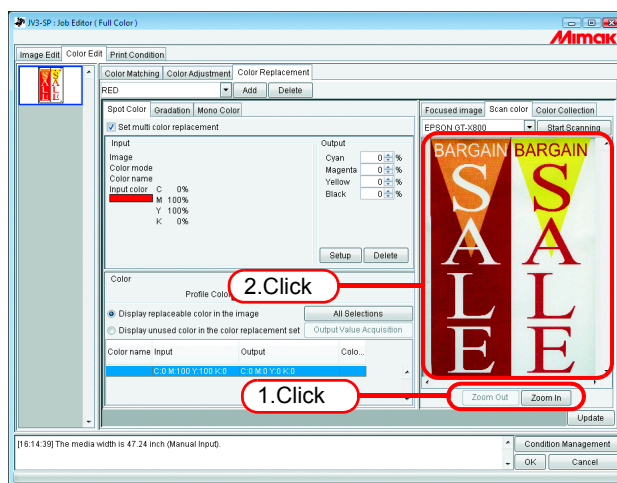

5 Click **Setup** to set the color acquisition information.

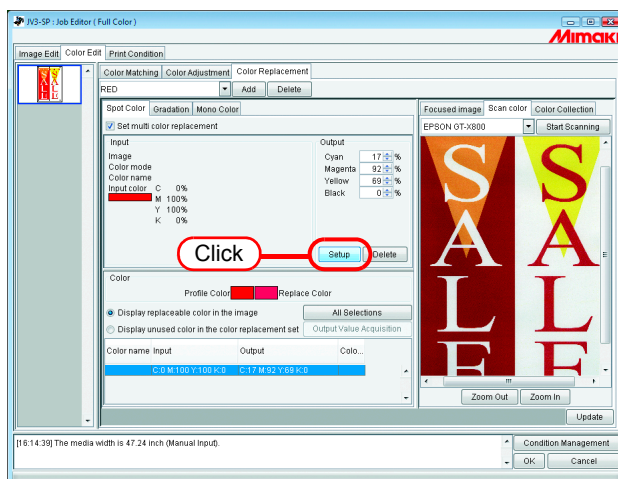


Special Color adjustment

To perform special color adjustment, [Print Condition] - [Print Mode] - [Special Colorset] must be selected.


Emphasize highlights with special color

Image highlights can be emphasized with special color. This is effective for making highlights stand out when printing on transparent film.


Adjustment is possible for both CMYK images and RGB images.

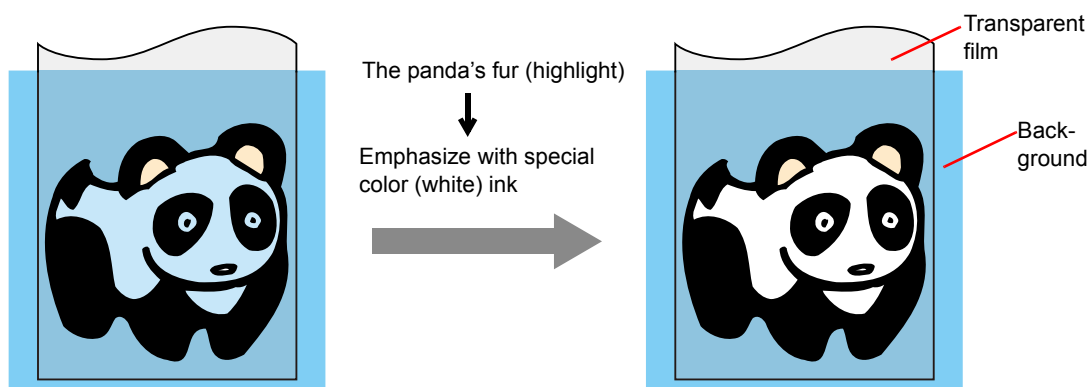

- 1 Click the “Color Edit” menu.
Click the “Special Color Adjustment” menu.

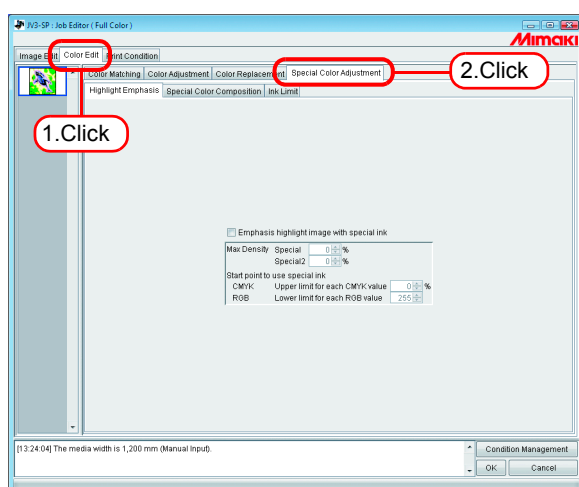


2 Check “Emphasis highlight image with special ink”.

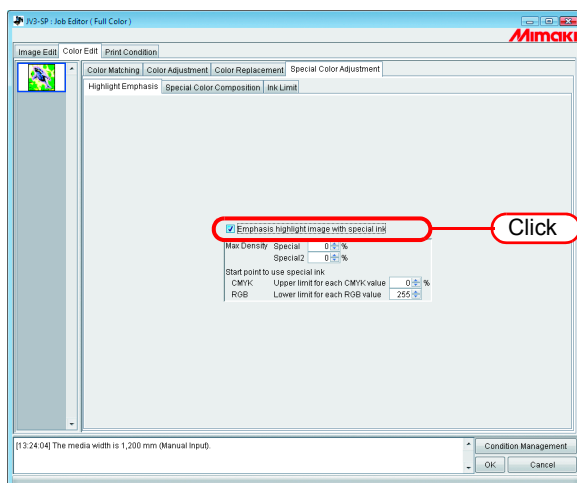


3 Specify a maximum print density of special ink between 0 and 100% for printing the highlight.

For maximum density, only the number of special color inks selected in the special colorset can be specified.

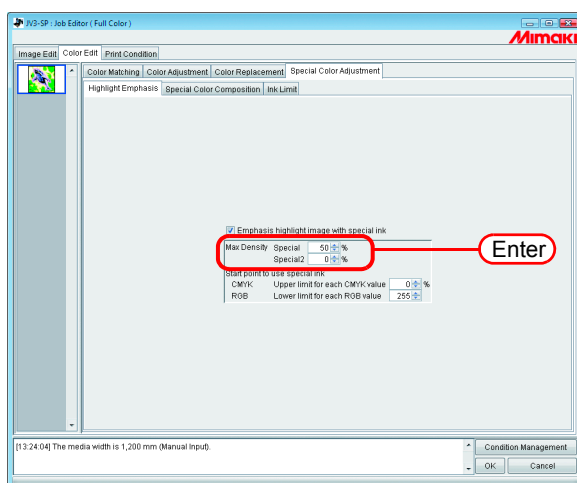

The maximum density specified here is the density of the location with the least amount of ink in the highlight area (i.e. pure white). The density of special color ink is calculated and adjusted automatically according to the amount of ink of the highlight area.

- 4** Specify the point of the highlight area to start printing with special color ink.
- For CMYK images, specify a range of 0 to 20% for each color as the upper limit. Highlight areas lower than this value will be printed with special color ink.
- For RGB images, specify a range of 204 to 255 for each color as the lower limit. Highlight areas higher than this value will be printed with special color ink.

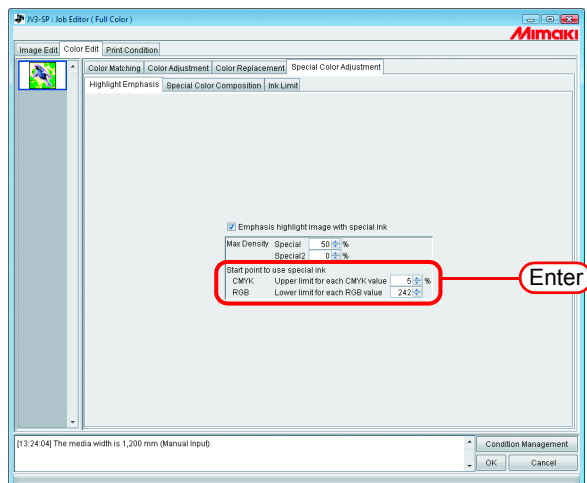


Automatically create a special color layer (Auto Special Color Composition - JV3-SP series)

Print a “color image” overlapping a “single color special ink image (special color layer), automatically created based on the color image”.

Using this function, an image can be white layer print for JV3-SP series.

Set the composition method.

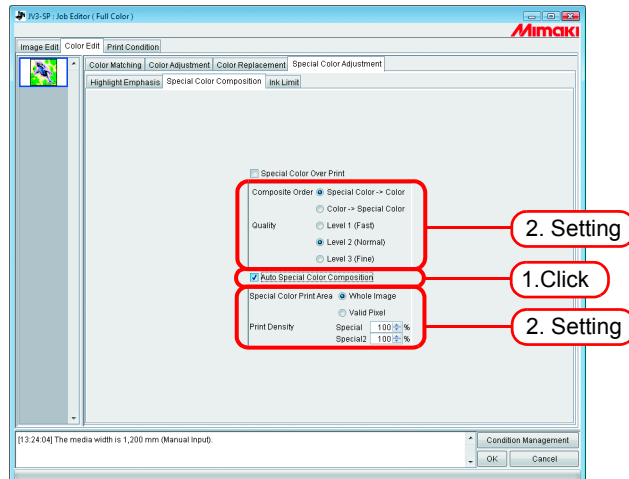

“Composite Order”

“Special Color -> Color”:

Outputs the special color layer first, then the color layer on top of it.

“Color -> Special Color”:

Outputs the color layer first, then the special color layer on top of it.

“Quality” (JV3-SP series/JV33)

Select the print quality.

“Level1” increases the printing speed, but compared with “Level3”, print quality is lower.

“Level3” raises the print quality, but compared with “Level1”, printing speed is lower.

Level	Printing speed	Print quality
1	High	Low
2	Normal	Normal
3	Low	High

“Color for Over Print” (JV33)

Specify special color inks used for Color for Over Print.

The colors that are not specified as special color inks are printed using the color inks.

The number of special color inks selected in the special colorset can be specified.

“Special Color Print Area”

“Whole Image”:

Outputs a special color layer of the same size and shape surrounded by a dotted line in the layout preview.

“Valid Pixel”:


Outputs a special color layer with only the colored parts of the image.

“Print Density”

Specify a density of special ink between 0 and 100% for outputting the special color layer. For print density, the number of special color inks selected in the special colorset can be specified.

Example of “Auto Special Color Composition”

On the “Layout Preview”, set the image as shown below:

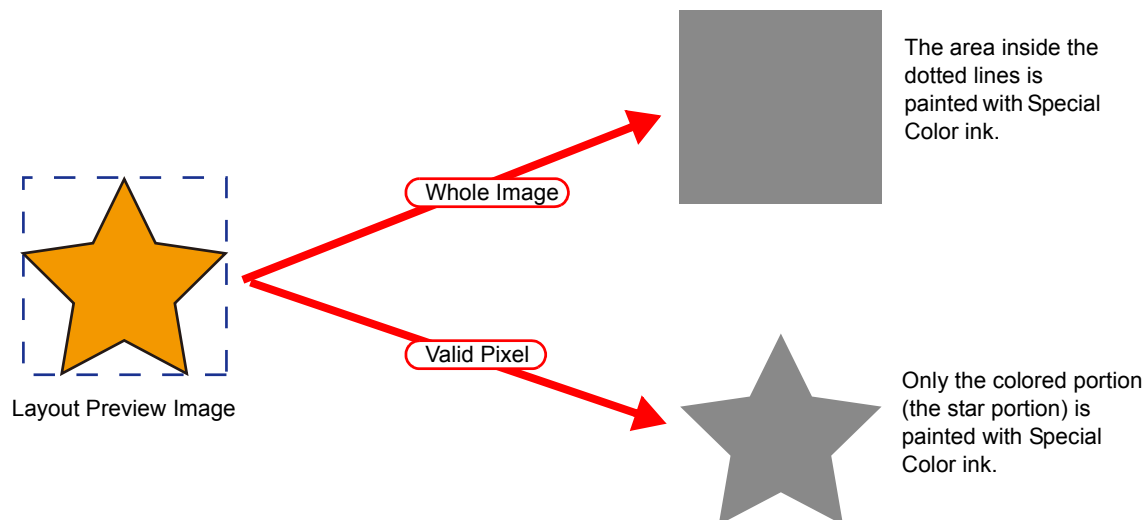

NOTE!

When specifying “Valid Pixel” and the image has a blank part (highlighted part without color), the special color will not be printed on that blank part. In this case, also use the “Emphasize highlights with special color” function (👉 P.117) at the same time.

Example of “Composite Order”

The image as shown below on the “Layout Preview” will be output as follows:

“Special Color Print Area”Whole Image

“Composite Order”Special Color -> Color



Layout Preview Image



[1]

The square area shown with the dotted line in the “Layout Preview” is fully printed with special color ink.




[2]

The Color Layer is output overlapping the special color Layer.

Specify and create a special color block (Manual creation - JV3-SP Series/JV33)

Print a “color image” overlapping a “special color ink image (special color block)”. With this function, white layer printing is possible in any position you specify with the JV3-SP Series.


- 1 Group a color image and a special color ink image (☞ P.67).
- 2 Click the “Print Condition” menu.
Click the “Print Mode” menu.
Select a special color set.

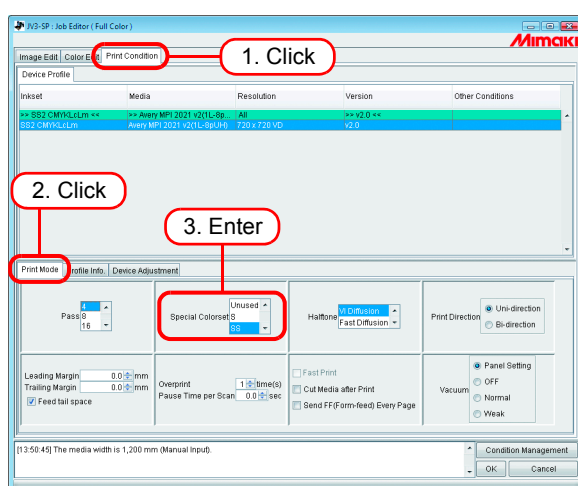


- 3 Set the color replacement for the special color ink in the special color ink image (☞ P.89).

NOTE !

Using image editing software such as Adobe Photoshop, create an image in gray scale mode with black /white reversed. You can replace single colors with a special color using the RIP single color replacement function.

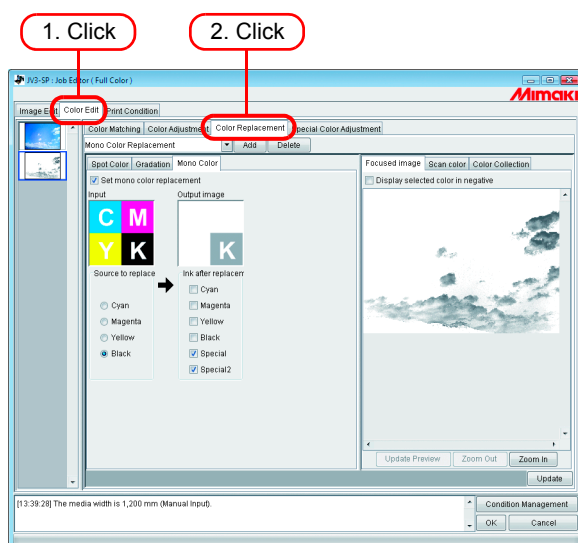

- 4 Click “Special Color Composition” menu.
Specify “Special Color Over Print”.
Set “Composition Order” and “Quality”.

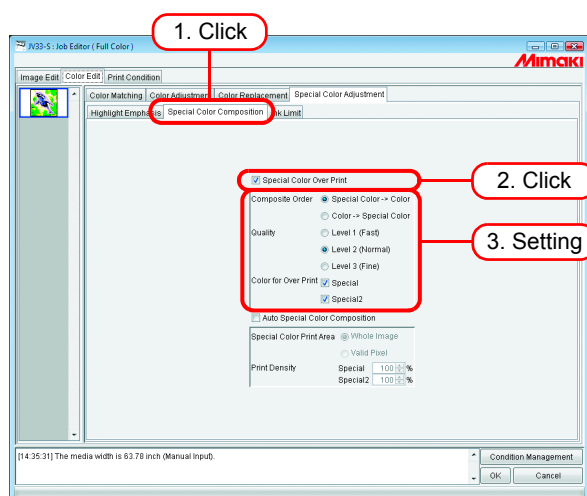

[Composition Order]

Special Color -> Color: Outputs the special color block first, then the color block on top of it.
Color -> Special Color: Outputs the color block first, then the special color block on top of it.

[Quality] (JV3-SP Series/JV33)

“Level 1” increases the printing speed, but compared with “Level 3”, print quality is lower. “Level 3” increases the print quality, but compared with “Level 1”, printing speed is lower.

Level	Printing speed	Print quality
1	High	Low
2	Normal	Normal
3	Low	High


“Color for Over Print” (JV33)

Specify special color inks used for Color for Over Print.


The colors that are not specified as special color inks are printed using the color inks.

The number of special color inks selected in the special colorset can be specified.

- 5** Click “Image Edit” menu.
Make a layout with a color image and a special color ink image overlapping.

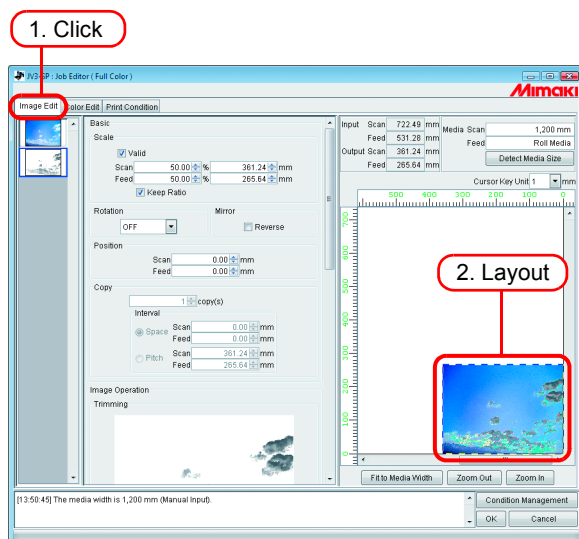

- 6** Click .

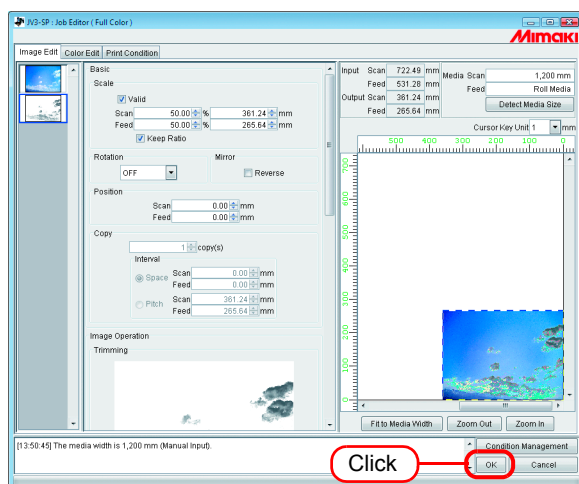

Editing Ink Limit

You can edit the amount of special colors. The specified values can be registered as a special color adjustment set.

Creating a special color adjustment set

Create a special color adjustment set for each special color set.

- 1 Click the [Color Edit] menu.
Click the [Special Color Adjustment] menu.
Click the [Ink Limit] menu.
Enter a name for the special color adjustment set.


NOTE!

Important The following single byte characters cannot be used for special color adjustment set names.

\ / : ? " < > |

Click .

If a special color adjustment set with the same name already exists, an overwrite confirmation message is displayed.

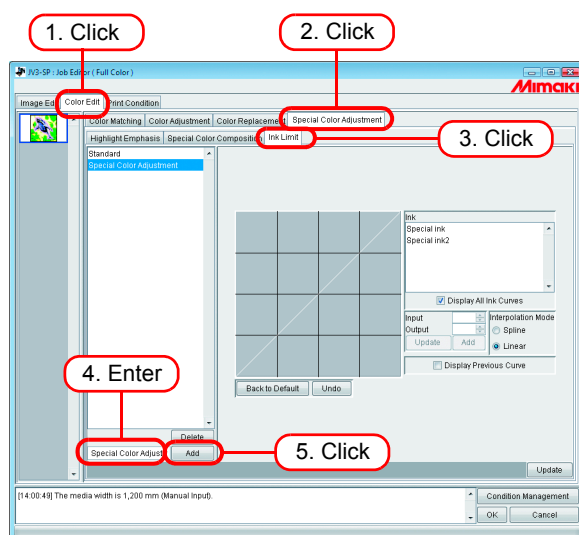


- To create a new special color adjustment set, select "Standard". Then enter a set name, and click .
- To copy a previously registered special color adjustment set, select the set to edit and after changing the set name, click .

Deleting a special color adjustment set


Click a registered special color adjustment set.

Clicking **Delete** deletes the selected color adjustment set.

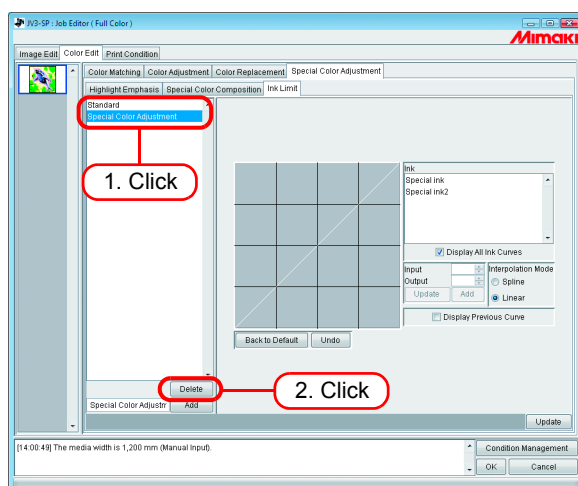

Updating a special color adjustment set

To update the special color adjustment set that is set, click **Update** or **OK**, and finish the Job Editor.

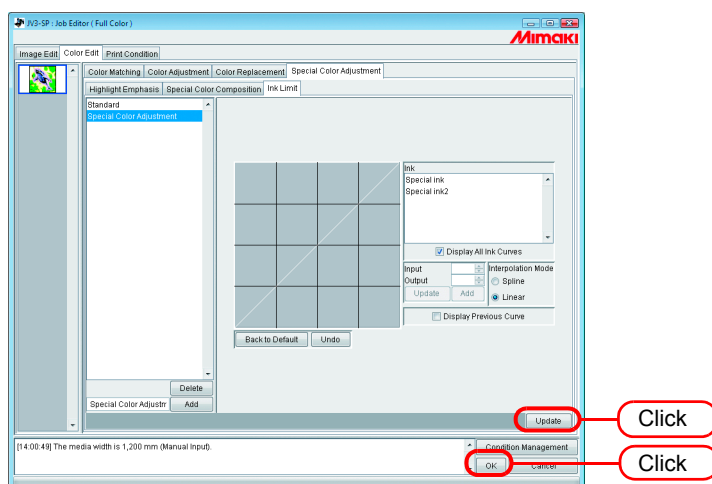

NOTE!

When a special color adjustment set is updated, the changes are also applied to other jobs that use the same special color adjustment set. If the changes are applied to a different job with already RIPped data, if "Print only" is performed the print results may differ. Either perform RIP again, or update the special color adjustment set or create a new one.

Adjust the ink curve


Display the special color ink curve selected in “Special Colorset”. The horizontal axis shows the ink density before adjustment (input tone), and the vertical axis shows the ink density (output tone) after adjustment. Both vertical and horizontal axes display a range from 0 to 255. If the output tone is less than 0, it is set to 0. Furthermore, if it is more than 255, it is set to 255. Click a point to adjust on the ink curve to make a control point. You can add up to 30 points. Selected control points change from outline rectangles to solid rectangles.




The operation for setting the ink curve is the same as that for CMYK ink. (P.82)

NOTE!

Ink curves for special colors are applied to Color Replacement only. They are not applied to Auto Special Color Composition, Automatic Clear Composition, and Emphasis highlight with special ink.

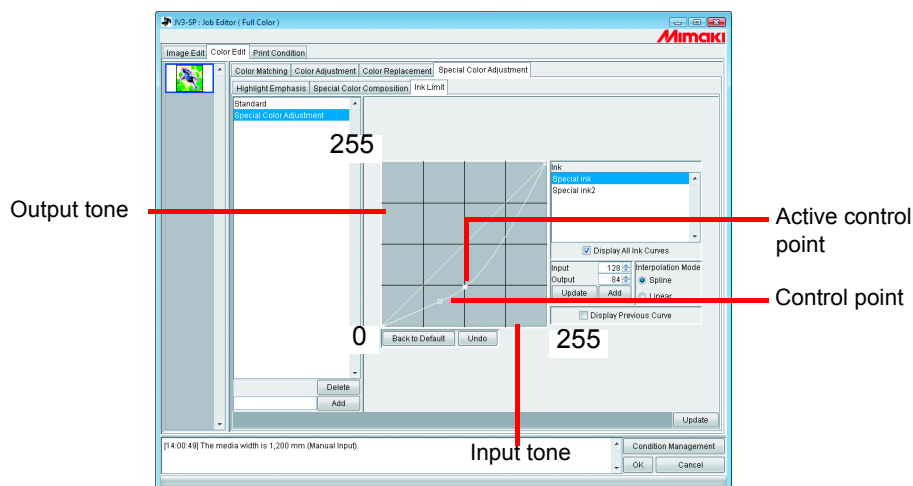

An example of ink curve application when using special colors on the “Gradation” menu in the “Color Replacement” menu.

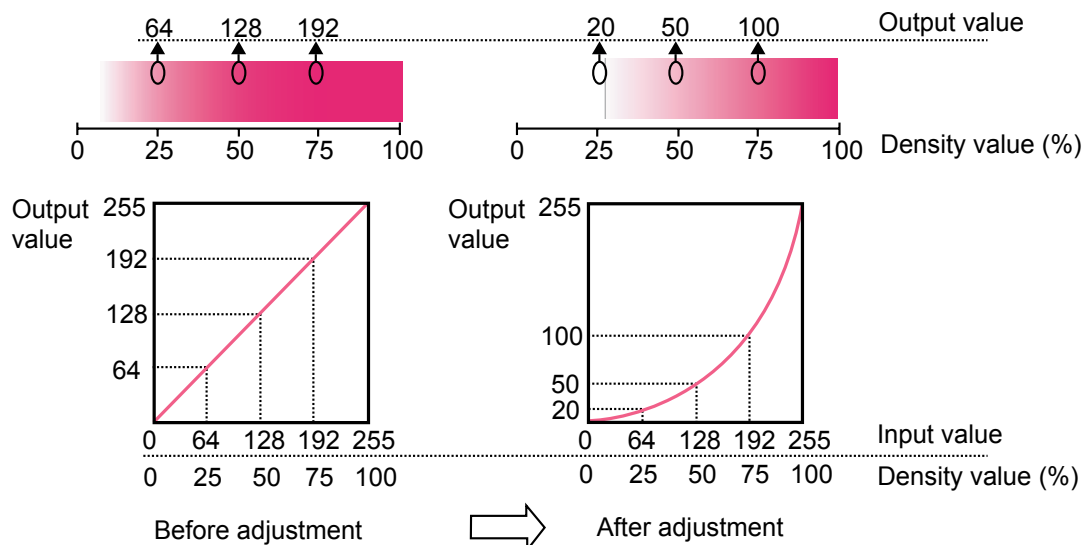


Editing Print Condition

Set the print conditions.

NOTE !

If multiple jobs are set to Group, all the jobs become same print condition.

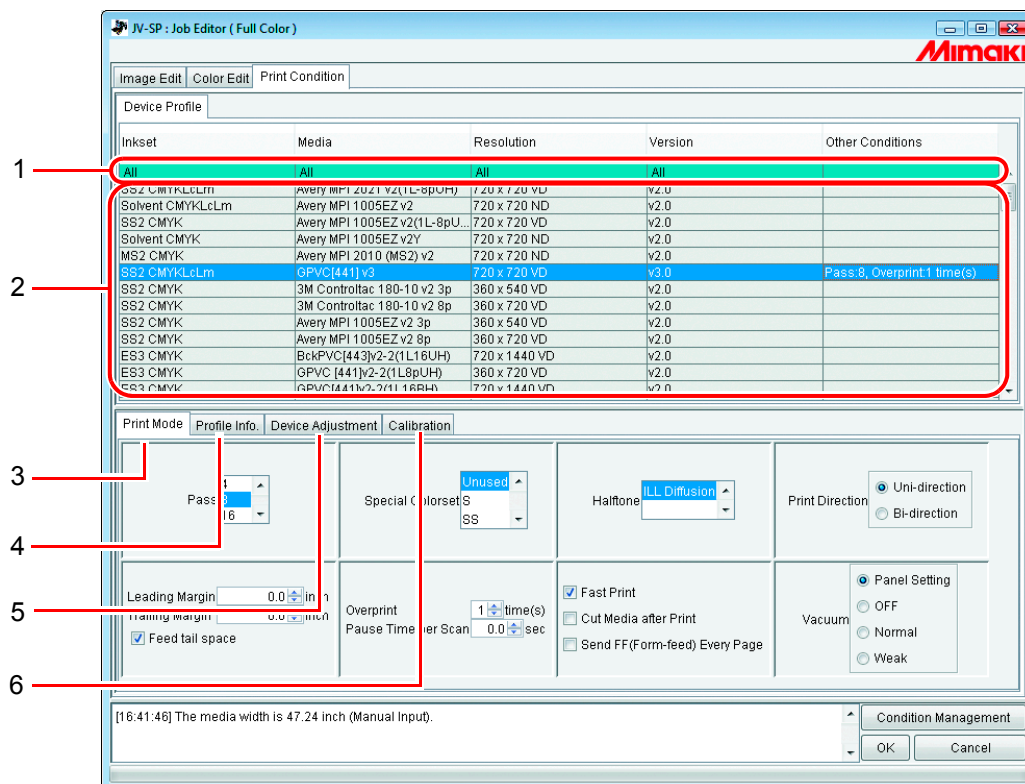

1. Refining the device profile

Displays the refined device profile. (P.131)

2. Device Profile list

Indicates profiles for optimum printing.

Click and select the profile to be used.

NOTE !

The available resolution depends on the Device Profile that is pre-installed. In case the corresponded Device Profile is not exist, install the appropriate profile. (The corresponded profile may not be preinstalled.)

3. [Print Mode] sub menu

Set the various print mode. (P.132)

4. [Profile Info] sub menu

Displays the information of a Device Profile. (P.135)

5. [Device Adjustment] sub menu

Set the Feed Correction and Heater Temperature value. (P.136)

6. [Calibration] sub menu (🖨️ P.139)

The Calibration submenu appears if the currently selected device profile is of version 3.0 and it contains calibration and/or equalization information.

Specify whether calibration and/or equalization information are to be applied or not for a RIP process.

Calibration (Info):Adjusts the colors of the current printer to match those in its specific state such as its initial state (and information for calibration).

Equalization (Info):Adjusts the colors of the current printer to match those of a target printer (and information for equalization).


NOTE!

To use these features, a version 3.0 device profile needs to be created with the Mimaki-supplied profile creation software called “MimakiProfileMaster II”, and it needs to contain calibration and/or equalization information.
The Mimaki-supplied version 3.0 device profile does not contain calibration or equalization information.


Device Profile Refined Display

Displays the information included in the profile such as inkset, media, resolution, version to display refined profiles that meet the specified conditions.

Specify the conditions for refining your search in the first, green row of the list.

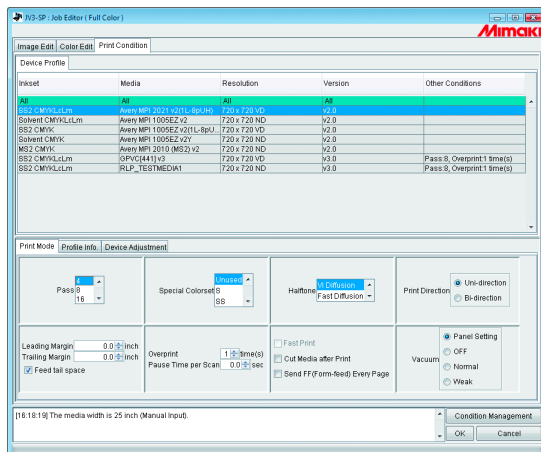

When Inkset refines the SS2 CMYKLcLm profile

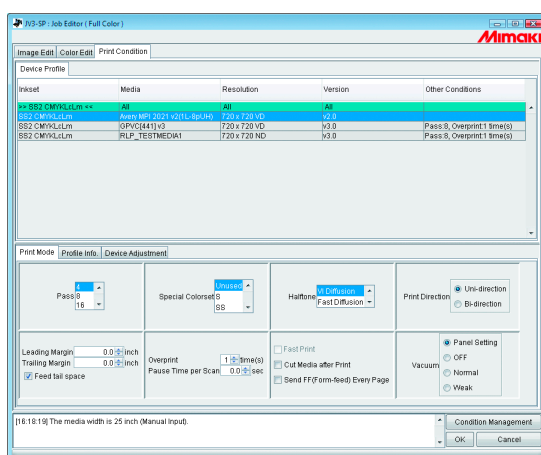


NOTE !

When select a profile that supports LL dot, white ink cannot be used.
To confirm whether profile supports LL dot, check the “Media” name.

[Print Mode] sub menu

Set the various print mode.

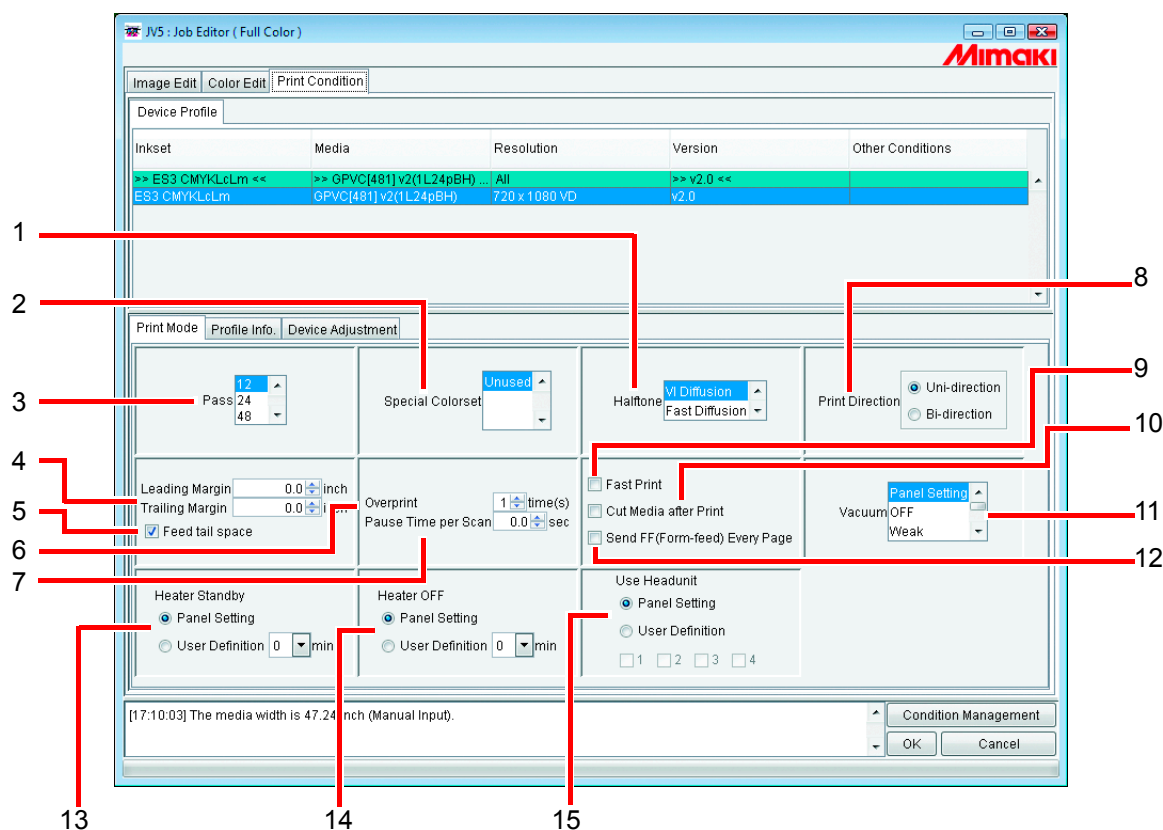

1. Halftone

Specify the Halftone method.

Vi Diffusion Good for solid color images.

Fast Diffusion Select for small characters where sharpness is required. Not good for solid color images since it results in banding.

ILL Diffusion Available with Version 3 device profiles. Excellent at reproducing pale colors, so that suitable for images with many gradations.

2. Special Colorset

Selects the special ink to use after replacement.

The following items can be selected.

S: Use one special color.

SS: Use two special colors.

W: Use one white color.

WS: Use one white color and special color.

Unused: Do not use colors other than those used in the profile.



When select a profile that supports LL dot, white ink cannot be used.
To confirm whether profile supports LL dot, check the "Media" name.

3. Pass

Specifies how many passes to use when printing one band.

More passes result in better printing, but take longer.

When a Version 3 device profile is selected, this is initialized to the recommended value of the profile.

4. Leading Margin and Trailing Margin

Sets the margin before starting printing and after finishing printing.



When printing, in addition to the margin set here, printer automatically add some margin.

5. Feed tail space

If there is white space at the bottom edge of the image (top of the original image), sets whether or not to feed the white part.

6. Overprint

Set to strengthen coloring.

When using an Device Profile for overprinting (for two layers), enter “2” for overprinting.

When a Version 3 device profile is selected, this is initialized to the recommended value of the profile.

7. Pause Time per Scan

Sets the time to pause for each scan of the head.

Use the drying status of the ink as a guide to the setting.

8. Print Direction

Uni-direction.....Prints discharging ink when the head moves from right to left. It results in better printing than “Bi-direction”, but takes longer.

Bi-direction.....Prints discharging ink when the head moves left and right. Quality is not as good as with “Uni-direction”, but is faster.

9. Fast Print

Allows fast printing to reduce printing time.

However, quality is not as good as with normal printing.

10. Cut Media after Print

After printing finishes, the media is cut and removed from the roll.

11. Vacuum (JV3-SP and JV5 only)

Sets the absorbability of the media.

If the media attaches easily to the printer, set it to “Weak”.

12. Send FF (Form-feed) Every Page

Sets whether or not to send a form feed for every page output when printing multipages or color separations.

If a form feed is output, a margin is added between the next page.



In the Immediate Print mode, a form feed is sent for every page irrespective of this setting.

13. Heater Standby (JV5 only)

Specifies the heater standby status after completing printing.

14. Heater OFF (JV5 only)

Specifies the heater off status after completing printing.


15. Use Headunit (JV5 only)

Selects the headunit to use for printing.

Usable headunits are limited to adjacent head units.

[Profile Info] sub menu

Displays the information of a Device Profile.

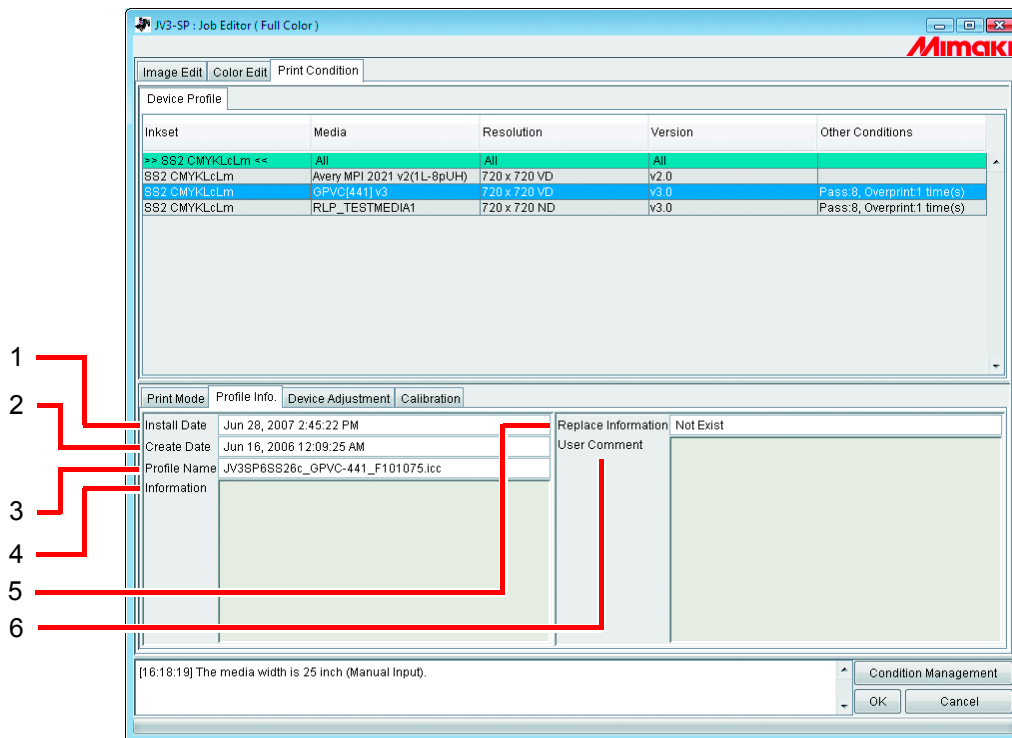

1. Install Date

Displays the installation date of the selected profile.

2. Create Date

Displays the creation date of the selected profile.

3. Profile Name

Displays the file name of the selected profile.

4. Information

Displays the information of the selected profile.

5. Replace Information

Shows whether the device profile contains highly accurate color replacement information or not.


6. User Comment

Comments are writable to selected profiles.

When you select a profile, this User comment column displays the comment that you wrote on the profile.

[Device Adjustment] sub menu

Sets the Feed Correction and Heater Temperature value.

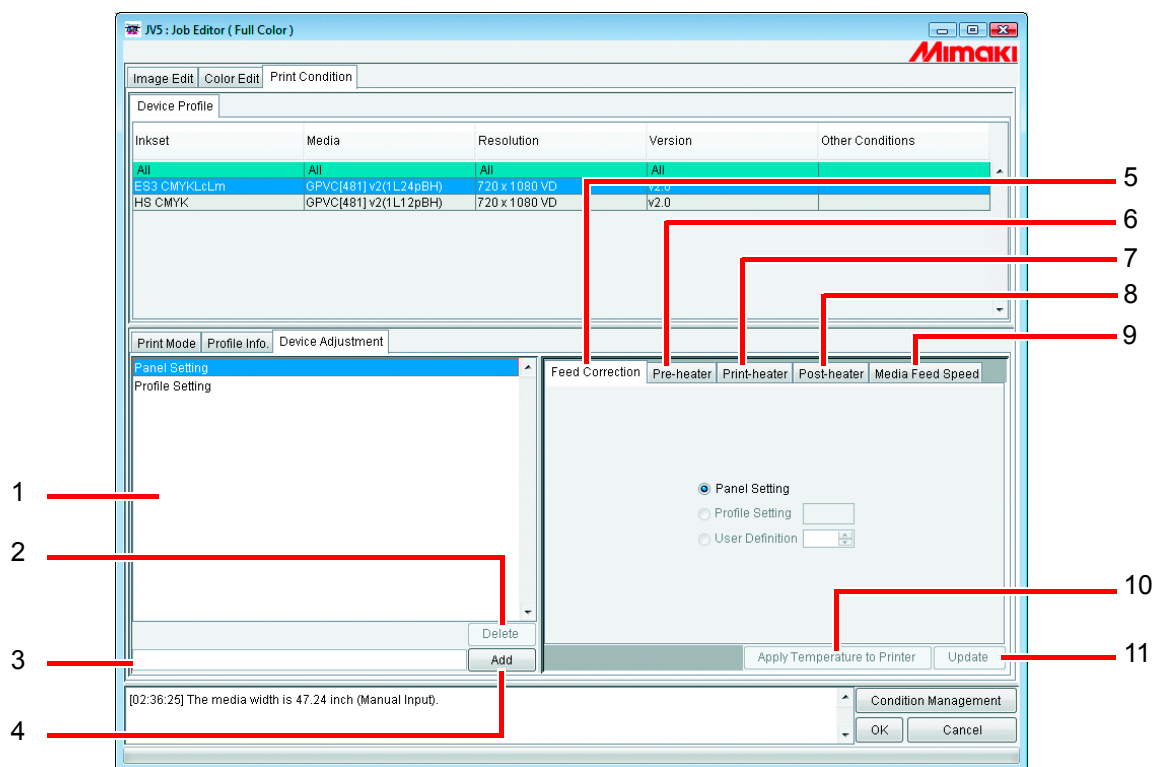

1. Device adjustment set list

Displays the device adjustment sets registered.

Device adjustment sets are values set and registered in the [Device Adjustment] sub menu, registered as files with a name added.

2. Delete

Deletes registered device adjustment set.

NOTE! "Profile Setting" and "Panel Setting" cannot be deleted.

3. Device adjustment set name input box

Enter registered device adjustment set names.

It is convenient to input names that indicate the media name and feed correction value.

NOTE! The following single byte characters cannot be used for device adjustment set names.
\\ : * ? " < > |

4. Add

Adds a device adjustment set.

5. Feed Correction

The JV series and DS series print by feeding the media to the front. When the quality of plotted images is poor with banding and so on, correct feeding of the media.

Set which of the following feed correction values to prioritize.

Panel Setting: Gives priority to the value set in the printer control panel.

Profile Setting: Gives priority to the value registered in the selected Profile.

NOTE ! Some Device Profiles do not have feed correction registered. In this case, "Profile Setting" value is not shown.

User Definition: The printer follows the value entered in the box.

6. Pre-heater (JV3 series and JV5 only)

Sets the pre-heater temperature.

Panel Setting: Gives priority to the value set in the printer control panel.

Profile Setting: Gives priority to the value registered in the selected Device Profile.

NOTE ! Some Device Profiles do not have heater temperature registered. In this case, "Profile Setting" value is not shown.

User Definition: The printer follows the value entered in the box.

Heater Off: When this is checked, the heater is not used.

7. Print-heater (JV3 series and JV5 only)

Sets the print heater temperature.


The setting items and method are the same as for pre-heater.

8. Post-heater (JV5 only)

Sets the post-heater temperature.

The setting items and method are the same as for pre-heater.

9. Media Feed Speed (JV5 only)

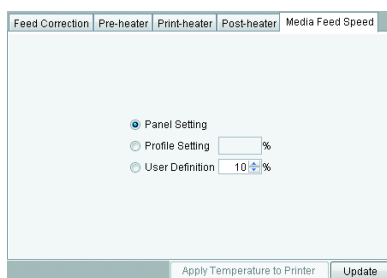

If the default Media Feed Speed does not feed correctly, set a value for Media Feed Speed.

Panel Setting: Gives priority to the value set in the printer control panel.

Profile Setting: Gives priority to the value registered in the selected Device Profile.

NOTE!

Some Device Profiles do not have Media Feed Speed registered.
In this case, "Profile Setting" value is not shown.

User Definition: The printer follows the value entered in the box.

A value between 10% and 200% can be set at intervals of 10%.

10. Apply Temperature to Printer (JV3 series and JV5 only)

Sends the temperature setting information to the printer.


By performing the temperature settings before printing, the time required for heater temperature adjustment immediately before printing can be reduced.

11. Update

Applies the settings to the Device adjustment set.

[Calibration] sub menu

Specifies whether calibration and/or equalization are to be used.

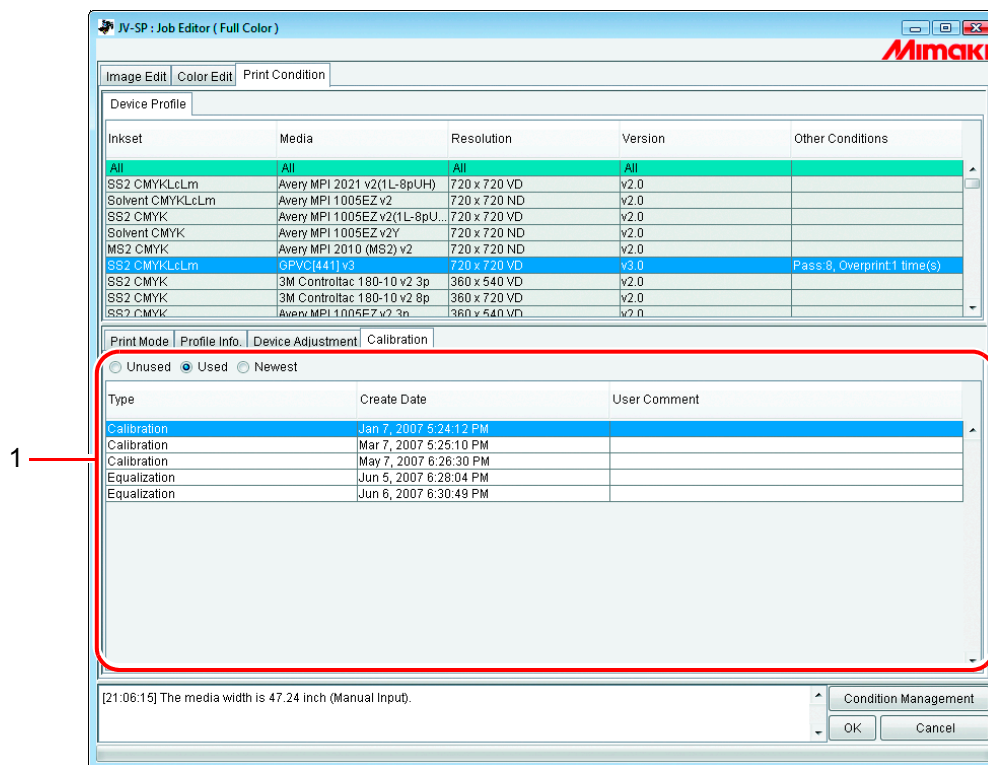

1. Calibration and Equalization

If you want to apply calibration and/or equalization to the RIP process, select an appropriate option from the list.

The default is “Used”.

If you do not want to apply calibration and/or equalization to the RIP process, select “Unused”.

“Newest” will apply the most recently created calibration and/or equalization information for the RIP process.

This is useful if no equalization is needed and calibration information is routinely added to a version 3.0 device profile without equalization (*1), because it eliminates the need to select calibration.

*1

The Mimaki-supplied profile creation software called “MimakiProfileMaster II” allows calibration information to be added to version 3.0 device profiles.

Multipage jobs

Files with multiple images in one file are called “multipage” images.


In Raster Link ProIII, all pages of multipage images can be print at the same time.



Multipage images where the image sizes are different are not supported.


Main Window

Only images on the first page are shown in the “Thumbnails”.

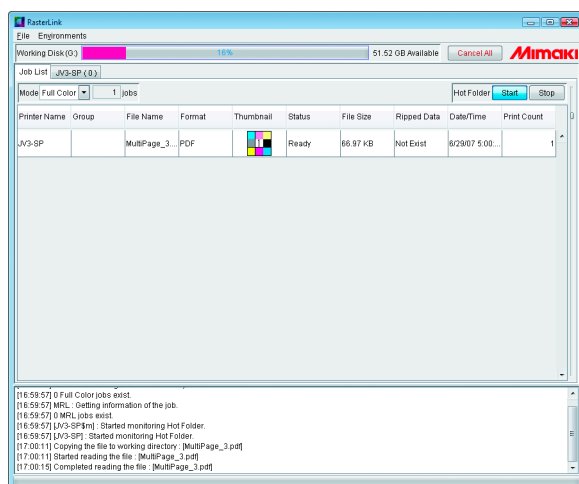

“Job Editor”

All pages are shown in the “Job Editor”.

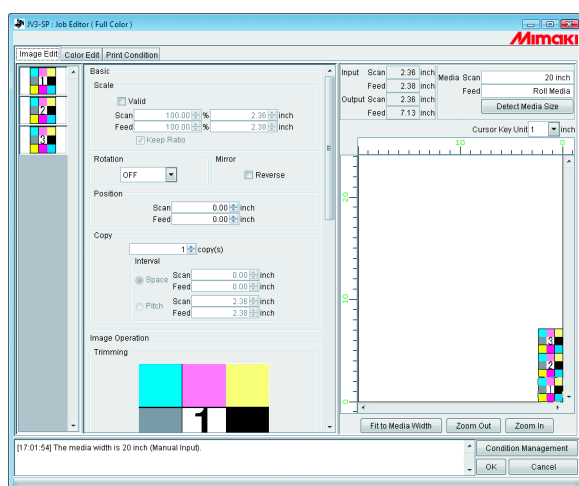

All settings in the “Job Editor” are common to all pages.

Edit jobs (Image Edit)


Decide the print pages

All pages of jobs for editing appear as thumbnail images.

Pages to print can be selected.

Click images in the Thumbnail List that will not be printed.

A cross mark is placed over the thumbnail, and it is removed from the preview image.

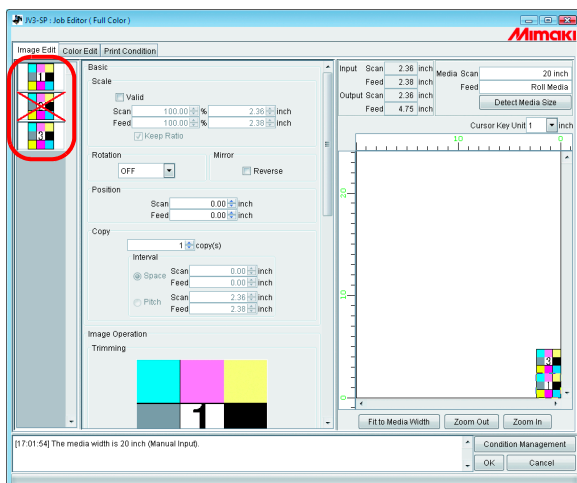

- Images marked with a cross (images not shown in the preview) are not printed.
- To print images that are set so as not to be printed, click thumbnails marked with a cross.


NOTE!

All pages cannot be marked with a cross.

Position

All pages can be moved as one object.

Drag and drop with the cursor, or enter values for Scan and Feed.

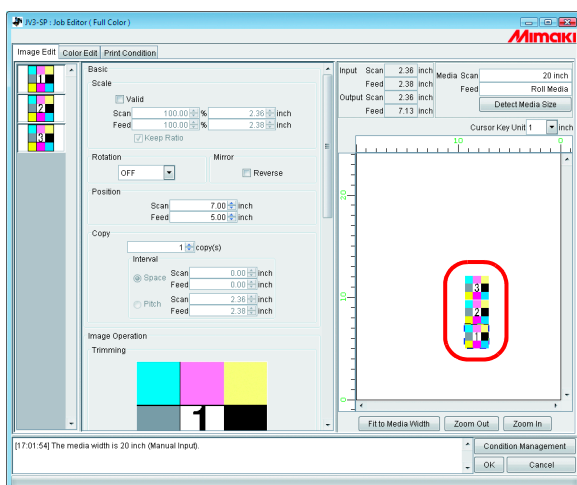


Each page cannot be arranged separately.

Trimming

Trims all pages.


The Trimming preview shows the first page of jobs for print.

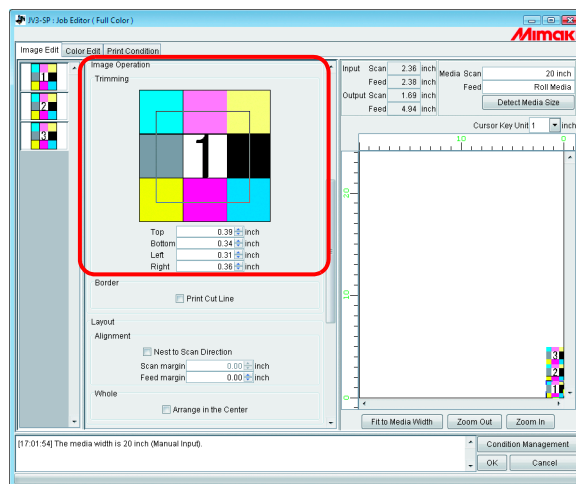

Alignment

Specifies the pitch of each page.


When “Nest to Scan Direction” is checked, the pages are arranged horizontally.

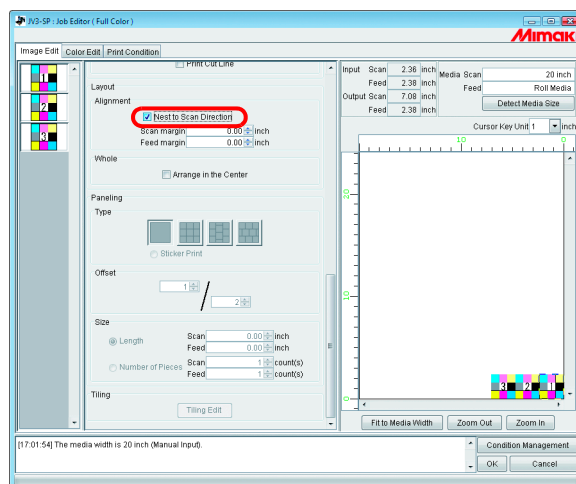

Copy

Copies each page.

NOTE ! “Nest to Scan Direction” and “Copy” cannot be specified at the same time.

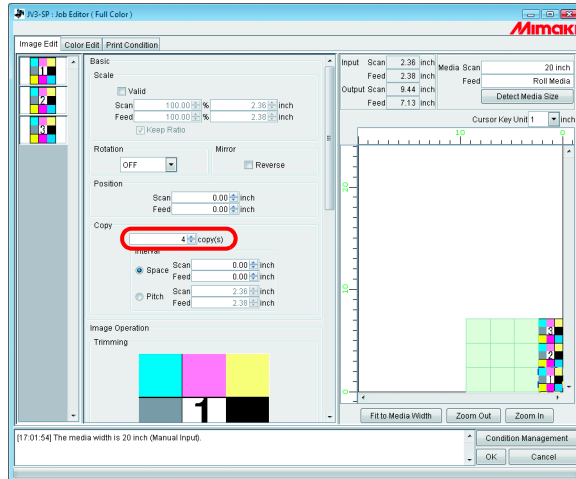

NOTE ! With multipages, the following settings are not possible.

- Paneling
- Tiling

Color separation Print (JV4 series only)

Process colors (cyan, magenta, yellow, black, special colors) are printed with black ink.

There are the following two methods for separation print.

Select one according to the data format output by the application software.


Application Separation: Used when the application software separates the image into process colors (cyan, magenta, yellow, black, special colors) for printing.

RIP Separation: Separates full color images output from the application software into the process colors cyan, magenta, yellow, and black in Raster Link Pro III.


Application separation spool method

The following explains how to spool application separation images from Adobe Illustrator as an example.


- 1 Start up Adobe Illustrator, and display the file to spool.

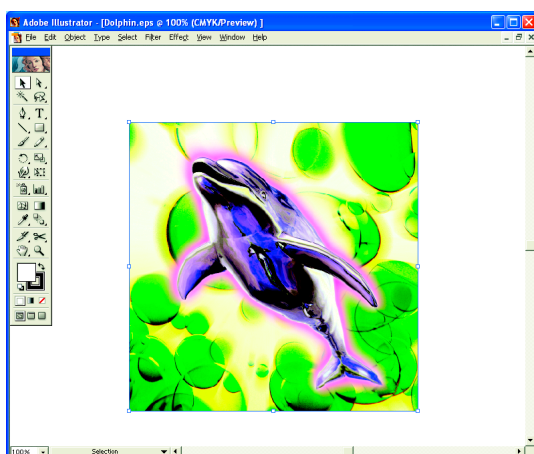

- 2 Select [Print].
[File] - [Print] menu
The "Print" dialog appears.

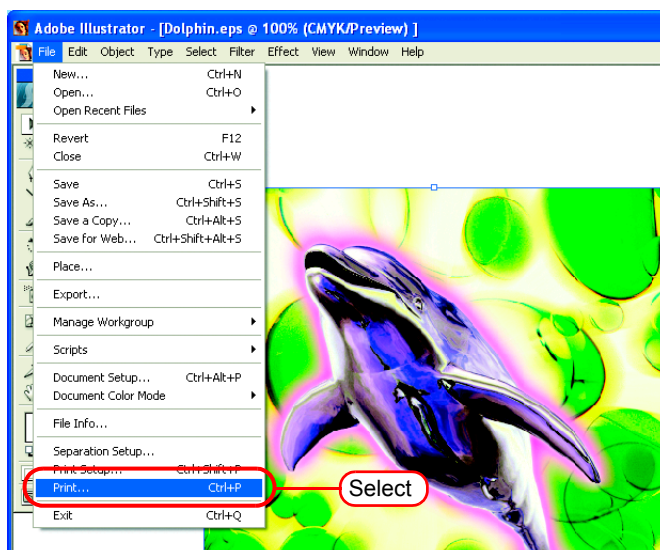

- 3** In “Name”, select “JV4\$A”.
Click **Separation Setup**.
“Separation on JV4\$A” dialog appears.

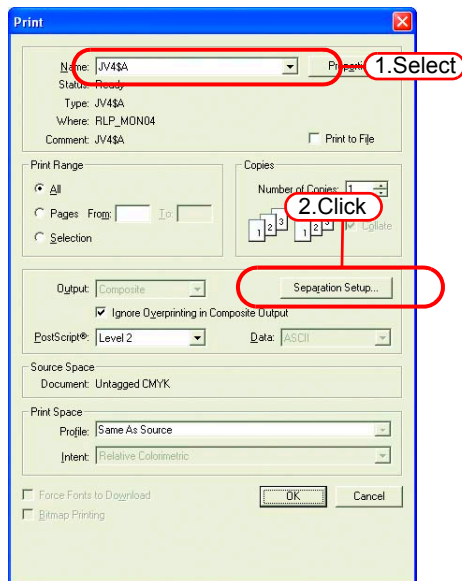


There are printers for application separation other than “JV4\$A” created by Condition Management.

- 4** Click **Open PPD**, and select “MKRL3xEN.PPD”.




With Mac OS X, select “MKRL3EN.PPD”.


Make the various settings, and click **OK**.

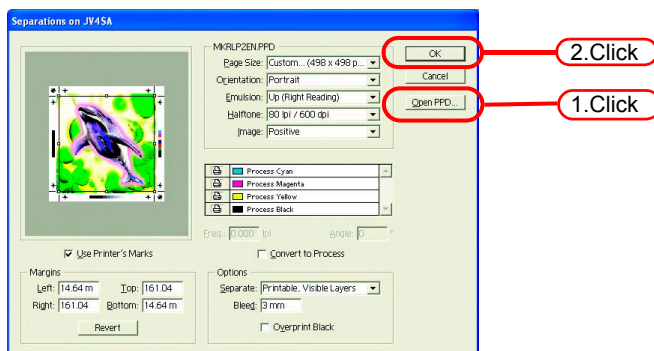

- 5 In “Output”, select “Separate”.
Click in the “Print” dialog to spool the separation image data.

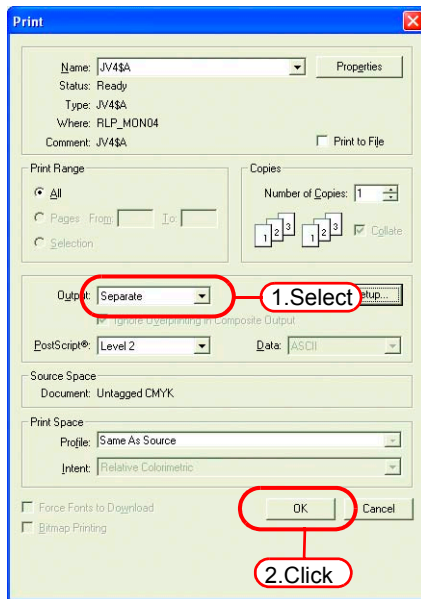

- 6 Spooled files appear in the “Job List” screen.

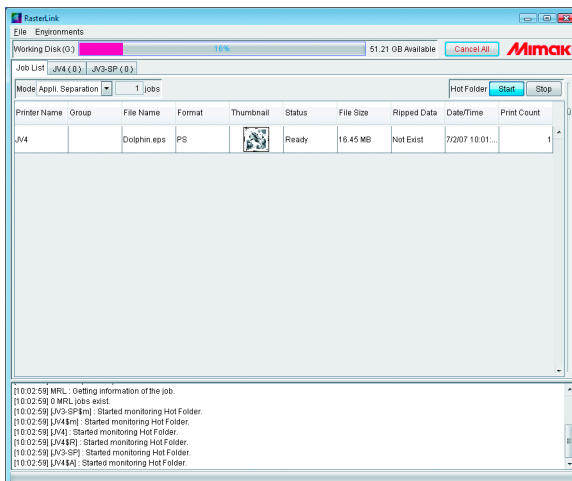

Images spooled via the printer driver take the file format “ps” irrespective of the format of the source image.

Edit color separation jobs

Similarly to full color jobs, Image Edit, Color Edit, and Print Condition settings are possible for image color separation jobs.

The items that can be set differ from full color jobs.

Also, the items that can be set differ from Application separations and RIP separations.

Refer to “Common features for every printer” (👉 P.70) for how to open the “Job Editor” window.

Image Edit

In Image Edit, the Scale, Rotation, Mirror, Position, Copy, Negative/Positive, Trimming, Alignment (Nest), and Arrange in the Center functions can be set.


The Image Edit settings are applied to all layers for printing.

Each Image Edit function except “Negative/Positive” are the same as the “multipage” settings.

Refer to 👉 P.140 for the setting method.

Click “Negative/Positive”.


Black and white in the image are reversed.

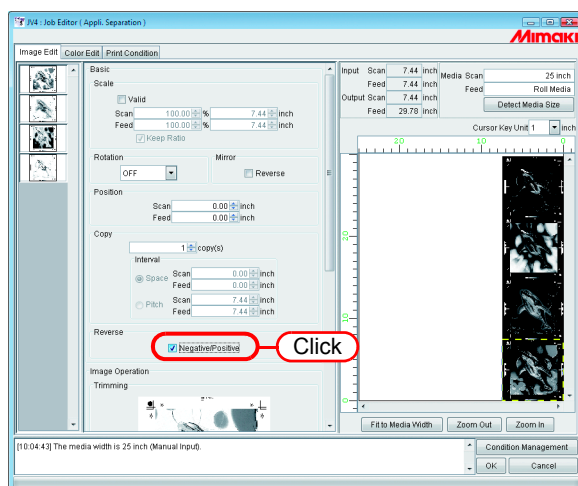

Color Edit

Create Color adjustment sets and edit ink curves.

The adjustment method is the same as for full color ink curve.

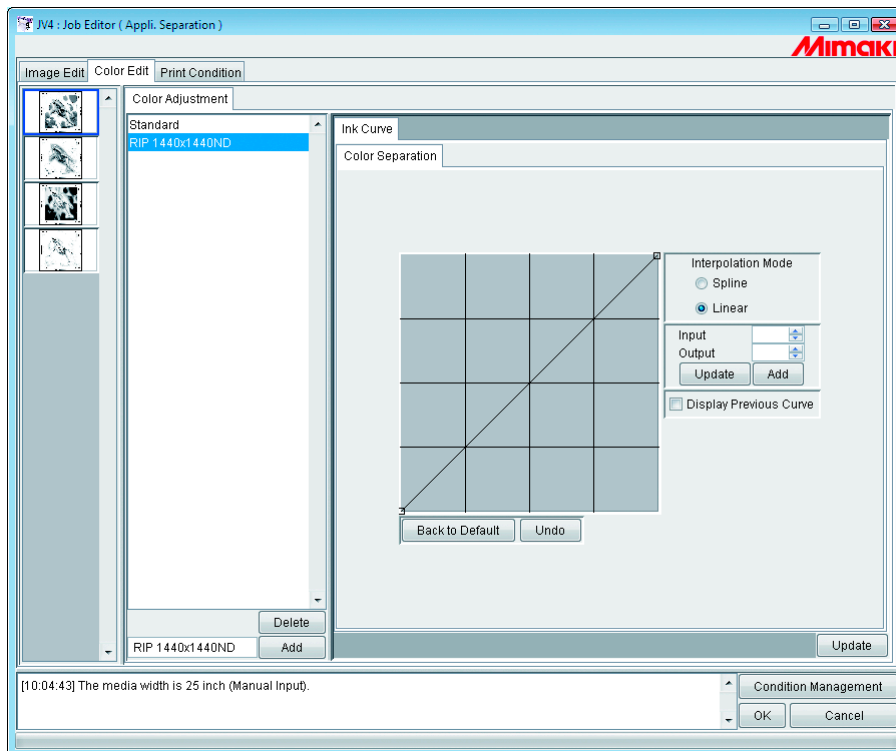

Print Condition

The items that can be set differ from Application separation and RIP separation.


Separation print settings are set with the following setting conditions.

- Resolution of Device Profile
- “High Quality” of Artwork Mode setting
- Artwork Mode setting of the Printer

For details, refer to  P.151 Artwork Mode “High Quality” setting.

Refer to the printer manual for printer artwork mode settings.

[Print Mode]

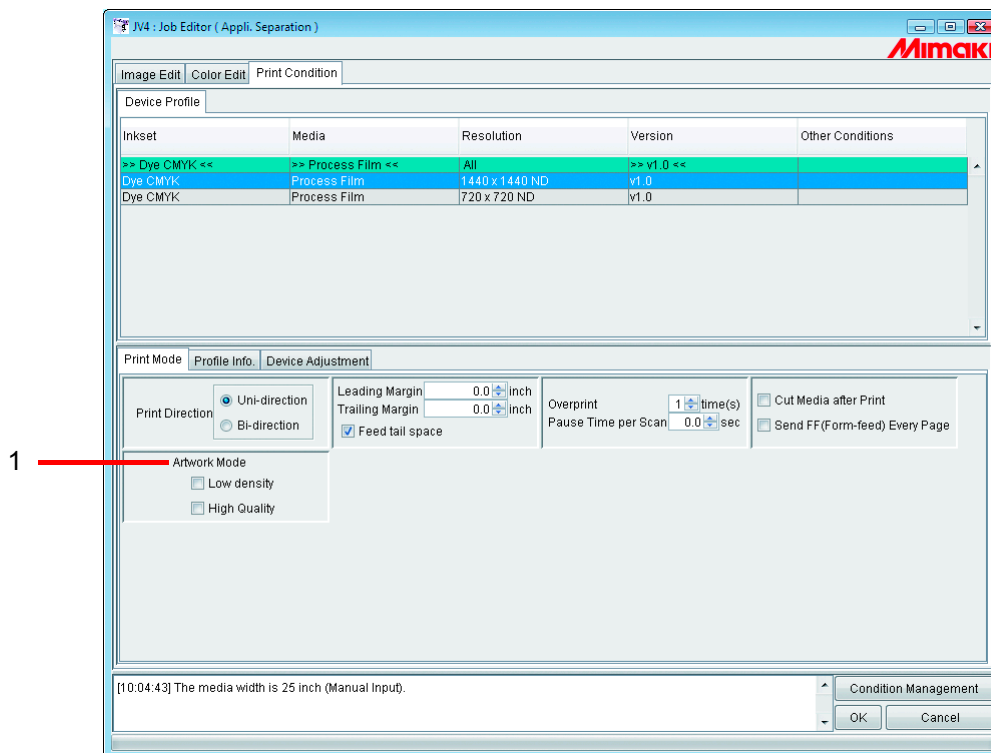


1. Artwork mode

Perform separation print settings.

Low densityEnables the printer function [Artwork Mode] plotting density [Low Density].

High QualityEnables the printer function [Artwork Mode] plotting quality [QUALITY].

[Separation Setup] (RIP separation only)

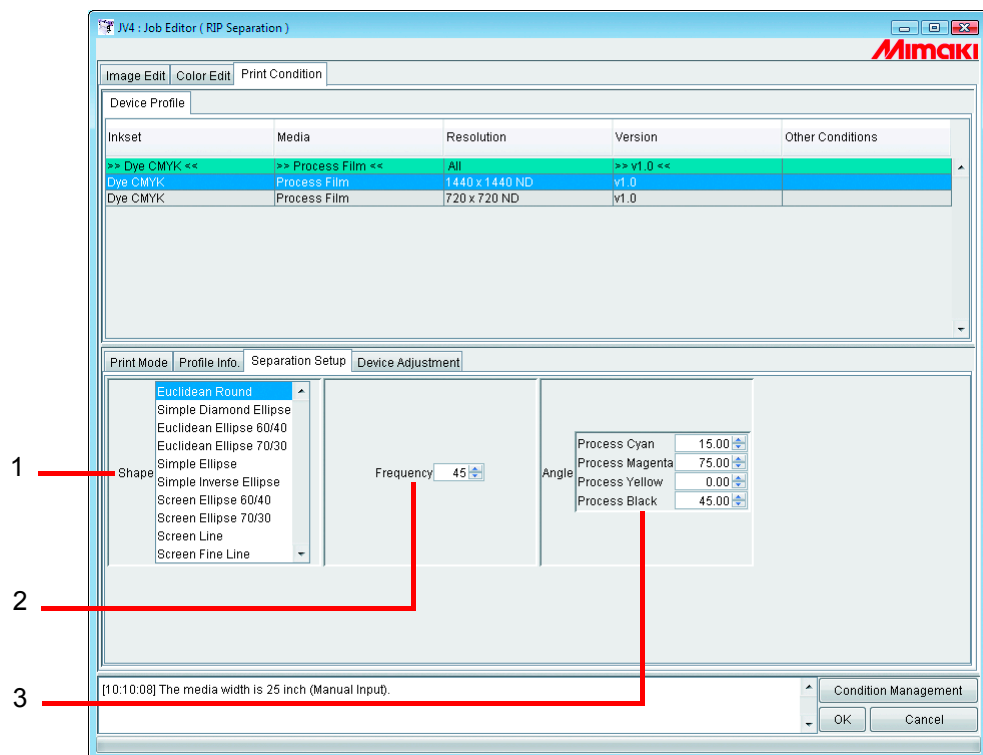

1. Shape

Select the shape of the AM Screening.

2. Frequency

Enter a frequency.

The input value is 16 to 150 line/inch.

Adjust frequency according to the media and printer.

3. Angle

Enter an angle for each color plate.

The input value is 0 to 360 degrees.

Artwork Mode “High Quality” setting

The plotting quality of separation print is determined by the Raster Link Pro III “High Quality” setting and the printer Artwork Mode plotting quality.

NOTE!

- Set the priority function set in the printer to “Host”.
- Refer to the table below for the number of passes when printing.

Refer to the printer manual for printer Artwork Mode and priority function settings.

printer settings Raster Link Pro III settings	OFF	STANDARD1	STANDARD2	STANDARD3	QUALITY1	QUALITY2	QUALITY3
<input type="checkbox"/> High Quality	STANDARD1	STANDARD1	STANDARD2	STANDARD3	STANDARD1	STANDARD1	STANDARD1
<input checked="" type="checkbox"/> High Quality	QUALITY1	QUALITY1	QUALITY1	QUALITY1	QUALITY1	QUALITY2	QUALITY3

Plotting mode for each level of plotting quality

The plotting mode is determined by the combination of data resolution and plotting quality.

Data resolution (dpi)	Plotting quality	Plotting mode	
		Number of passes	Print resolution (dpi)
720 x 720	STANDARD1	4 pass	1440 x 720 ^{*1}
	STANDARD2	4 pass	720 x 720
	STANDARD3	4 pass	720 x 720
	QUALITY1	8 pass	1440 x 720 ^{*1}
	QUALITY2	8 pass	720 x 720
	QUALITY3	8 pass	720 x 720
1440 x 1440	STANDARD1	16pass	1440 x 1440
	STANDARD2	16pass	1440 x 1440
	STANDARD3	16pass	1440 x 1440
	QUALITY1	32pass	1440 x 1440
	QUALITY2	32pass	1440 x 1440
	QUALITY3	32pass	1440 x 1440


*1: Automatically extended by the printer to 1,440 x 720 dpi for printing.

About Condition Management

This function manages various conditions (Print Condition, Image Edit, etc.) necessary for execution of a job as one “Condition set”.

The Condition Management functions are as follows:

- 1) Condition set applicable to a job during its editing.
- 2) A Hot Folder and Printer driver is able to be prepared for each Condition set. The initial values of the job that has been spooled by the Hot Folder or the Printer Driver work as the setting values of the Condition set.

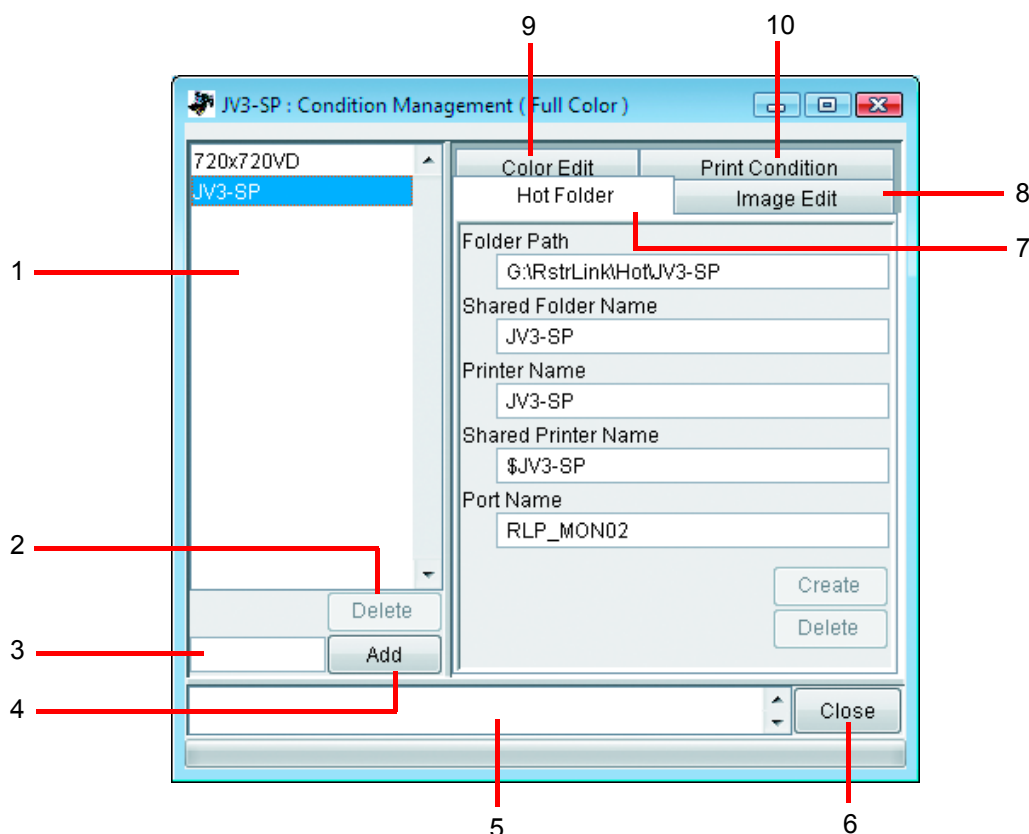

1. Condition List

Indicates the list of Condition set.

2. Delete

Deletes selected condition set. Condition set created by default cannot be deleted.

3. Condition name input box

When you register a new Condition set, input a new Condition set name.



The following characters cannot be entered.

\\ : * ? " < > | ! ,

4. Add

Registers a Condition set newly.

5. Information display

Indicates the operation status of Condition Management.

6. Close

Close Condition Management window.

7. [Hot Folder] Sub menu

Prepares a hot folder and Printer Driver. (🖨 P.154, P.162)

8. [Image Edit] Sub menu

Sets conditions for image editing. (🖨 P.154)


9. [Color Edit] Sub menu


Sets conditions for color editing. (🖨 P.155)

10. [Print Condition] Sub menu


Sets print conditions. (🖨 P.156)

[Hot Folder] Sub menu

Hot Folders or Printer Drivers are able to add or delete. See  P.162 for how to add or delete a Hot Folder or Printer driver.


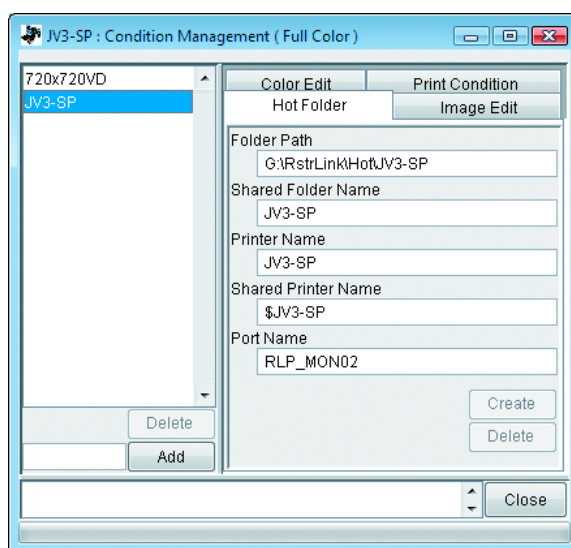


[Image Edit] Sub menu

Parameters for Image Editing settable. See  P.158 for how to set parameters.

The parameters that can be set are as follows:

Scale, Rotation, Mirror, Arrange in the Center, Print Cut Line (full color only), Reverse (separation only), Print information label

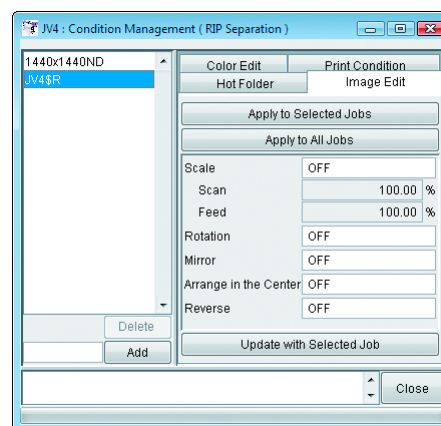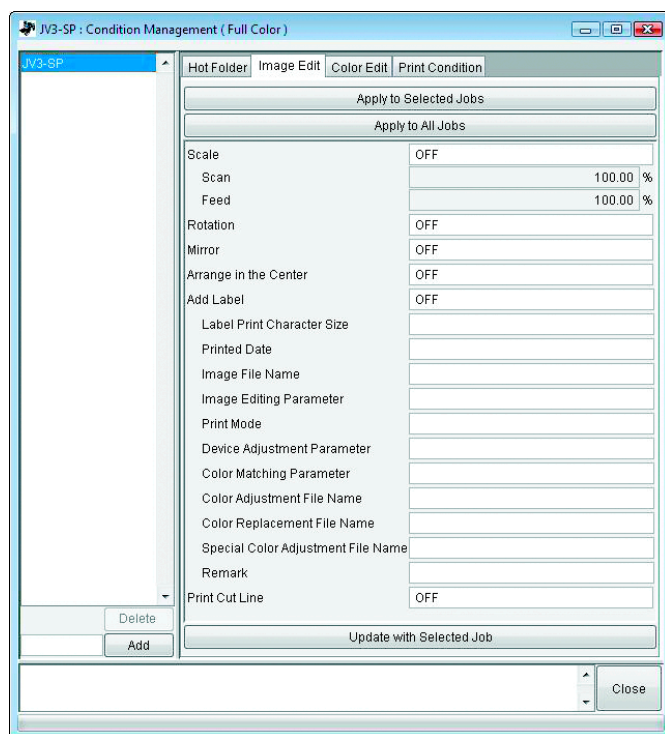


Color Separation





The jobs for which “Tiling” or “Paneling” is set, the condition may not apply.

[Color Edit] Sub menu


Parameters for Color Editing settable. See  P.158 for how to set parameters.

The parameters that can be set are as follows.

All parameters for Color matching (full color only), Color Adjustment set, Color Replacement set (full color only), Special Color Adjustment

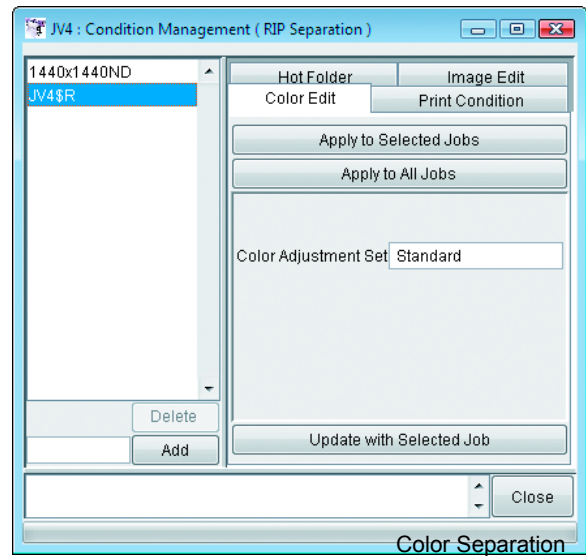
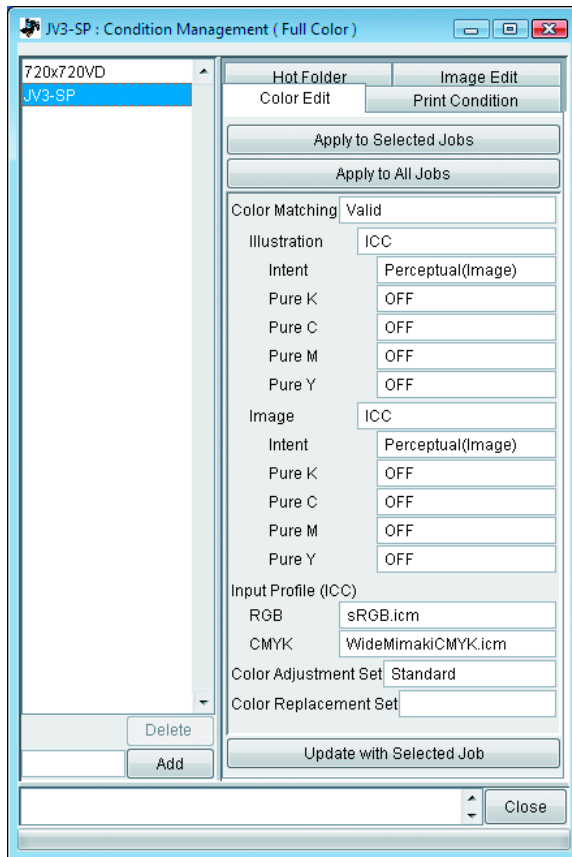


[Print Condition] Sub menu

Parameters for Print Condition settable. See  P.158 for how to set parameters.

The parameters that can be set are as follows:


Device Profile, Print Mode (artwork mode : Color Separation only), Device Adjustment set, and Separation setup (RIP separation only)

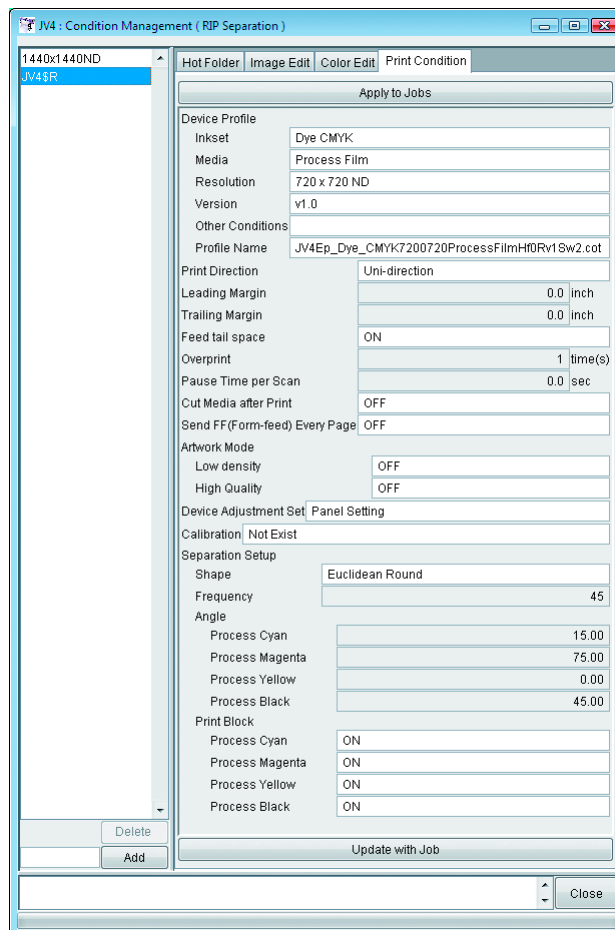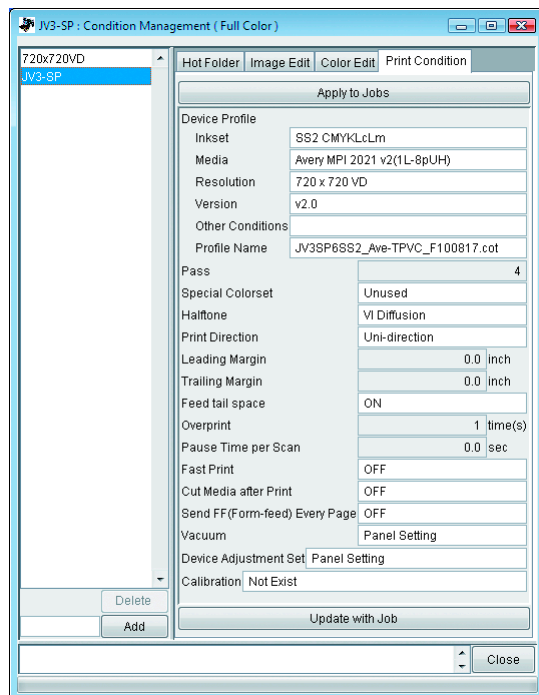

Color Separation

Displaying the Condition Management Window

Select one job for which Condition is to be set, and click **Condition Management** .
Open the “Condition Management” window.

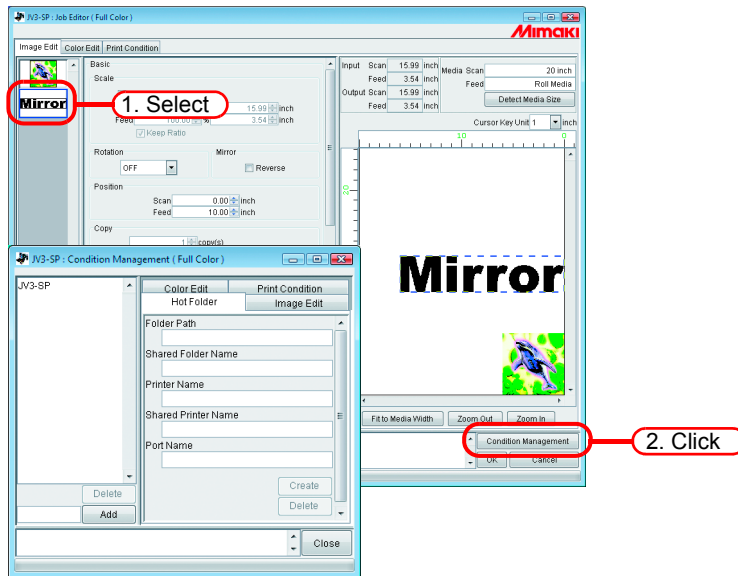


Creating a New Condition Set

Enter the Condition set name.

NOTE ! The following characters cannot be entered.
\\ : * ? “ < > | ! ,

Click **Add** .

Add a new condition set at the list.

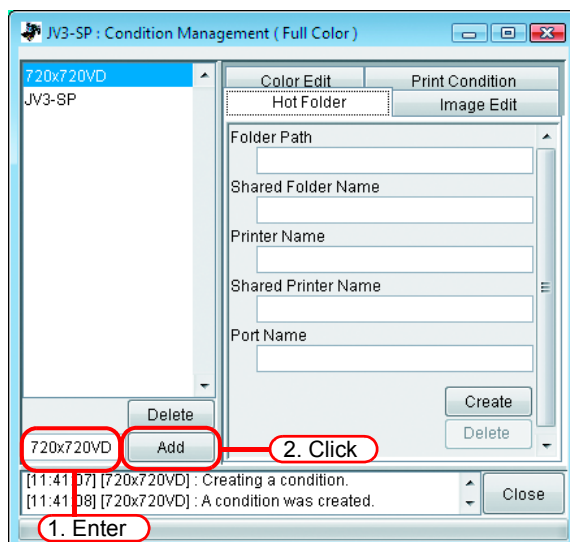

When you edit the registered condition set and register it under the different set name, select the set to edit and click **Add** after changing the set name.

Changing Setting Values of Condition Set


Setting values of various conditions (Image Edit, Color Edit and Print Condition) changeable. Values are acquired from the job that is currently edited in “Job Editor”.

The settings of Image Edit are changed independently, and Color Edit and Print Condition are changed as a set.


- 1 Open the “Condition Management” window.
Open the sub menu of conditions to be changed.
Open [Image Edit] here.
“Job Editor” also displays [Image Edit].




The menu of “Job Editor” is switched to meet the menu shown in “Condition Management”.

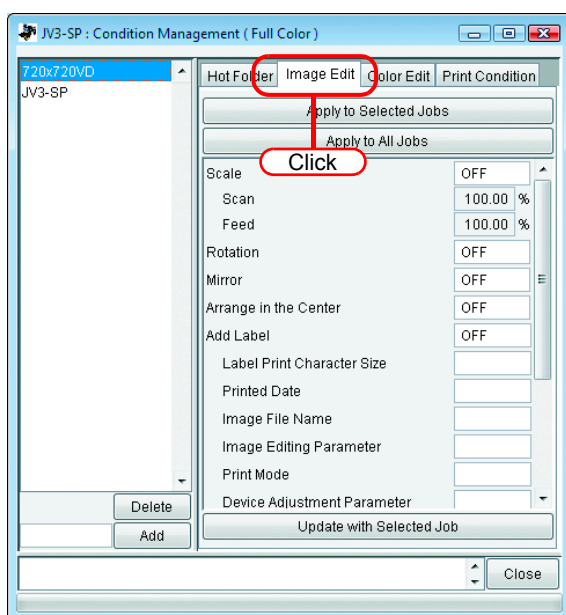

- 2 In “Job Editor”, perform setting of parameters.
The example shows a case where parameters are set as follows:
Scale: 120%
Rotation: 180 degree

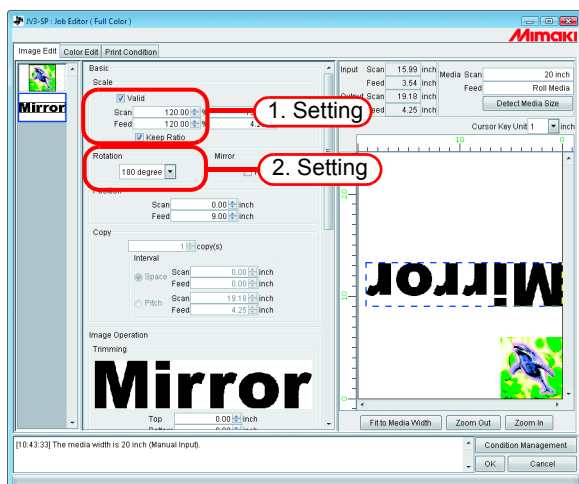

- 3 Click **Update with Selected Job** in the Condition Management window.
The parameters that you have set in “Job Editor” are acquired and indicated.

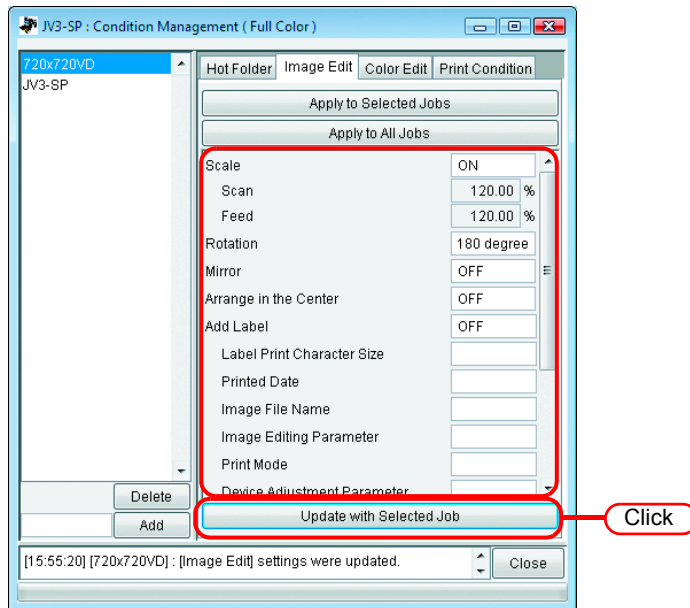

Applying Conditions to the Job

Apply the conditions that you have set in Condition Management to the job.


The settings of Image Edit are changed independently, and Color Edit and Print Condition are changed as a set.

The Image Edit conditions are applied to one or more jobs selected in the “Image Edit” Thumbnail List, or to all jobs.

The conditions of Color Edit are applied to only the job selected in the Thumbnail list of “Color Edit” or to all jobs.


The conditions of Print Condition is applied to all the grouped jobs.

- 1 Open “Condition Management” window.
Open the sub menu of conditions to be changed.
Open [Image Edit] here.
“Job Editor” also displays [Image Edit].

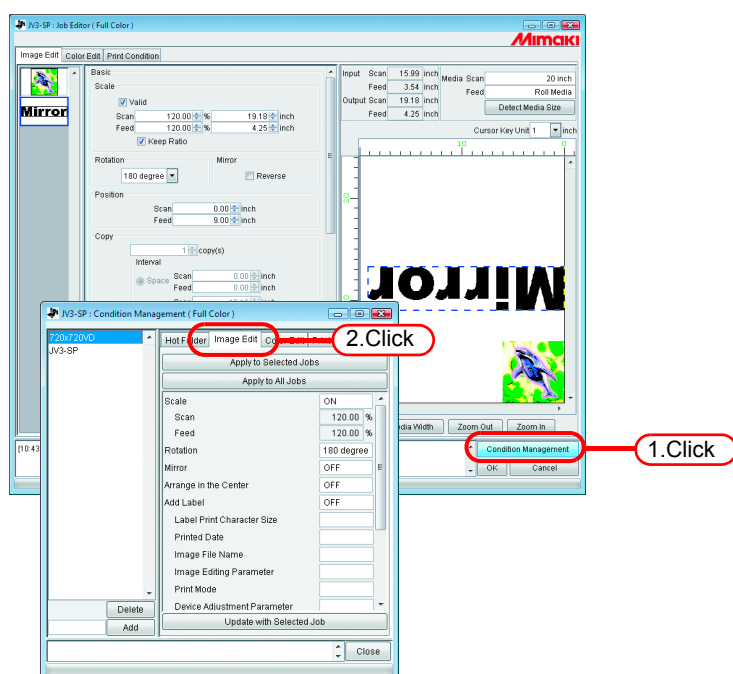


The menu of “Job Editor” is switched to meet the menu shown in “Condition Management”.

- 2 Select a menu for which conditions are to be applied.
Click apply button.
Click **Apply to All Jobs** here.

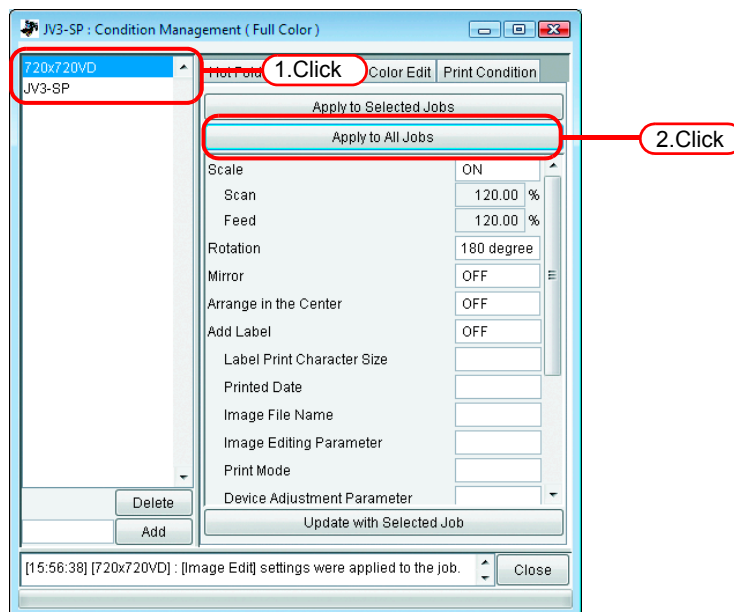

- 3 The conditions are applied to all the jobs in “Job Editor”.

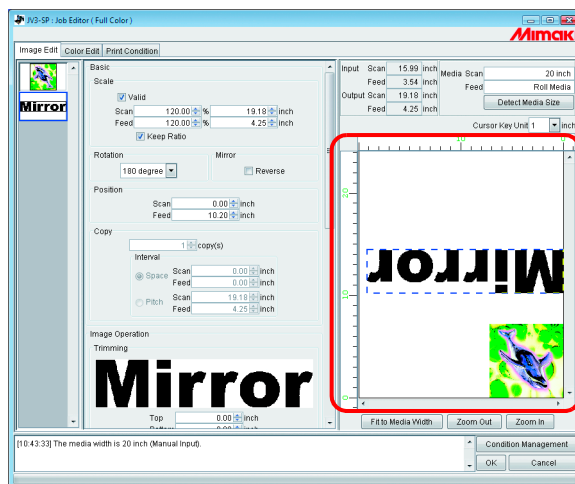

[Hot Folder] Sub menu

You can prepare Hot Folders and Printer driver.

Prepare one Hot Folder and Printer driver for one Condition set.


The various conditions of the job that you have spooled using the prepared Hot Folder or Printer driver reflect the conditions that have been set in “Condition Management”.

Preparing a Hot Folder and Printer driver

- 1 Open the “Condition management” window and click “Hot Folder” tab.
Select the Condition set where a Hot Folder is to be prepared.
Click .


NOTE!

- Do not close Raster Link ProIII forcibly during preparation of a Hot Folder or Printer driver.
- When you access to Hot Folder and shared printer from the Windows Me or earlier, make the condition set name up to 11 one-byte characters.

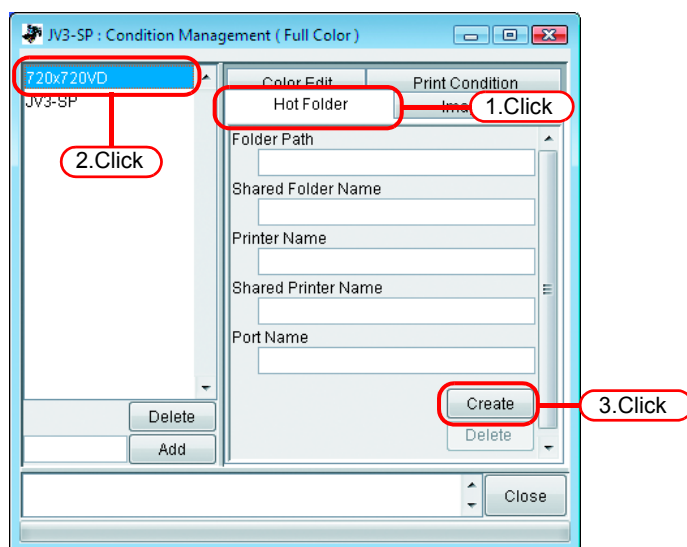

NOTE!



If PC MACLAN is installed on the Raster Link ProIII PC, the [PC MACLAN file server warning] screen may appear while creating the Hot Folder. Click to stop the PC MACLAN file server. The PC is not shut down.

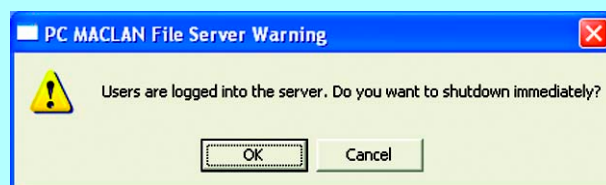

- 2** A Hot Folder and Printer driver are prepared.
Information of the Hot Folder and Printer driver is displayed.

NOTE!

- Never perform any of the following operations with a Hot Folder that has been prepared in Raster Link ProIII.
Otherwise, it will become impossible to uninstall.
Change of the folder name, change of the shared name, cancellation of sharing, deletion of the Hot Folder
- Never perform any of the following operations with a Printer driver that has been prepared in Raster Link ProIII.
Otherwise, it will become impossible to uninstall.
Change of the name, change of the shared name, cancellation of sharing, deletion of the Printer driver.

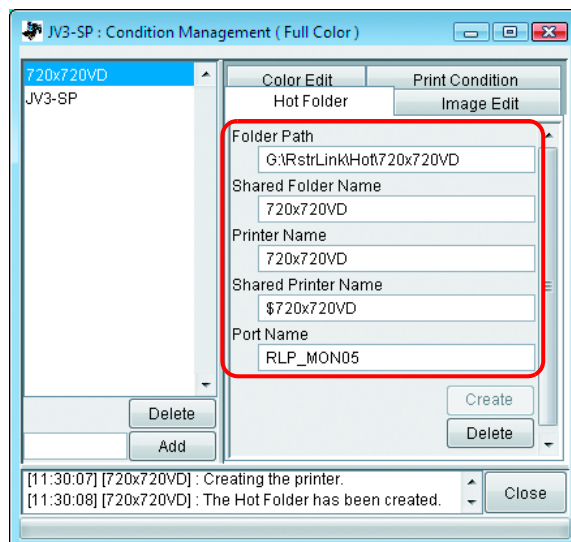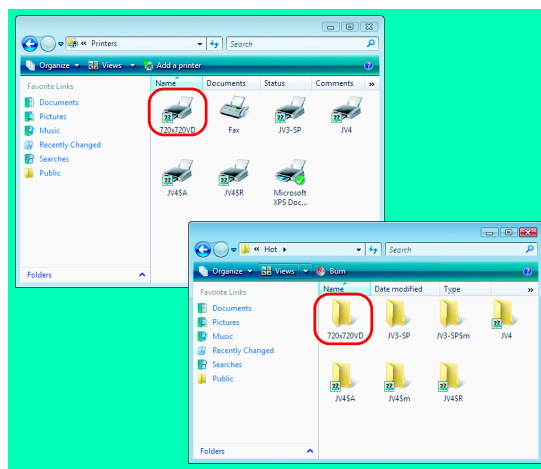

Automatic PC MACLAN setting

If PC MACLAN is installed on the Raster Link ProIII PC, PC MACLAN is set automatically when the Hot Folder and Printer driver are created.

In this case, the following names are given automatically.

PC MACLAN file server

File server name: Raster Link ProIII PC host name

Shared folder name: Condition set name

PC MACLAN print server

Spooler name: Condition set name_Raster Link ProIII PC host name

NOTE!


- The maximum length of the PC MACLAN print server spooler name allowed in the specification is 27 bytes.
If the Condition set name or host name is long, it is cut after the 28th byte. When outputting from the Printer driver from Macintosh, it is recommended not to use a long condition set name.
- When creating a Hot Folder and Printer driver, Raster Link ProIII restarts PC MACLAN. In this case, since the connection with the Macintosh client is cut, problems occur such as files that cannot be deleted remaining in the Hot Folder and so on.
Therefore when creating a Hot Folder and Printer driver, unmount the Hot Folder mounted with Macintosh first.

Deleting a Hot folder and Printer driver

- 1 Open “Condition Management” window.
Click “Hot Folder” tab.
Select the Condition management set where a Hot Folder is to be deleted.
Click .

(NOTE !)

Do not close Raster Link ProIII forcibly during deletion of a hot folder or printer driver.

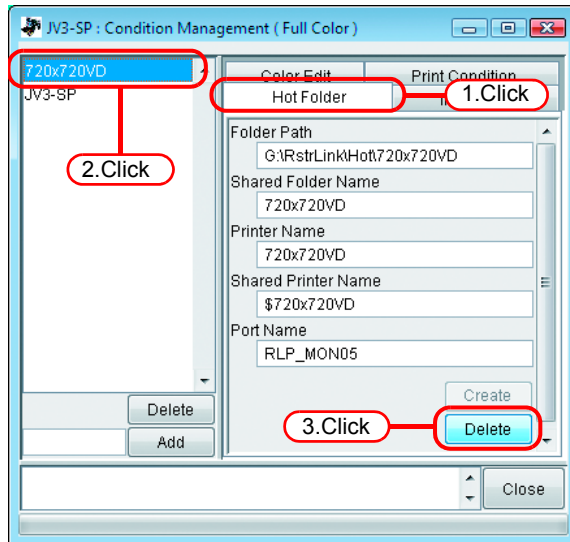

(NOTE !)


If PC MACLAN is installed on the Raster Link ProIII PC, the [PC MACLAN file server warning] screen may appear while deleting the Hot Folder. Click to stop the PC MACLAN file server. The PC is not shut down.



2 A Hot Folder and Printer driver are deleted.

NOTE!

When you mount the Hot Folder of Raster Link ProIII with AppleShare from Macintosh, you could, in some cases, not be able to delete Hot Folders. In this case, unmount the shared volume mounted by Macintosh, and then click **Delete**.

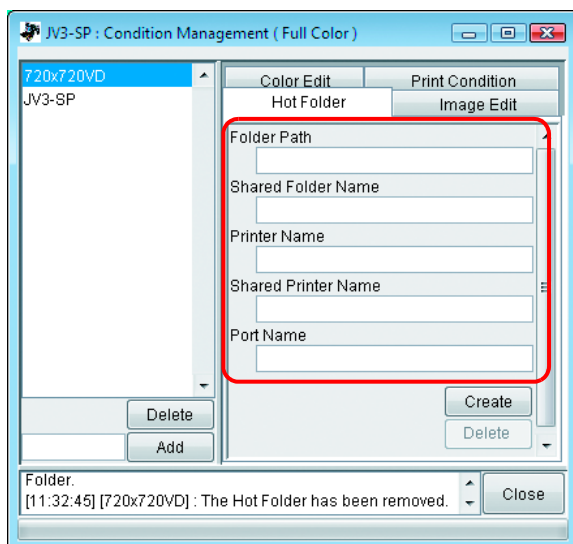

Canceling PC MACLAN settings

If PC MACLAN is installed on the Raster Link ProIII PC, PC MACLAN settings are automatically canceled when the Hot Folder and Printer driver are deleted.

NOTE!

- When deleting a Hot Folder and Printer driver, Raster Link ProIII restarts PC MACLAN. In this case, since the connection with the Macintosh client is cut, problems occur such as files that cannot be deleted remaining in the Hot Folder and so on.
Therefore when deleting a Hot Folder and Printer driver, unmount the Hot Folder mounted with Macintosh first.
- The PC MACLAN file server folder information is not removed automatically. Remove the folder information in accordance with the chapter on using the File Server in the PC MACLAN User's Guide.

Printer Status Display Function

On the “Printer Status”, various printer status are shown, and specify the own setting.
The contents displayed vary with the output port.
“Printer Status” is shown in the Execution Status Screen of each printer.

NOTE!

- Printer status is not updated automatically. If you want to check the latest status, click **Update to Current Status**.
- If you click **Update to Current Status** during printing, it takes time to update the status.

When the Output Port is IEEE1394 or USB 2.0

“General” information

Displays the present status of the printer.

JV3 Series/JV22

GeneralMediaInkHeaterVersion

StatusLocal Idle

Print Length0.0 ft.

Head Wiper StatusUsable

Update to Current Status

JV4/Tx series/DS series

GeneralMediaInkVersion

StatusRemote Idle

Print Length0.0 ft.

Head Wiper StatusUsable

Head Height78.7 mil

Update to Current Status

JV5

GeneralMediaInkHeaterVersion

StatusLocal Idle

Print Length0.0 ft.

Head Wiper StatusUsable

Print Gap118.1 mil

Update to Current Status

1

2

3

4

5

1. Status

Displays the present status of the printer.

Status	Conditions
Not Ready	Initialization is active to start up the printer. Do not print at this status.
Cover Open	The front cover of the printer is raised. Close the front cover.
Local Idle	The printer is in local condition. The printing is not available. Set the printer remote mode for Printing.
Local Active	The printer is running for cleaning or test printing. The printing is not available. Set the printer remote mode for Printing.
Remote Idle	The printer is in remote condition. You may start printing.
Remote Active	Now printing.

2. Print Length

Indicates the actually printed length while printing.

3. Head Wiper Status

Shows whether or not the head wiper can be used.

4. Head Height (JV4 only)

Shows the current head height.

5. Print Gap (JV5 only)

Displays the current print gap.

“Media” Information

Indicates information on the media.

The screenshot shows a dialog box titled "Media" with tabs for General, Media, Ink, Heater, and Version. The "Media" tab is active. It contains several settings:

- Media Size:** Includes radio buttons for "Scan" (selected) and "Auto Detection", and a "Manual Input" section with a value of 47.2 inch.
- Feed:** A dropdown menu currently set to "Roll Media".
- Right Margin:** A spinner box set to 0.0 inch.
- Left Margin:** A spinner box set to 0.0 inch.
- Thickness:** A spinner box set to 7.8 mil.
- Residual:** A dropdown menu set to "OFF".

 At the bottom is an "Update to Current Status" button. Numbered callouts (1-6) on the left point to: 1. Scan, 2. Feed, 3. Right Margin, 4. Left Margin, 5. Thickness, and 6. Residual.

1. Media Size : Scan

Sets the width of the media.

Auto Detection:..... The value detected by the printer is used. The detected media width appears above the dimension line.

Manual Input:..... The value detected by the printer is not used, and the manually entered value is used as the media width. Use this setting when using Raster Link Pro III without connecting to the printer.

When left and right margins are set, the width available for printing is as follows.

Width available for printing = Media Width - Left Margin - Right Margin

NOTE !

When the media width is zero, the layout preview cannot be displayed in the “Job Editor”. When the printer is not connected, enter a value for media width in the manual setting.

2. Media Size : Feed

Displays the media feed size when the media is leaf paper with auto detection.

Displays the roll paper when the media is roll paper or manual input.

3. Right Margin / 4. Left Margin

Sets the margin area (clipping area) at the left and right edges of the media. When the image is arranged in the margin area, that part is clipped and is not printed.

In the “Job Editor” layout preview, the margin area is shown colored gray.

This is effective when using sublimation transfer paper, for checking the layout pre-view screen when you do not want to use poor quality areas at the edges of the media.

This differs from the margin settings (dead space) of the printer itself. Bear in mind the dead space added by the printer.

5. Thickness (JV5 only)

Displays the thickness of the media.

6. Residual (JV5 only)

Displays the media residual when [MEDIA RESIDUAL] of the printer operation panel is set to “ON”.

“Media” information (With the JV3-SP Twin Roll)

When Twin Roll is set in the JV3-SP printer, if media width is set to “Auto Detection”, the width of each media is shown.

NOTE!

- With Twin Roll, left margin and right margin cannot be set.
- With “Manual Input”, the Twin Roll setting is disabled.

JV3-SP Twin Roll

The screenshot shows the 'Media' tab of the JV3-SP printer's settings. The 'Media Width' section has two options: 'Auto Detection' (selected) and 'Manual Input'. The 'Auto Detection' option shows a diagram of a roll of media with three segments labeled 40.8, 9.1, and 40.7. The 'Manual Input' option shows a text field with the value 43.3 and a unit of 'inch'. Below this, there are three more settings: 'Feed' with a 'Roll Media' button, 'Right Margin' with a text field showing 0.0 and a unit of 'inch', and 'Left Margin' with a text field showing 0.0 and a unit of 'inch'. At the bottom right, there is a button labeled 'Update to Current Status'.


Setting	Value	Unit
Media Width (Auto Detection)	40.8, 9.1, 40.7	
Media Width (Manual Input)	43.3	inch
Feed	Roll Media	
Right Margin	0.0	inch
Left Margin	0.0	inch

Update to Current Status

“Ink” information (JV3 series/JV22/JV5)

The ink information that has been set in the printer is displayed.

JV3 Series / JV22 / UJV-110 / JV5

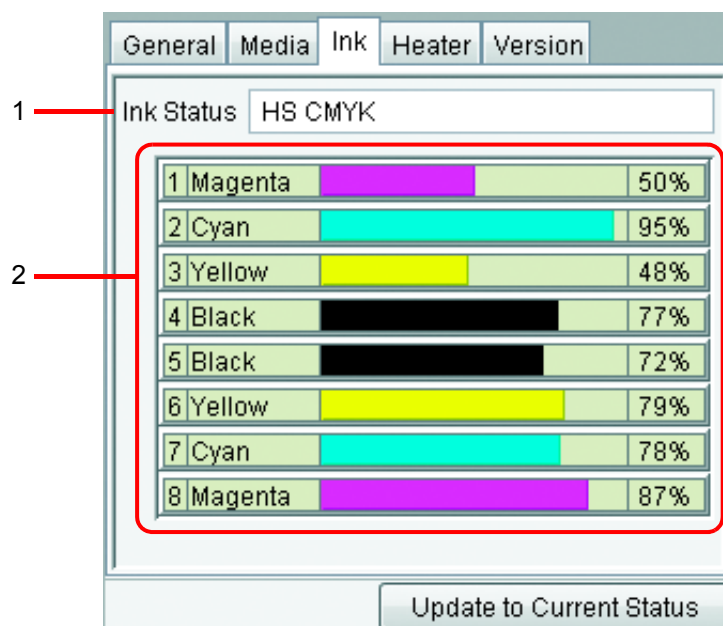

NOTE !

If the ink cartridge is not inserted into the printer, ink information may not be displayed correctly. To display ink information, insert the ink cartridge into the printer correctly.

1. Ink Status

Display the ink set name.

2. Ink color and remaining level for each slot

Display the ink color in each slot, and the ink remaining.

“Ink” information (JV4)

Since ink can be set separately in the rear and front of the JV4 series, information for both rear and front appears.

When performing “RIP Only” when the printer is not connected, then “Printing Only” afterwards, set “Inkset Detection” to “Select”, and select the ink set loaded in the connected printer. Which head is used for printing is determined by the status of the rear/front ink set.

When the rear and front ink sets match

Follows the value set in the printer operation panel ([MAINTENANCE] - [USE HEAD]).

When the rear and front ink sets differ

The head on the side where the Device Profile and ink set match is used.

If they do not match, the value set in the printer operation panel ([MAINTENANCE] - [USE HEAD]) is used.

Inkset Detection: Auto

General Media Ink Version

Inkset Detection ☒ Auto ☐ Select

Rear Pigment CMYKcLm

1	Black	85%
2	Cyan	96%
3	Magenta	28%
4	Yellow	73%
5	Light Cyan	88%
6	Light Magenta	63%

Front Pigment CMYKcLm

7	Black	97%
8	Cyan	54%
9	Magenta	76%
10	Yellow	81%
11	Light Cyan	82%
12	Light Magenta	80%

Update to Current Status

Shows the ink set name currently set in the printer, the ink color in each slot, and the ink remaining.

Inkset Detection: Select

General Media Ink Version

Inkset Detection ☐ Auto ☒ Select

Rear Pigment CMYKcLm

1	Not Detected	0%
2	Not Detected	0%
3	Not Detected	0%
4	Not Detected	0%
5	Not Detected	0%
6	Not Detected	0%

Front Pigment CMYKcLm

7	Not Detected	0%
8	Not Detected	0%
9	Not Detected	0%
10	Not Detected	0%
11	Not Detected	0%
12	Not Detected	0%

Update to Current Status

The rear or front ink set can be selected. When using a Device Profile that is not for an ink set loaded in the printer, select “Select”, and select the Device Profile for print and the same ink set.

NOTE!

If the ink cartridge is not inserted into the printer, ink information may not be displayed correctly. To display ink information, insert the ink cartridge into the printer correctly.

“Heater” information (JV3 series and JV5 only)

Shows the information of the heater provided in the printer.

General	Media	Ink	Heater	Version
Pre-heater				
Heater Temp.		41 C		
Heater Status		Usable		
Print-heater				
Heater Temp.		40 C		
Heater Status		Usable		
Post-heater				
Heater Temp.		50 C		
Heater Status		Usable		
Update to Current Status				

“Version” information

Shows the model information.

General	Media	Ink	Heater	Version
Model		JV3-75SP2		
Engine Version		7.30		
Command Name		MRL-II2		
Command Version		2.40		
Update to Current Status				

When the Output Port is without IEEE1394 or USB 2.0

Only setting is available. Printer information is not displayed.

“Media” information

The width of the media can be set only by “Manual Input”.

It is possible to set the “Left Margin” and the “Right Margin”.

The screenshot shows a dialog box with two tabs: "Media" and "Ink". The "Media" tab is selected. Inside the dialog, there is a section titled "Media Size". Under "Media Size", there are two radio buttons: "Auto Detection" (which is unselected) and "Manual Input" (which is selected). To the right of the "Auto Detection" radio button is a small diagram of a media roll with a dimension line indicating a width of "0.0". To the right of the "Manual Input" radio button is a text input field containing "47.0" followed by a unit selector set to "inch". Below the "Media Size" section, there are three more settings: "Feed" with a dropdown menu set to "Roll Media", "Right Margin" with a text input field containing "0.0" and a unit selector set to "inch", and "Left Margin" with a text input field containing "0.0" and a unit selector set to "inch". At the bottom right of the dialog box is a button labeled "Update to Current Status".

“Ink” information

This can only be set for JV4 series.
Only “Select” can be set for “Inkset Detection”.
Select the ink set loaded in the printer connected.

Media

Ink

Inkset Detection

Auto

Select

Rear

Pigment CMYKLcLm

1	Not Detect	0%
2	Not Detect	0%
3	Not Detect	0%
4	Not Detect	0%
5	Not Detect	0%
6	Not Detect	0%

Front

Pigment CMYKLcLm

7	Not Detect	0%
8	Not Detect	0%
9	Not Detect	0%
10	Not Detect	0%
11	Not Detect	0%
12	Not Detect	0%

Update to Current Status

Appendix

The color acquisition function and supported scanners

In Raster Link ProIII, it is possible to simulate and print original color that is scanned from document such as comprehensive layouts (color acquisition function).

This document explains the items to set in the scanner driver when using the color acquisition function. According to your scanner model, follow the scanner driver setup procedure on this manual.

Supported scanners

The following scanners are supported with the Raster Link ProIII color acquisition function.

EPSON Perfection 4990 Photo

NOTE!

- Refer to the manual packaged with the scanner for how to operate the scanner and scanner driver.
- When using color acquisition function of Raster Link ProIII use the setting value described in this manual.
It has an influence on the accuracy of the acquired color.
- When using a scanner for functions other than color acquisition function of Raster Link ProIII, the default setting value of the scanner driver is changed.
When using a scanner for color acquisition function of Raster Link ProIII, check the setting value.


Scanner driver settings

In the Raster Link ProIII color acquisition function, select the type of scanner, and click **Start scanning** . The scanner driver screen appears.


Scan the original document with the settings explained below.

With the EPSON Perfection 4990 Photo


- 1 Soon after the scanner starts, the scanner driver screen appears. Make the following settings and click **Configuration...** .

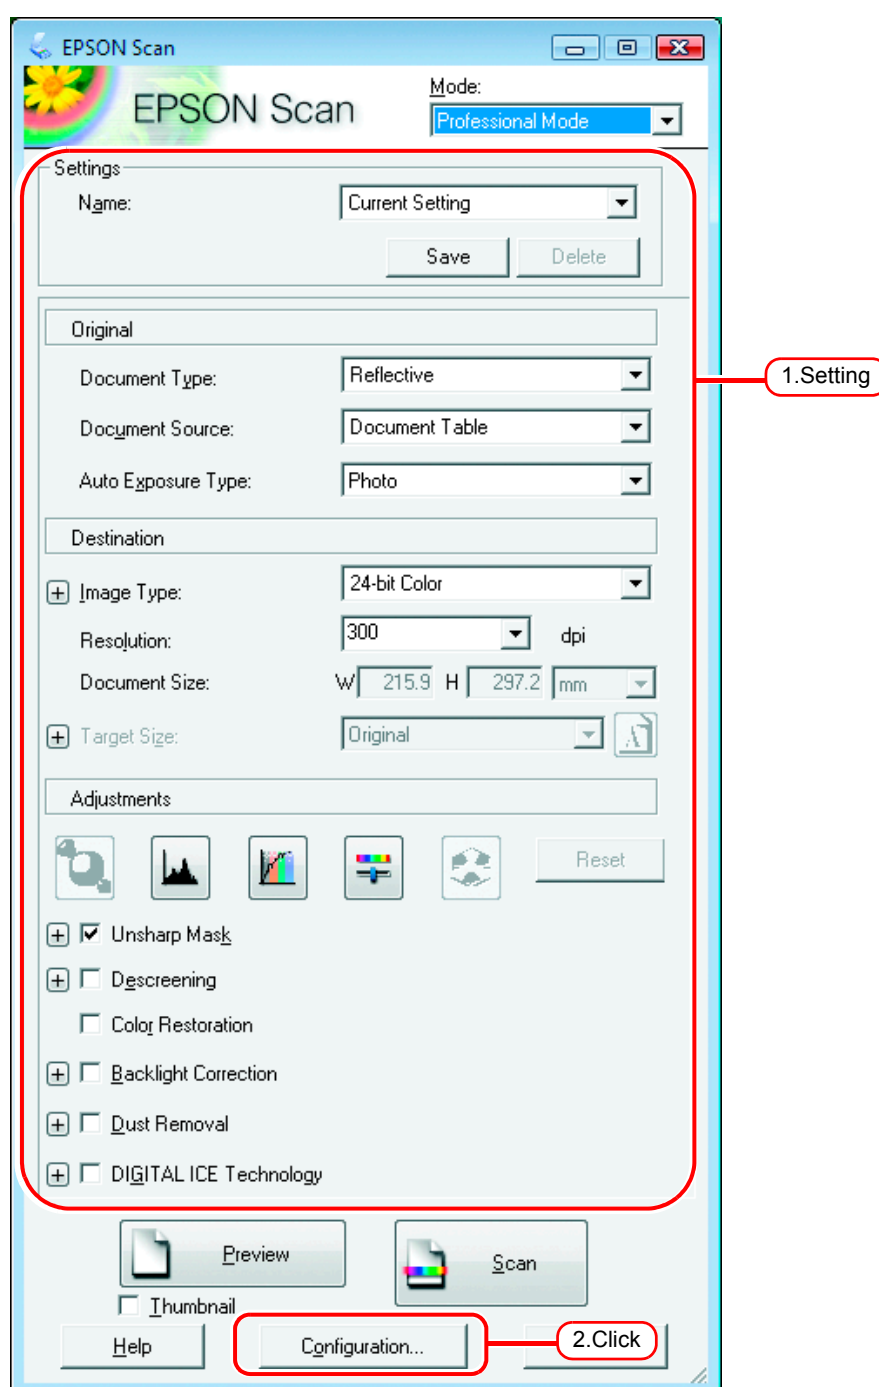


- 2** On the [Configuration] screen, select [No Color Correction] in the [Color] menu, and click .

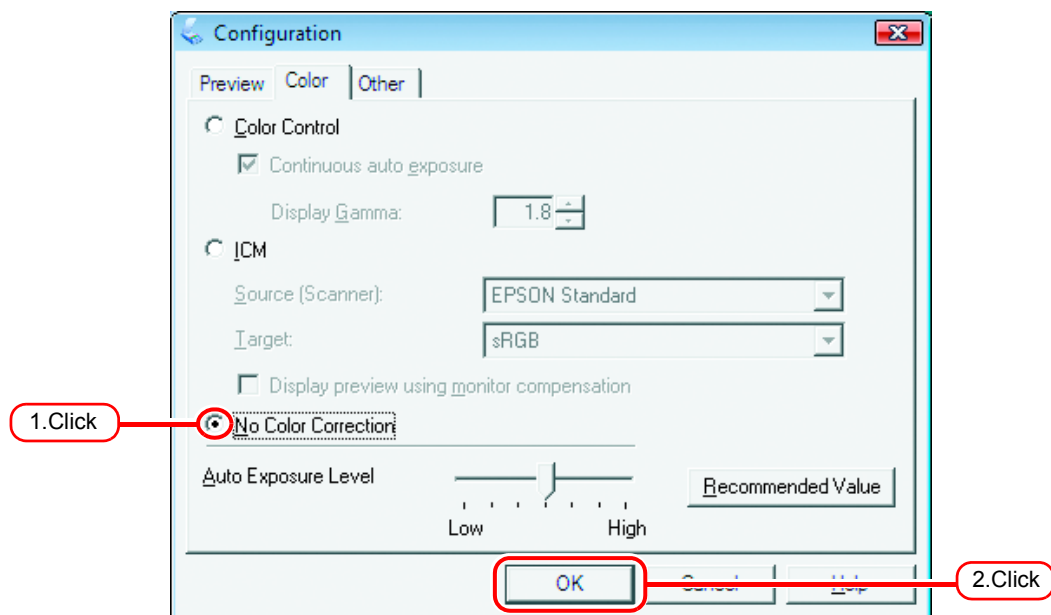


- 3** Click .
The image is scanned

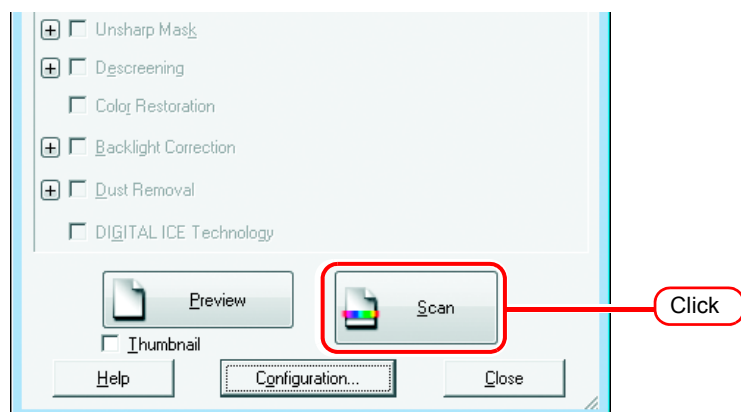


- 4** When the image is scanned, the scanner driver screen appears again. Click without changing the settings.

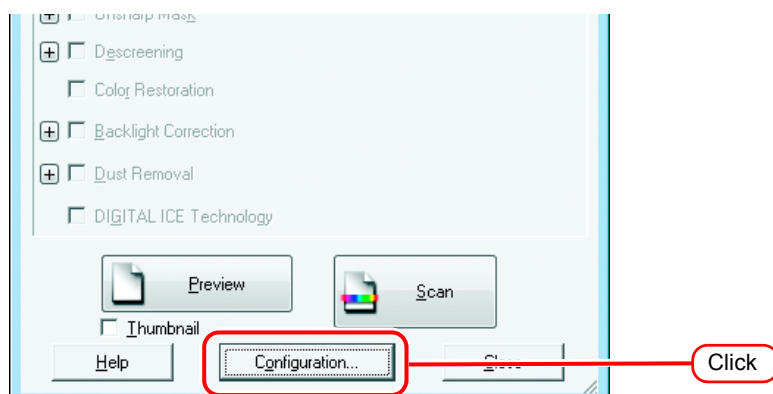

- 5** On the [Configuration] screen, make the following settings in the [Color] menu, and click .

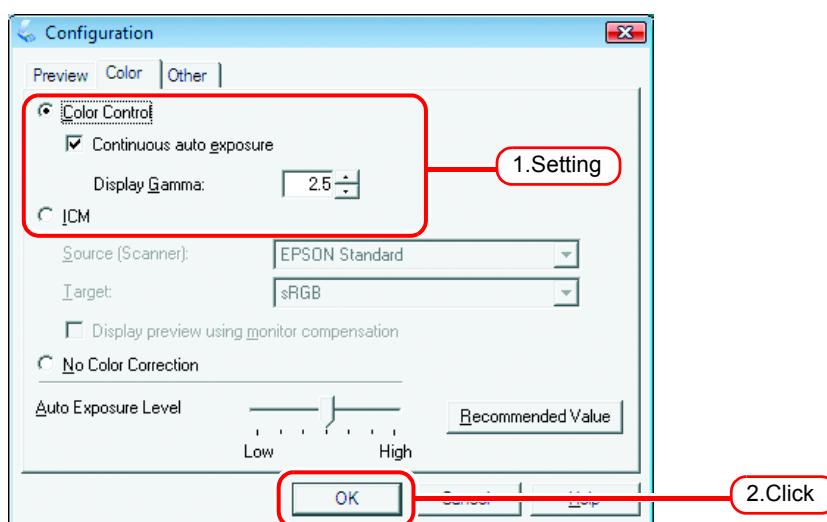

- 6** Click .
- The image is scanned again.

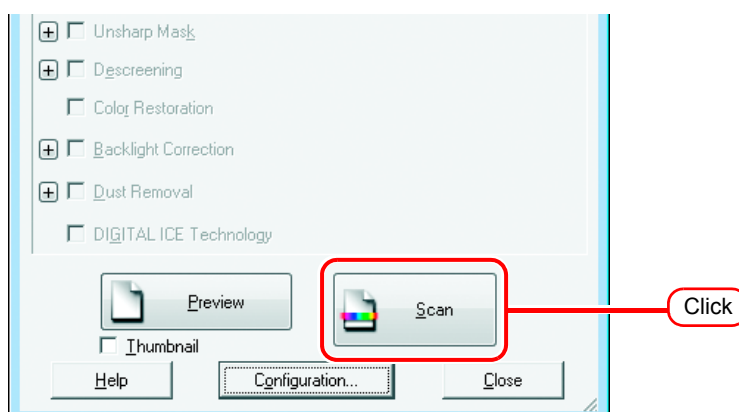

This completes the scanning operation.

Referring to “Acquire the color from original document (Scan color) (☞ P.113)”, carry out the procedure for the color acquisition function.



D201723-11-19042008

Printed in Japan

© 2008 MIMAKI ENGINEERING CO., LTD. Allright reserved.

EA

IT

SW: 1.20