

RasterLink Pro **5** SG

RasterLink Pro **5** TA

RasterLink Pro **5** IP

Software RIP

RasterLinkPro5

Reference Guide

Common features for every printer

This guide explains about features of RasterLinkPro5 which are common for every printer.

The kinds of manuals and how to use them

This product comes with following manuals.

Installation Guide

This manual explains how to install and set up RasterLinkPro5 SG/RasterLink Pro5 IP/RasterLinkPro5 TA.

Network Connection Guide

This manual explains how to set computer to connect to RasterLinkPro5 via network. (This is provided in PDF file in the manual CD.)

Reference Guide

There are two kinds of reference guides. One is for common settings to each printer and the other is for special settings to each printer. They explain necessary setting items of the functions and operation in order to use RasterLinkPro5 SG/RasterLinkPro5 IP/RasterLinkPro5 TA. Read the proper reference guide for your printer. (This is provided in PDF file in the manual CD.)

you are now reading this manual.

Firmware Update Operation Manual

This manual explains how to use the update software for MIMAKI printer. (This is provided in PDF file in the manual CD.)

Notice

- It is strictly prohibited to write or copy a part or whole of this document without our approval.
- The contents of this document may be subject to change without notice.
- Due to improvement or change of this software, the description of this document could be partially different in specification, for which your understanding is requested.
- It is strictly prohibited to copy this software to other disk (excluding the case for making backup) or to load on the memory for the purpose other than executing it.
- With the exception of what is provided for in the warranty provisions of MIMAKI ENGINEERING CO., LTD., we do not assume any liability against the damages (including but not limited to the loss of profit, indirect damage, special damage or other monetary damages) arisen out of the use or failure to use of this product. The same shall also apply to the case even if MIMAKI ENGINEERING CO., LTD. had been notified of the possibility of arising damages in advance. As an example, we shall not be liable for any loss of the media (works) made using this product or indirect damages caused by the product made using this media.

Adobe, the Adobe logo, Photoshop, Illustrator and PostScript are trademarks of Adobe System Incorporated.

Apple, Macintosh, Power Macintosh, Mac OS and Mac OSX are registered trademarks of Apple Inc.

Microsoft, Windows, Windows NT, Internet Explorer, Windows 2000, Windows XP, Windows Vista, Windows 7, Windows 8, and Windows 8.1 are trademarks of Microsoft Corporation and other countries.

PC MACLAN is registered trademark of Miramar Systems, Inc.

All trademarks of Corel used in this document are trademarks or registered trademarks of the Corel Corporation and its related companies in Canada, the United States and/or other countries.

All brand names and product names are trademarks or registered trademarks of their respective companies.

About this Instruction

This instruction describes how to operate RasterLinkPro5.

Notations

Menu items are enclosed in quotation marks like “Full Color”.

Buttons in dialog box are framed like .

Symbol



Indicates a caution you must observe when operating the product.



Describes a useful procedure.



Shows the number of the page that has related contents.

About Terms

Job : A “Job” means a printing file that is handled by RasterLinkPro5. Once data in any format from application software such as Adobe Illustrator is spooled in RasterLinkPro5, it is registered in RasterLinkPro5 and becomes a job.

Scan: “Scan” on the RasterLinkPro5 means the head moving direction (Y direction) of the printer.

Feed: “Feed” on the RasterLinkPro5 means the media moving direction (X direction) of the printer.

About Dialog

This manual is based on RasterLinkPro5 SG. Please replace software and printer names used in this manual with those of the software and printer you are using.

Table of Contents

The kinds of manuals and how to use them.....	2
Notice	3
About this Instruction.....	4
About RasterLinkPro5	9
Outline of Printing Methods	12
Printing with the Printer Driver	12
Printing Using Hot Folder	13
Printing Using the Drag and Drop Function	13
Installing Profiles	14
What is the profiles?.....	14
Starting the Profile Manager.....	14
About the Device Profile Screen	15
About the Input Profile Screen	17
Installing the Device Profile	18
Installing the Input Profiles	20
User Comment.....	22
Converting device profile.....	23
Uninstalling the Device Profiles.....	26
Uninstalling the Input Profiles.....	28
Closing the Profile Manager.....	30
Printer Management Function.....	31
Starting printer management.....	32
Printer Management screen.....	33
Adding a printer.....	34
Automatic PC MACLAN port setting	40
Resetting a printer.....	41
Deleting a printer.....	43
Canceling PC MACLAN settings.....	44
Resetting the output port.....	44
With an USB 2.0 port	45
With an IEEE1394 port	46
With File	48
Starting RasterLinkPro5	49
Quitting RasterLinkPro5	50

Change Work Folder	51
Job types	52
Full Color	52
RIP Separation	52
Application Separation.....	52
Multifunction.....	52
MRL	52
About the Main Screen.....	53
Job List Screen (Full Color, RIP Separation, Application Separation)	53
Job List Screen (Multifunction)	56
Job List Screen (MRL).....	57
Execution Status Screen.....	59
Changing the Job Execution Order.....	61
Output Method	63
Spooling of graphics data	64
About the Spooling Method of Graphics Data.....	64
When Spooling Images from the [Open] Menu of RasterLinkPro5	65
When Spooling Images by Drag and Drop	67
When Spooling Images by Using Hot Folder.....	69
When Spooling Images Using the Printer Driver	71
Editing a Job	74
Duplicate jobs.....	75
Back up and restore jobs	76
Backup.....	76
Restore	77
Changing the output printer.....	79
Printing	81
Printing Full Color Data.....	81
Immediate print.....	82
RIP and Print	83
RIP only	84
Print only.....	85
Printing MRL	86

Printing Multifunctional Data	87
Cut after Immediate Print	88
Cut after RIP and Print.....	89
Cut after Print.....	90
Cut Only	91
Printing by Designating the Number of Printed Sheets.....	92
Automatically Executing RIP and Output Processing	93
Canceling RIP and Output processing	94
Canceling All RIP and Output Processing.....	96
Create a color chart.....	97
About color chart	97
Example of color chart	97
Create RGB or CMYK color chart	99
Utilizing method of RGB/CMYK color chart	99
Specify the creating condition of the color chart	99
Create the job of the color chart.....	103
Create the PDF file of RGB/CMYK color chart.	104
Create the color chart of special color.....	105
Utilizing method of color chart of special color.....	105
Create the condition set for the color chart of special color	105
Specify the creating condition of the color chart of special color	106
Create the job of the color chart.....	110
Add the color to use for printing to "Color replacing set"	110
Create the swatch library	112
Open the created swatch library in the application	114
Job Property	115
Option Setting	116
[Job Control] Menu	116
[Auto Execution] Menu	118
[Performance] Menu.....	119
[Display] Menu	120
[Hot Folder] Menu	121
[Disk] Menu	123
[Printer] Menu (JV5 Series).....	124
Trouble Shooting	125
Error message.....	125


Precautions when setting security of the PC for installing RasterLinkPro5	138
CD menu screen does not appear when installation CD is inserted into the PC	138
When License Activation / Program Update / Profile Update is used	138
RasterLinkPro5 does not read images	139
If an error occurred in the RasterLinkPro5 screen display	140
[Method to solve 1]	140
[Method to solve 2]	140
For Windows XP	140
For Windows Vista	142
Caution about Application Software	144
About Adobe Photoshop	144
Profile embedded in data	144
About Adobe Illustrator	144
Drop shadow and Transparency	144
Letters cannot be plotted	145
Letters become italic	145
A part of the object around the letters cannot be plotted	145
Circles or letters become polygonal	146
A jaggy contour occurs in characters to which a transparent effect is applied	148
Some objects that are applied transparency effect have unnecessary lines or some parts of the object do not appear	148
Gradation Tone Jump is prominent	149
Illustrator CS, CS2, CS3 (When saving EPS)	149
Illustrator CS, CS2, CS3 (When printing)	150
Linked data isn't printed	
"PC MACLAN -" letter string is printed after the printing	151
The surrounding image of EPS file saved by Illustrator 10 is cut off	152
The image size differs between on application and on RasterLinkPro5	152
Caution about Mac OS X	153
Print PDF documents	153
Caution about using hot folder with Macintosh	154
Improvement of the spooling speed when printing from the application software with Macintosh	155
In case of Mac OS 9	155
In case of Mac OS X	157

About RasterLinkPro5

RasterLinkPro5, which is application software, receives data in PostScript3 format and supplies printing data to an ink jet printer made by MIMAKI ENGINEERING.


Client PC

Sends image data to RasterLinkPro5 installed PC.

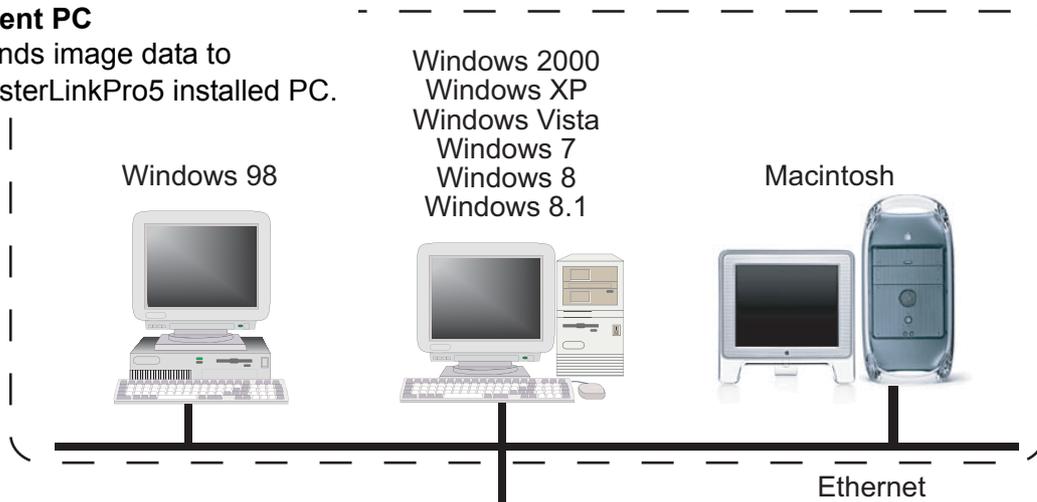

RasterLinkPro5 PC

RasterLinkPro5 installed PC.

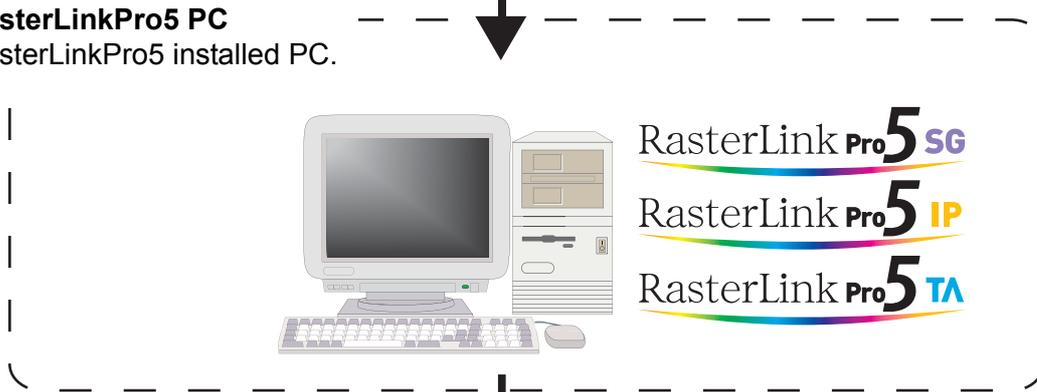

Mimaki Printer



Color Profile makes color matching easier

Installed Color Profile meets to various kinds of media and realizes the best print without complicated settings.

Color adjustment function which enables delicate representation

RasterLinkPro5 has a function of adjustment to color (the tone-curve, contrast of each color, and density of CMY ink).

It copes with various media flexibly.

Supported printers

RasterLinkPro5 is intended for use with MIMAKI ENGINEERING ink jet printers.

Up to 4 printers can be connected at the same time.*1

RasterLinkPro5 provides a number of different functions according to the features of the printer. Functions and operational settings such as print condition and job editing differ according to the printer. Therefore, there is a different Reference Guide for each printer type. The Reference Guide is provided in PDF file in the manual CD.

Input/Output data

Input data

PostScript Level 3(PS file), EPS, MRL, TIFF, JPEG, BMP,
PDF (PDF 1.5 or later is not allowed *2)

Data formats other than MRL are automatically recognized.

AI files are not supported.

Alpha channel can not be used with TIFF data.

PostScript Font

Standard 60 European fonts

Adding fonts are not allowed.

Application

Adobe Illustrator 8, 9, 10, CS, CS2, CS3, CS4, CS5, CS6, CC

Adobe Photoshop 5, 6, 7, CS, CS2, CS3, CS4, CS5, CS6, CC

Maximum spool processible image size

Width : 10871 mm (428 inch)

Length : 10871 mm (428 inch)

Maximum RIP processible image size

Width : 50 meters

Length : 50 meters

Important!

Some output data even within above sizes may not be ripped, depending on the kind of data.

In this case, change the data or divide the data by application software for printing.

The largest image size which can be tiled ^{*3}

- Width: 50 meters, Length: 50 meters
- When the data width size exceeds the printable range of a printer, it is necessary to use the tiling function.
- Image sizes for tiling differ according to output resolutions.
- The maximum size of tiling-supported images depends on the input data. If the input data is too complex, the maximum image size may not be printed.

Important!

- If the print resolution of the image is 1,440 x 1,440 dpi, the maximum printable image size is as follows.

	Width	Length
4-color model	2m	50m
6-color model	1m	50m

- Even within the processible image size, the maximum size for width may be restricted depending on the printer specifications.
Also even when using specialty ink (white ink and the like), the maximum size for width may be restricted depending on the resolution.
Please check the "Max. printing width" in the manual of your printer.

*1: If multiple printers are connected with an IEEE1394 interface, the same number of IEEE1394 interface cards are required.

*2: The PDF version and Acrobat version are as follows.

PDF 1.3 ----- Acrobat 4

PDF 1.4 ----- Acrobat 5

PDF 1.5 ----- Acrobat 6


PDF files saved with Illustrator are not supported.

*3: Some printers do not support the tiling function.

Outline of Printing Methods

This is an outline of printing methods using RasterLinkPro5.


To print the job, operate the PC which is installed RasterLinkPro5.

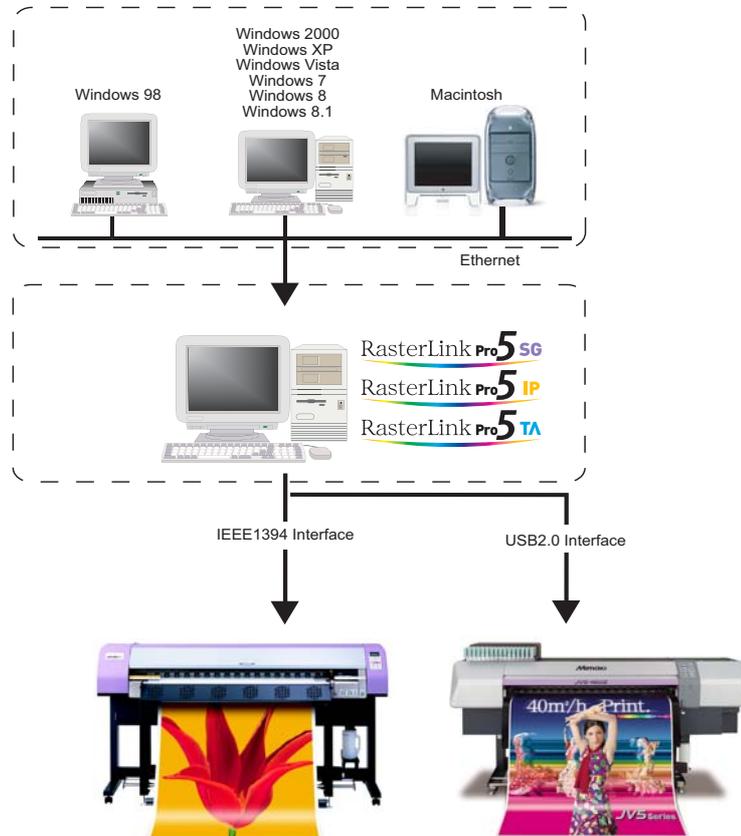

Printing with the Printer Driver

In order to print using the application software from RasterLinkPro5-installed PC, use the driver that are installed along with RasterLinkPro5.

RasterLinkPro5-Installed PC

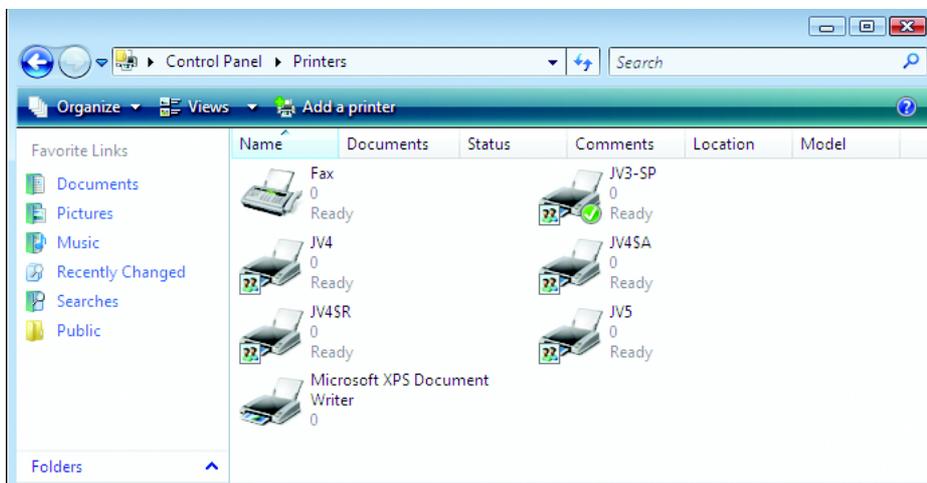


Printing Using Hot Folder

The hot folders are found in the installation folder of RasterLinkPro5.

Since the hot folders installed along with RasterLinkPro5 are shared in the network, Windows client PCs can be connected to hot folders.

Transferring of the job to RasterLinkPro5 becomes easier by dragging the job from the client windows PC to the hot folder.

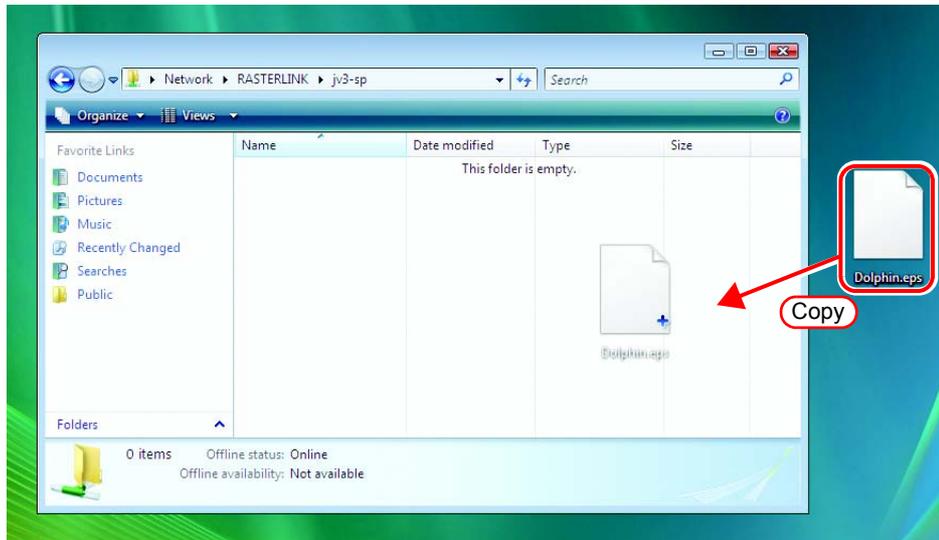

Printing Using the Drag and Drop Function

You can open a job easily by dragging and dropping it onto the screen of RasterLinkPro5.

Important!

When the OS of the PC with RasterLinkPro5 is Windows Vista/ Windows 7/ Windows 8/ Windows 8.1, if you execute RasterLinkpro5 with the administrative right, you cannot spool the job by drag and drop of file.

Installing Profiles

What is the profiles?

The predefined input image colors or the print colors are called as the profile.

There are two kinds of profiles, Input profile and the Device profile.

Input profileThis profile is used for RIP to get the color information of an image.

Device profileThis profile is used for color reproduction that maximizes the printer ability based on the color information of the input profile. There are many profiles of this type for respective print conditions such as data media used and print resolution. In addition to the color information, the printing environment-related information such as the heater temperature is also contained.


Starting the Profile Manager

Profile Manager is a tool to be used to install or uninstall a profile.


In order to start RasterLinkPro5, you are required to install at least one profile of each of the following types:

- Device profile of the model to be used
- Input RGB profile
- Input CMYKprofile


- 1 Select “Profile Manager”.
[Start] - [All Programs] - [Mimaki RasterLinkPro5] - [Profile Manager] menu

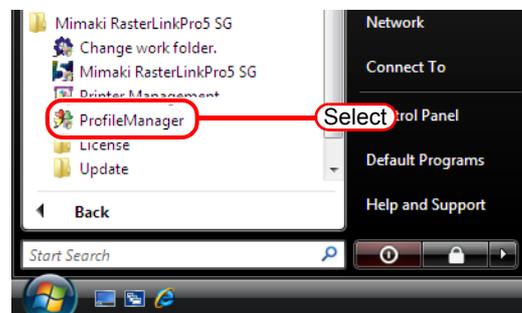

- 2 The main screen of Profile Manager is displayed.

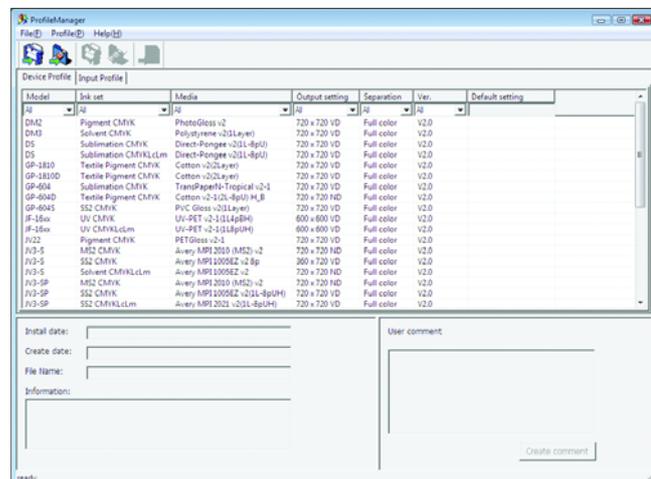

About the Device Profile Screen

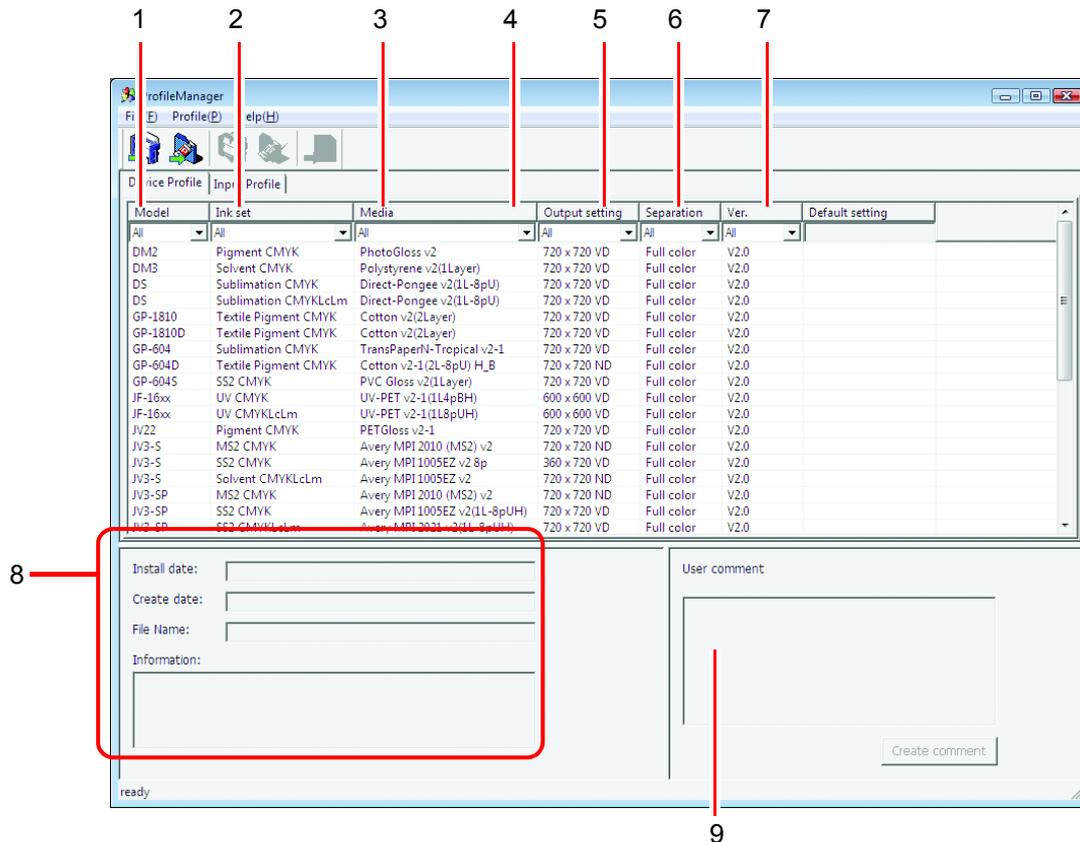

1. Model

Indicates models.

Model(color mode) is displayed when there are 2 or more color modes in a model and profile version is v3.0.

2. Ink set

Indicates ink sets.

3. Media

Indicates media.

4. Output setting

Indicates output settings (resolution and dot type).

5. Separation

Indicates separation methods. Full color and Artwork are available.

6. Ver.

Indicates profile versions.

v1.0:Color matching compatible with the ICC profile can be used.

v2.0:Color matching compatible with the ICC profile can be used.

v3.x:Color matching compatible with the ICC profile can be used.

Created with 16-bit color data.

7. Default setting

The recommended value of pass and the value of overprint added to the version v3 profile are displayed.

8. Profile information


Displays the installation date, creation date, file name of the profile itself and information of the selected profile.

9. User comment

Comments are writable to selected profiles.

When you select a profile, this User comment column displays the comment that you wrote on the profile.

About the Input Profile Screen

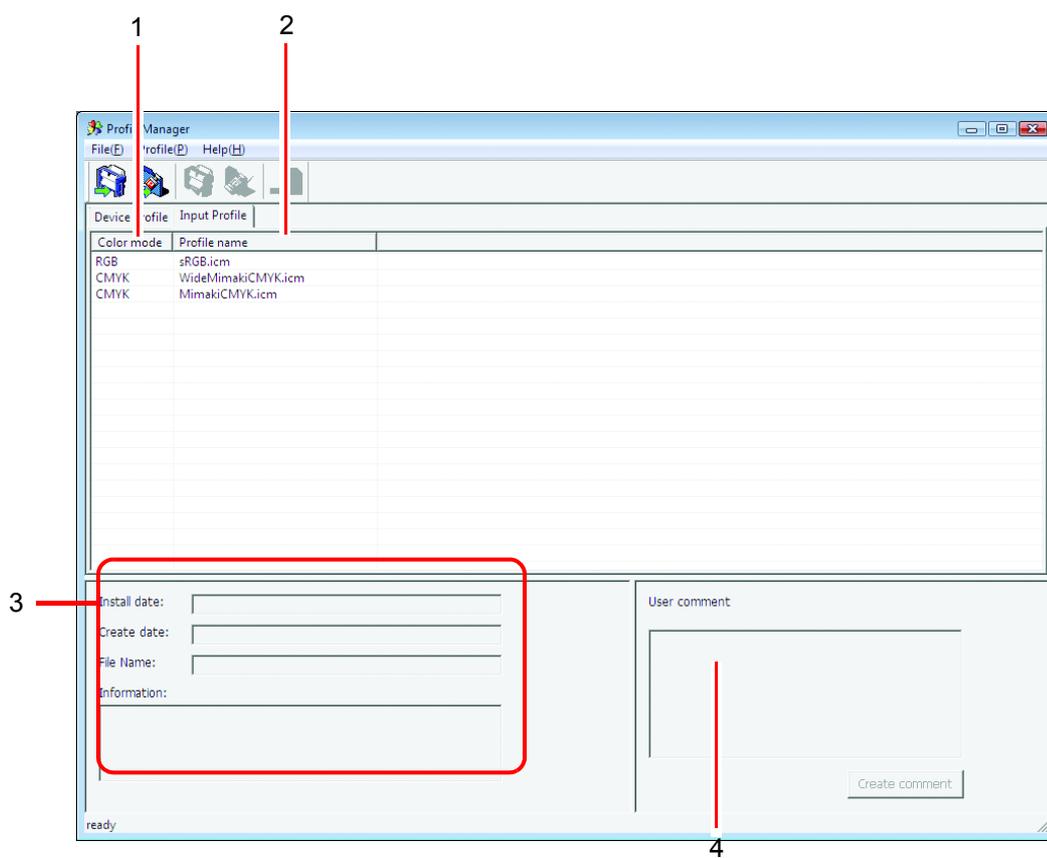

1. Color mode

Indicates color modes which input profiles correspond.

2. Profile name

Indicates profile names.

3. Profile information

Indicates the installation date, creation date, file name of the profile itself and information of the selected profile.

4. User comment



Comments are writable to selected profiles.

When you select a profile, this user comment column displays the comment that you wrote on the profile.

Installing the Device Profile

- 1 Select the [Install device profiles]. [Profile] - [Install device profiles] menu Or click the button as illustrated.


The “Browse for Folder” dialog is displayed.

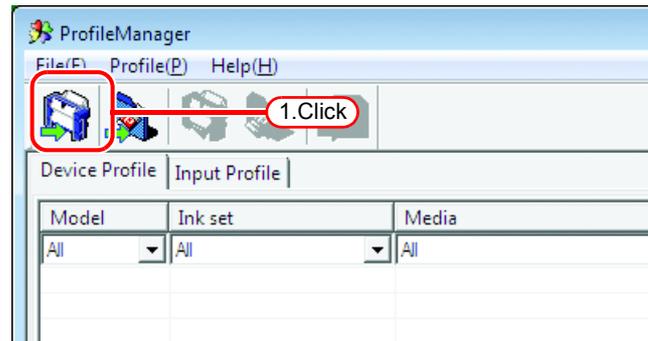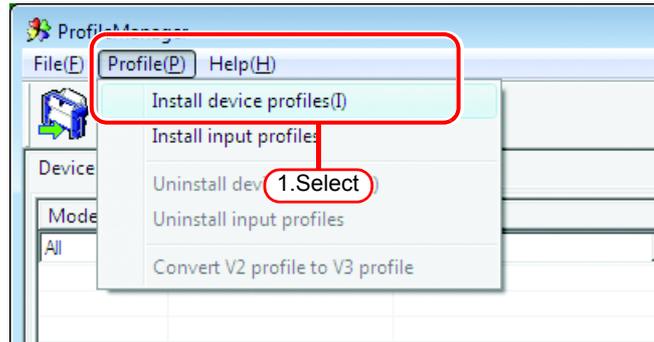

- 2 Select the folder of the device profiles to be installed.

Click button.

The “Select install device profiles” window is displayed.

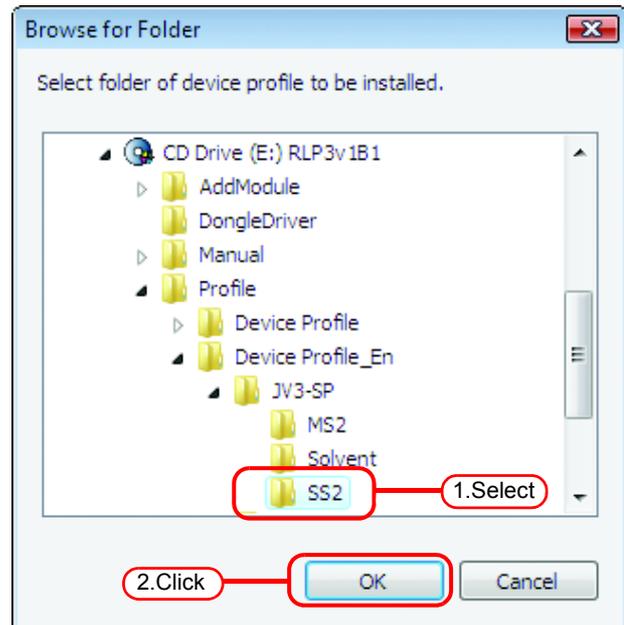


3 The upper area displays a list of device profiles in the folder that you selected.

Select profiles to be installed.


Click  button.

The selected profile moves into the lower area.

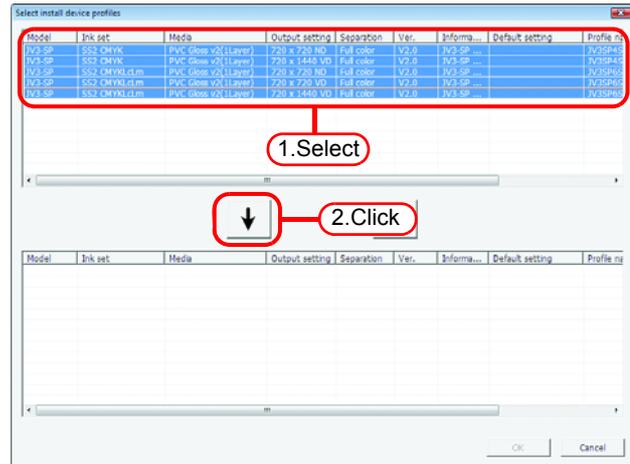


4 Click  button.

The selected files are installed.

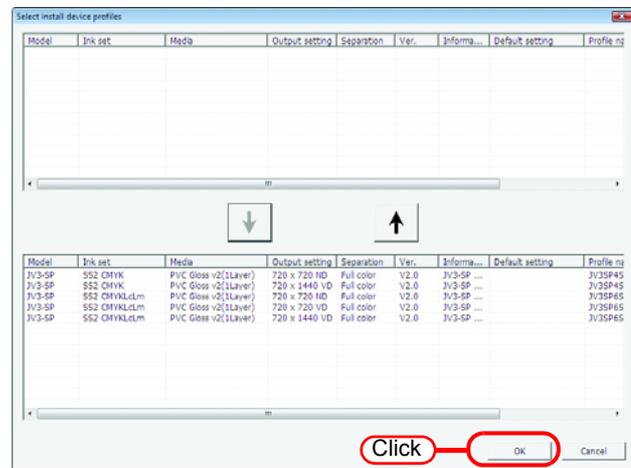



5 The Device Profile screen indicates a list of the device profiles installed.

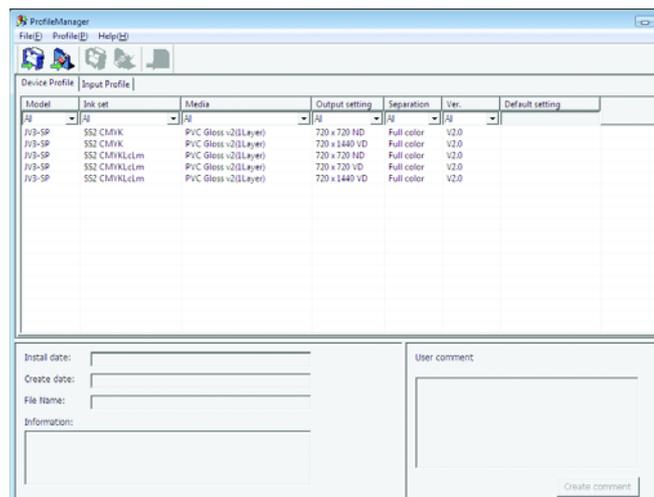

Installing the Input Profiles

- 1 Select the [Install input profiles].
[Profile] - [Install input profiles] menu
Or click the button as illustrated.


The “Browse for Folder” dialog is displayed.

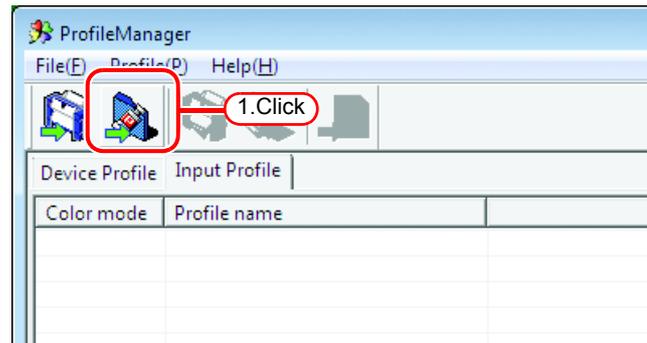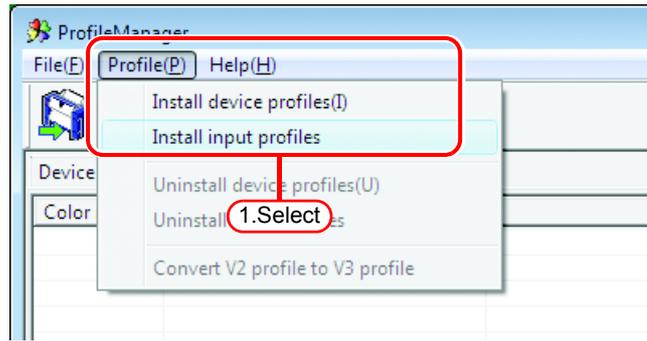

- 2 Select the folder of the input profiles to be installed.

Click button.

The “Select input profiles” window is displayed.

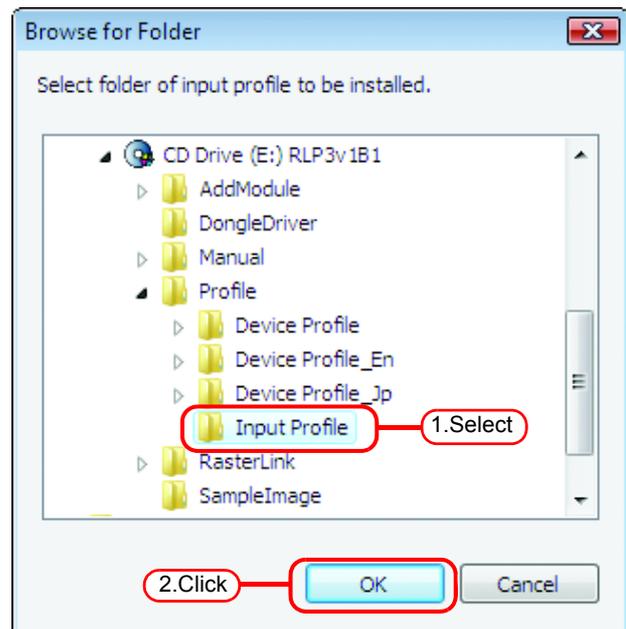


3 The upper area displays a list of input profiles in the folder that you selected.

Select profiles to be installed.


Click  button.

The selected profiles moves into the lower area.

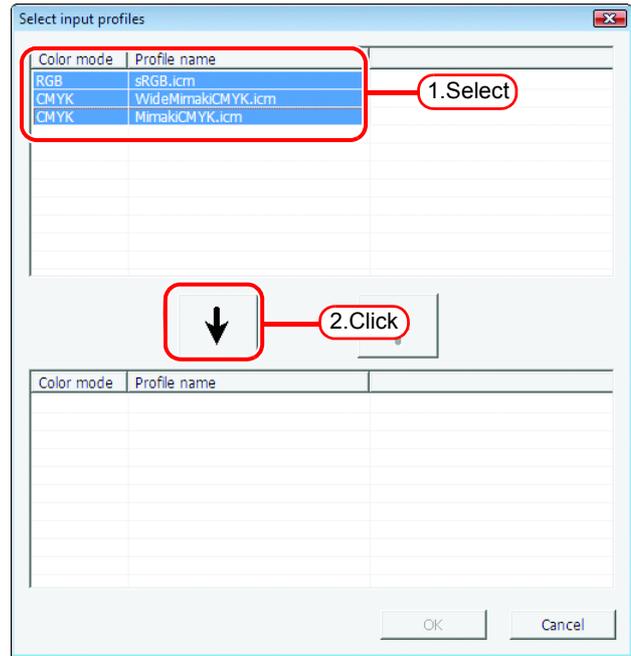


4 Click  button.

The selected files are installed.

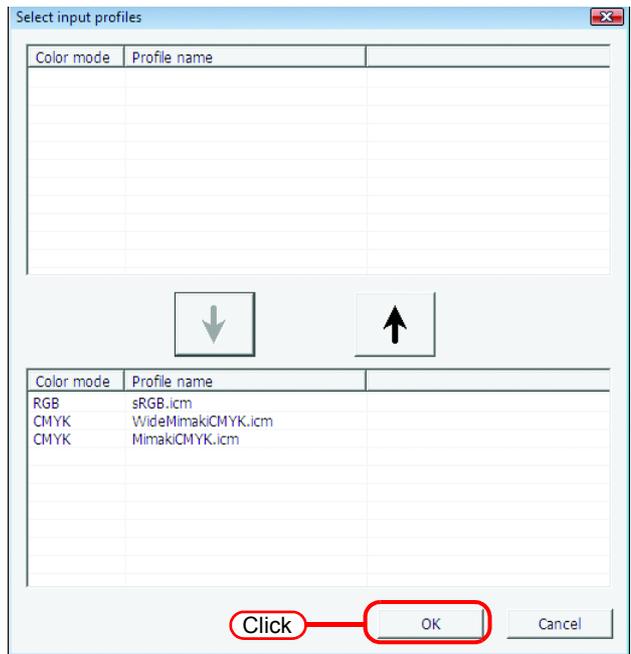

5 The Input Profile screen indicates a list of the input profiles installed.

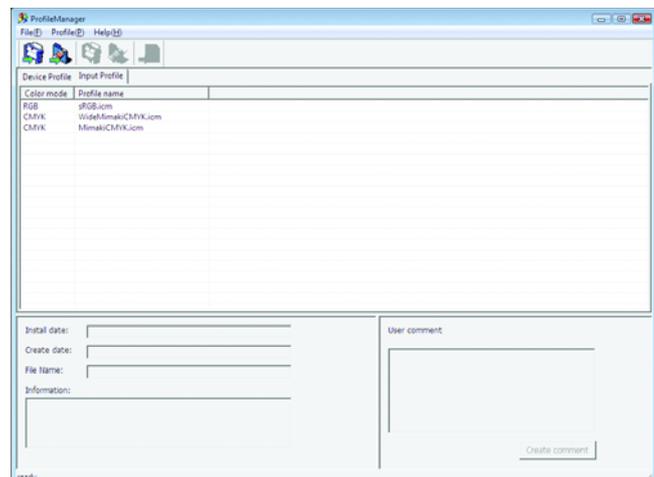

User Comment


You can write a comment on each profile.

You are advised to note down features of profiles for your convenience.

- 1 Select one profile on which you would like to write a comment.


Click **Create Comment** button.

The “Input memo for profile” dialog is displayed.

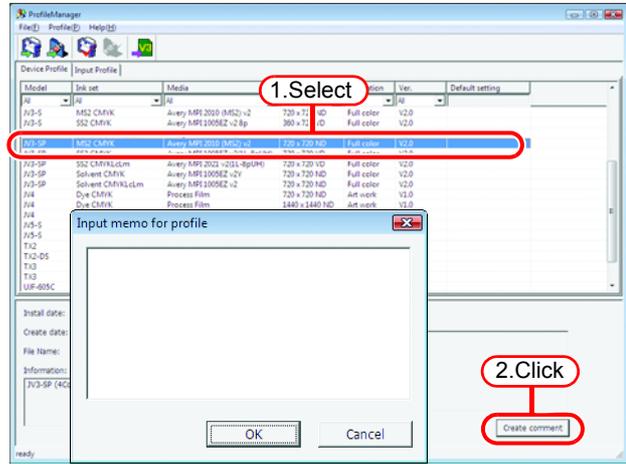


- 2 Input a comment in the “Input memo for profile” dialog.

Click **OK** button.

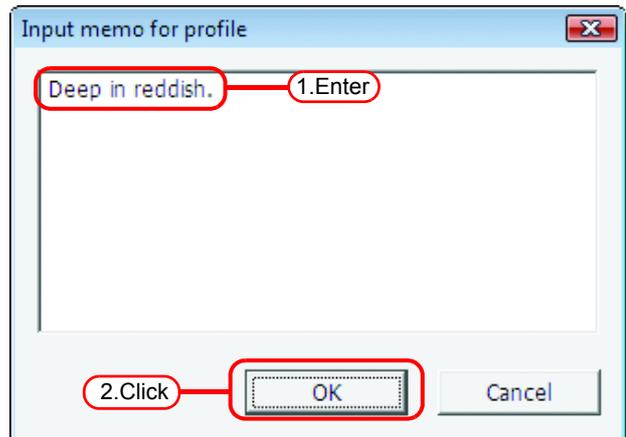

- 3 When you select a profile on which you wrote a comment, the “User Comment” area indicates the comment.

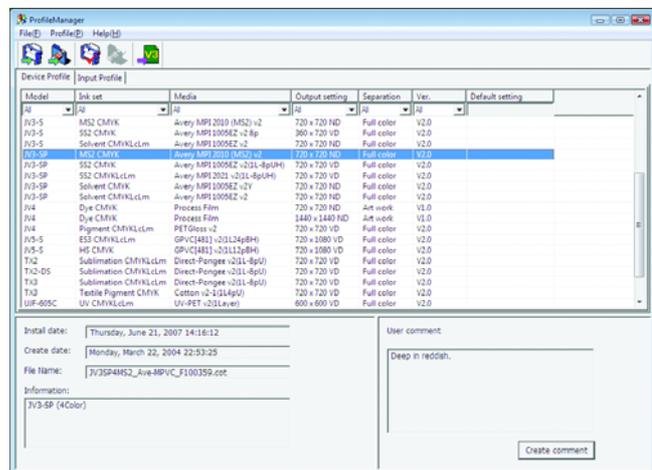

3 Set default print condition.


Set the default condition for Pass, Overprint, Print Direction, Fast print, and Half tone.

Click  and set the default condition of the next profile.

Select the default condition for all profiles.



Important!

- If the default condition is decided by the media name, set the condition.
- If the default condition is not set, following values are applied as default.
Pass: Minimum pass
Overprint: 1 time
Print Direction: Uni-direction
Fast print: OFF
Half tone: ILL Difusion

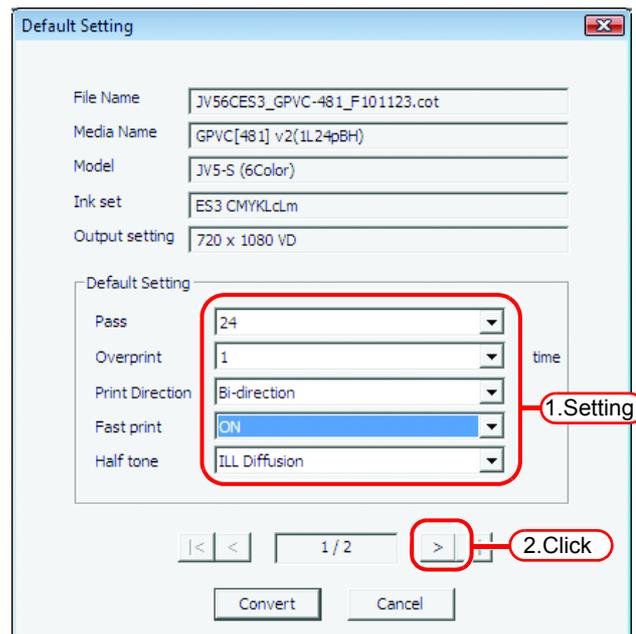


- 4 Click button.
Convert the profile.

Important! When using the device profile converted to V3, Color Adjustment Set and Color Replacement Set in unconverted V2 cannot be used. If using Color Adjustment or Color Replacement function, new adjustment file must be created.


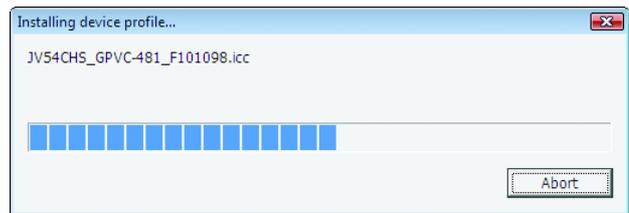
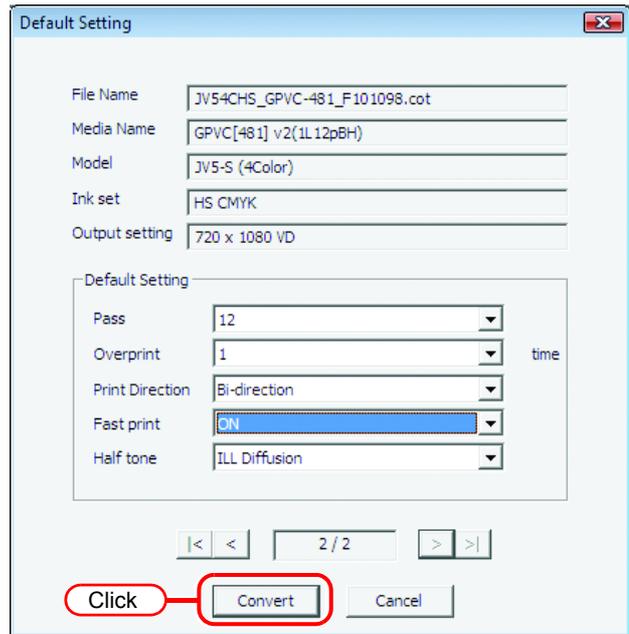


- 5 A dialog is displayed.
Click button.

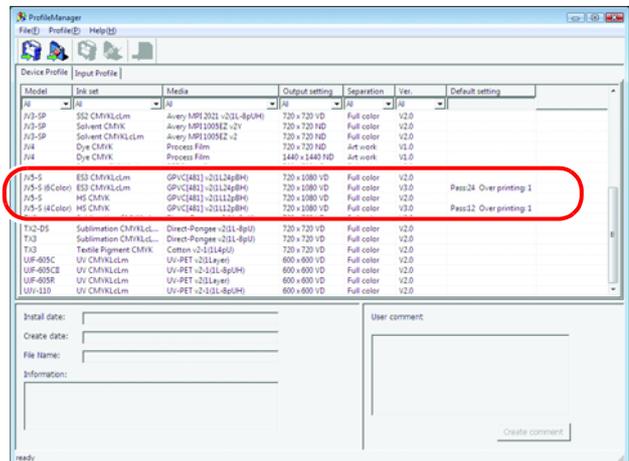

3 A dialog is displayed.


Click the button, and the profiles will be uninstalled.

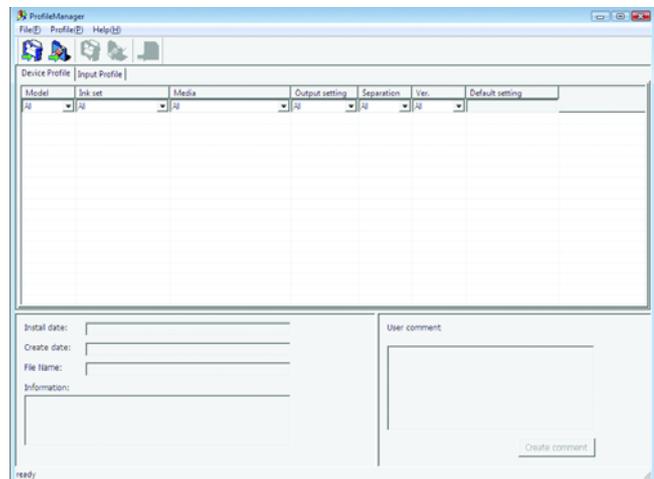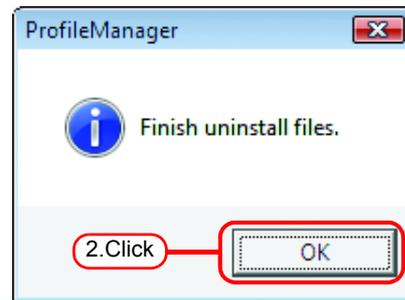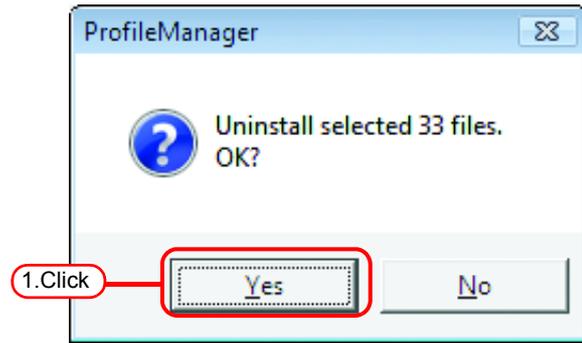



Uninstalling the Input Profiles

The procedure for uninstalling input profiles is as follows:

- 1 On the input profile screen, select the profiles to be uninstalled.


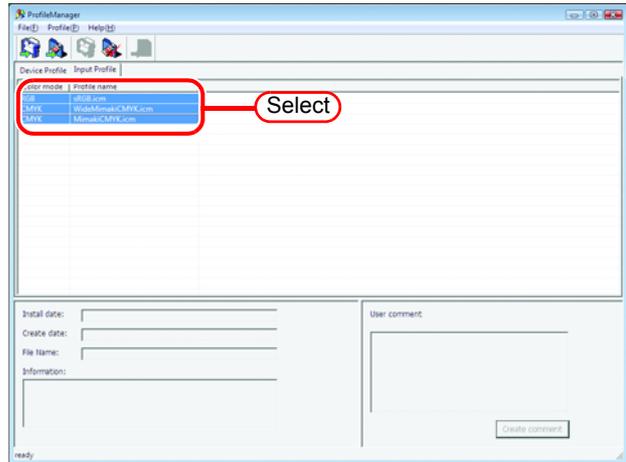


- 2 Select the [Uninstall input profiles].
[Profile] - [Uninstall input profiles] menu
Or click the button as illustrated.

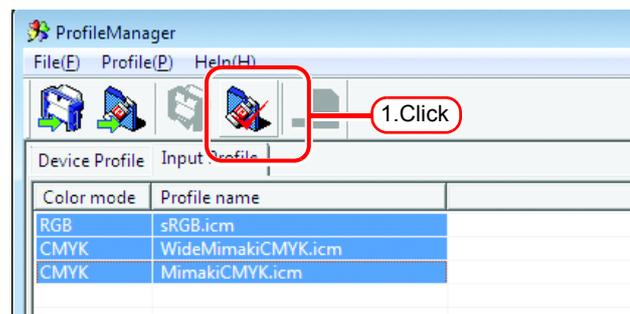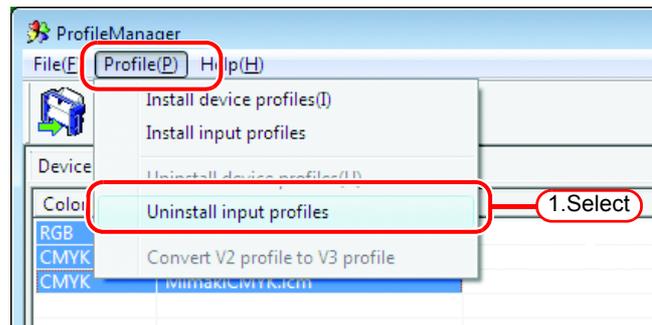

3 A dialog is displayed.

Click the button, and the profiles will be uninstalled.

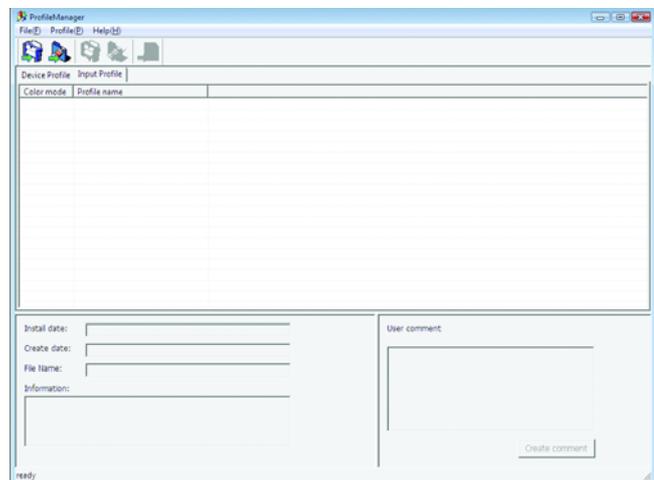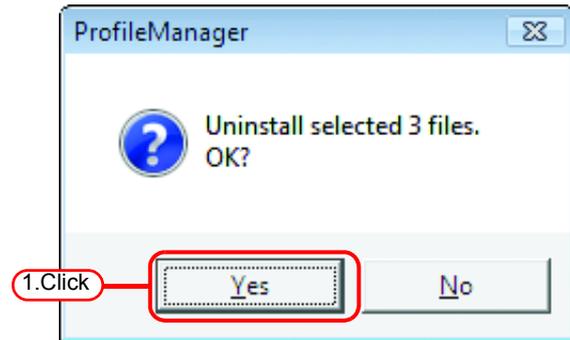

Closing the Profile Manager


Close the Profile Manager after making sure that you have installed successfully one device profile, one RGB profile and one CMYK profile.

Click close box.

Or select [File] - [Exit] menu.

 When using JV4, install one or more of each of full color and artwork device profile separation methods.

- Full color
- Art work

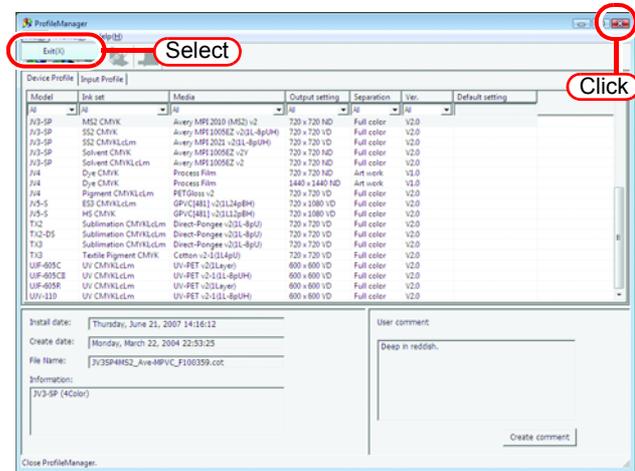

Printer Management Function

Adds, resets, and deletes printers used with RasterLinkPro5.

The printer management functions are as follows.

Adding a printer

Add a new printer. (☞ P.34)

No printers are registered immediately after RasterLinkPro5 is installed. Printers must be registered, by add printer(s) function.

Up to four MIMAKI ENGINEERING printers supported by RasterLinkPro5 can be registered. When a printer is registered, a default hot folder and printer driver are created automatically.

Resetting a printer

Change the settings of a printer registered. The output port and color mode can be changed.

(☞ P.41)

Deleting a printer


Delete a printer registered. When a printer is deleted, the jobs, condition set, hot folder and printer driver for the deleted printer are deleted. (☞ P.43)

Resetting the output port


Change the settings of each output port. Normally it is not necessary to change them. (☞ P.44)

Starting printer management


- 1 In Windows select [Start] - [All Programs] - [Mimaki RasterLinkPro5] - [Printer Management.].

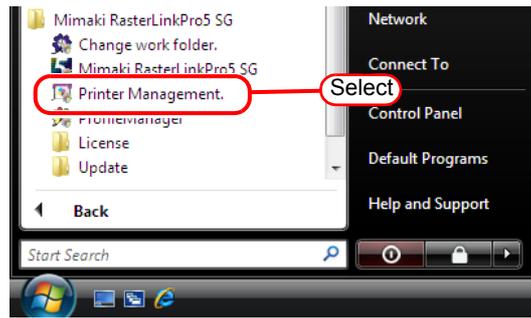


- 2 User Account Control screen is displayed.
Click .

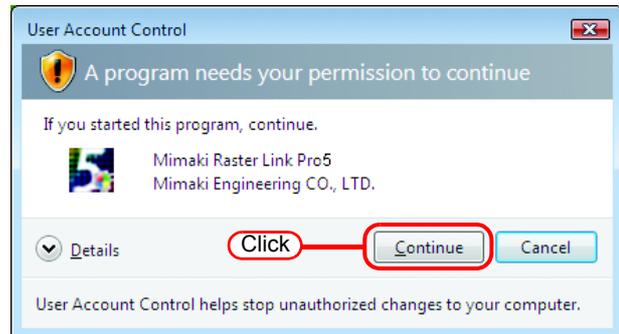

- 3 When first starting printer management, the setup work folder screen appears.
Select a folder on a disk with sufficient spare capacity.
A folder for saving the working files of jobs is created automatically in the selected folder.

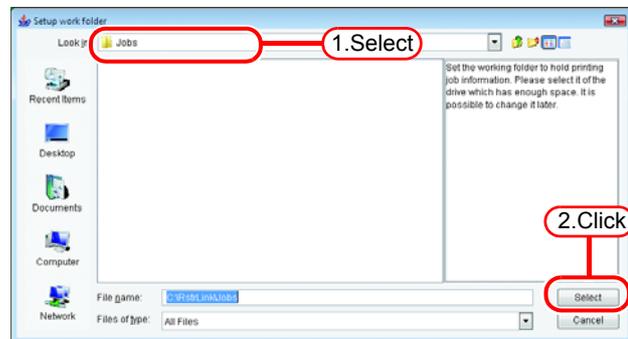

Printer Management screen

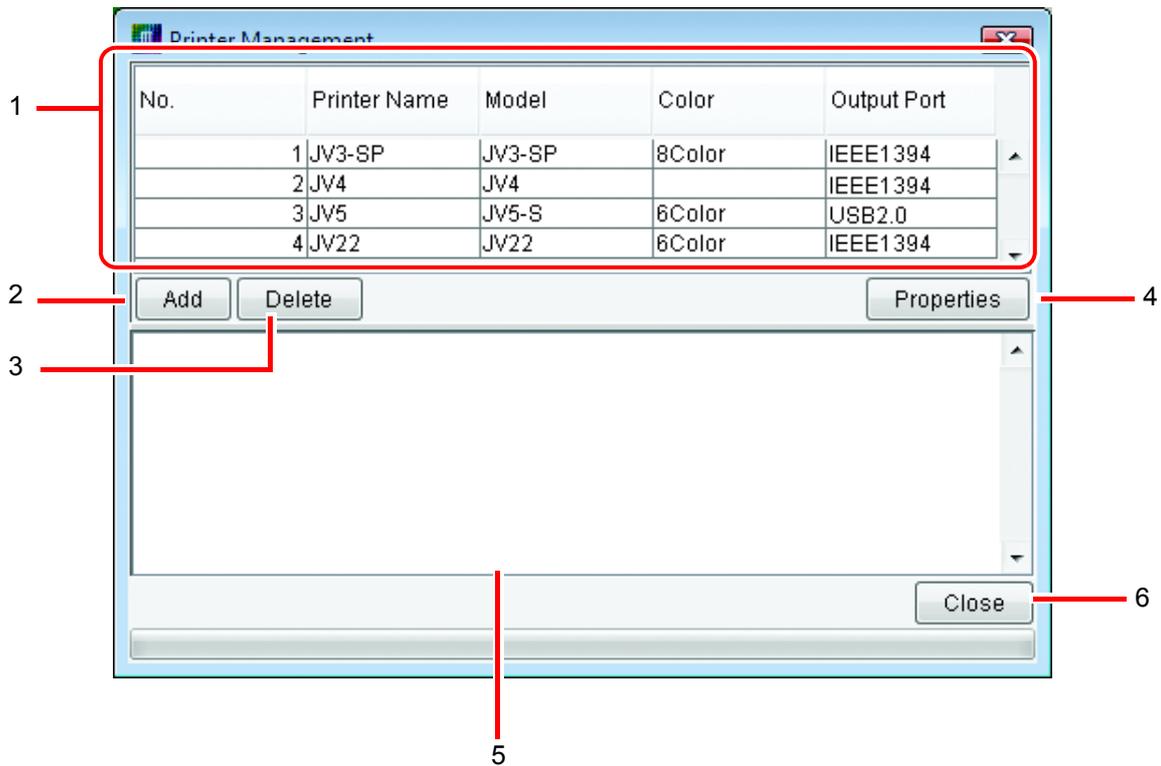

1. Printer list

Displays a list of the printers registered.

2. button

Adds a printer.

3. button

Deletes a printer selected in the printer list.

4. button

Changes the settings of a printer selected in the printer list.

5. Information display

Indicates the operation status of printer management.

6. button

Closes the printer management screen.

Adding a printer


No printers are registered immediately after RasterLinkPro5 is installed. Printers must be registered, by add printer(s) function.

- 1 Turn on the printer, and check that the RasterLinkPro5 PC and printer are connected with a USB 2.0 cable or IEEE1394 cable.


Important!

- Before connecting multiple printers to RasterLinkPro5 with a USB 2.0 interface, it is necessary to change the "MACHINE NAME" of each printer to a unique name on the Operation Panel.
- If multiple printers are connected to RasterLinkPro5 with an IEEE1394 interface, the same number of IEEE1394 interface cards are required. Multiple printers cannot be connected to one IEEE1394 interface card.

- 2 On the printer management screen, click the button.

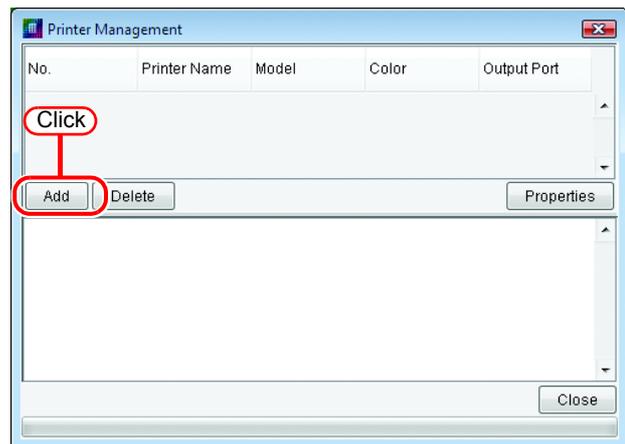

- 3** The printer setting screen appears. If “IEEE1394” is specified for [Output Port], the printer model name and printer status (shown in brackets) of connected printers are shown in the [Available Printers] list.

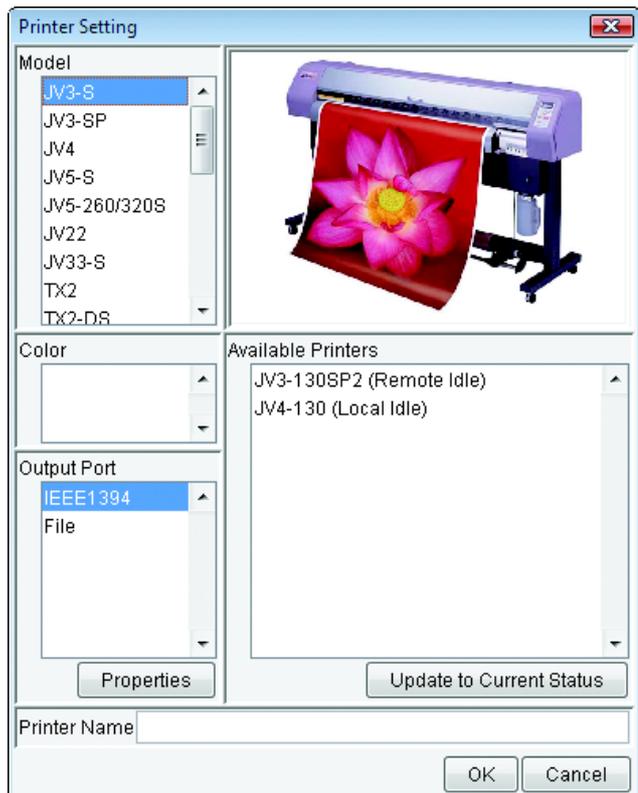


If several same model are connected, the same model names are shown in the [Available Printers] list and it may not be possible to identify the relevant printer. In this case, switch between the <REMOTE>/<LOCAL> status on the printer Operation Panel, and click the **Update to Current Status** button to update the display of the printer status.

If “USB 2.0” is specified for Port, the “MACHINE NAME” of the connected printers are shown in the Available Printers list.

4 Select the [Model], [Color], and [Available Printers] in accordance with the printer actually connected.

Normally, specify “USB 2.0” or “IEEE1394” for the [Output Port].

For the [Printer Name], enter a simple name to identify the printer.

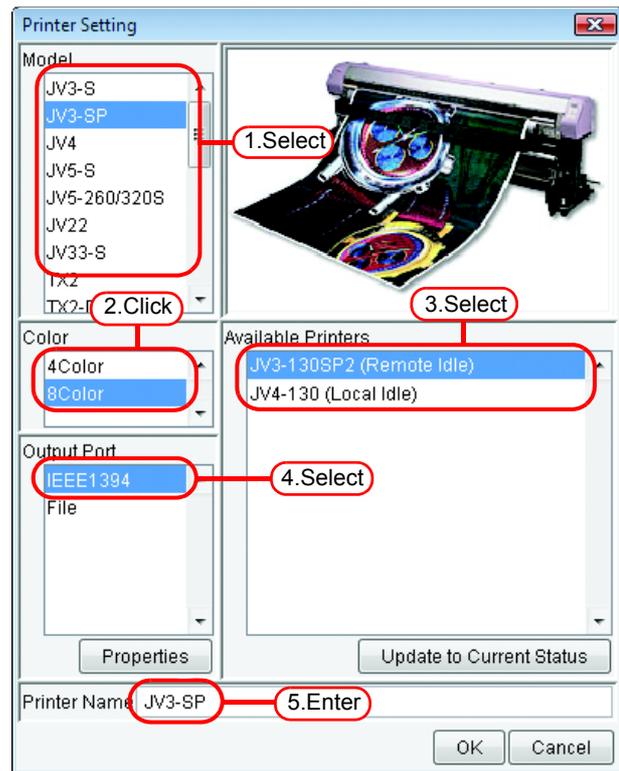

Important!




- The following single byte characters cannot be used for printer names.
\ / : * ? " < > | ! ,
- The printer name entered cannot be changed later. When a printer is added, a default hot folder and printer driver are created with the printer name entered. Also, the printer name entered here appears in the title of the execution status screen shown in the main window.
- When accessing the hot folder or shared printer from a PC with an OS earlier than Windows ME, enter a printer name of single byte characters within 11 bytes.
- When registering two or more printers, duplicate printer names cannot be registered. Be sure to register different printer names.
- If "USB 2.0" is selected for the port, check that the USB port and USB cable of the PC comply with the USB 2.0 standard. If they do not meet the standard, a high-speed mode connection is not possible. Do not use a USB hub.
- RasterLinkPro5 outputs plotting data to the printer selected in the available printer list and acquires its printer status (with "IEEE1394" the serial number of the printer identifies the printer, and with "USB 2.0" the "MACHINE NAME" identifies the printer). Therefore, when a different printer even of the same model is connected, it is necessary to select it from the available printer list and change its settings.
- When "IEEE1394" is selected for the output port, do not perform the following actions when RasterLinkPro5 is running. It may cause the PC to freeze.
 - Turn off the printer
 - Pull out the IEEE1394 cable
- When using a JV3-SL model, select JV3-SP 8 color. As for the device profile, install only the 4 color profile.
- Up to 4 printers can be registered simultaneously.
- "Print" can be executed simultaneously for multiple registered printers.
- "RIP & Print" cannot be executed simultaneously for different printers, but "RIP & Print" and "Print" can be executed simultaneously.
- The spool process and RIP process cannot be executed simultaneously for different printers.
- If you print simultaneously with multiple printers, the printer heads may stop during printing depending on the specifications of the PC with RasterLinkPro5 installed, the resolution and other printing conditions, or the specifications of the connected printers.



If "File" is selected for the output port, a file can be created that can be printed with the MIMAKI ENGINEERING printer command file output software NetLink.

- 5 Click .
Click on the confirmation screen.

The printer setting screen closes, and the process to add the printer starts. The progress is displayed in the information field of the printer management screen. When the process is complete, the message “Completed” is displayed.

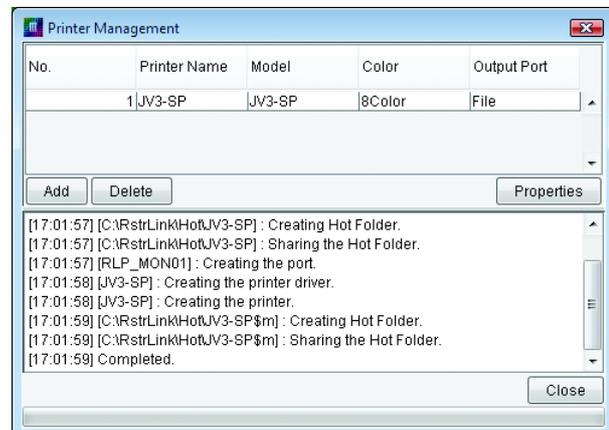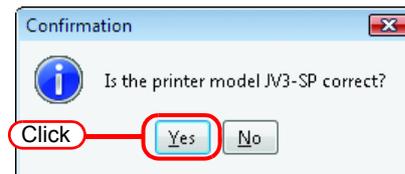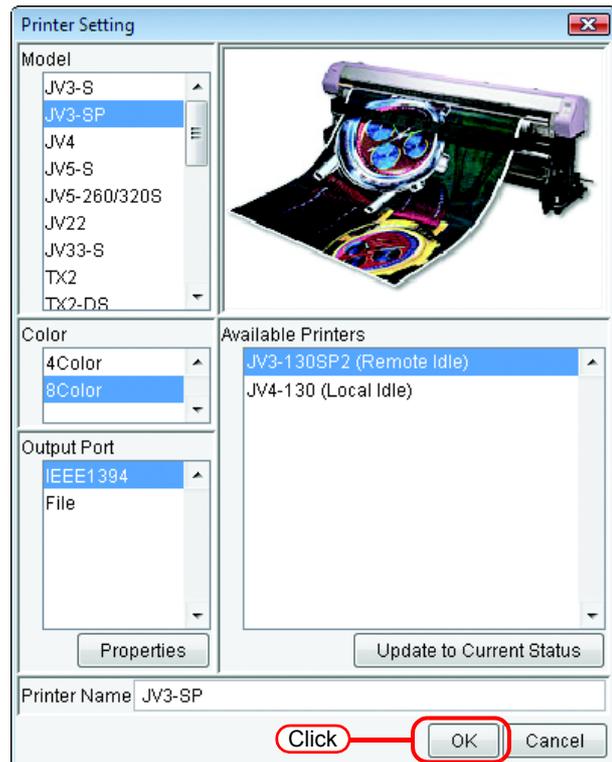

Important!

- Do not force quit printer management while a printer is being added.
- If PC MACLAN is installed on the RasterLinkPro5 PC, the [PC MACLAN file server warning] screen may appear while the printer is being added. Click the button to stop the PC MACLAN file server. The PC is not shut down.
- Do NOT perform the following operations with the hot folder created by printer management. It will prevent proper uninstallation.
Changing the directory name, changing the share name, canceling sharing, or deleting the hot folder.
- Do NOT perform the following operations with the printer driver created by printer management. It will prevent proper uninstallation.
Deleting the printer driver, changing its name, changing the share name, or canceling sharing.

Automatic PC MACLAN port setting

If PC MACLAN is installed on the RasterLinkPro5 PC, PC MACLAN is set automatically when a printer is added.

In this case, the following names are given automatically.

PC MACLAN file server

File server name : RasterLinkPro5 PC host name

Shared folder name : The printer name entered in the printer setting screen

PC MACLAN print server

Spooler name : Printer name entered in the printer setting screen_RasterLinkPro5 PC host name

Important!

- The maximum length of the spooler name used with the PC MACLAN print server is 27 bytes. If the printer name or host name is long, it is cut after the 28th byte. When outputting from the printer driver from Macintosh, it is recommended not to use a long printer name.
- While a printer is being added, printer management restarts PC MACLAN. In this case, since the connection with the Macintosh client is cut, problems occur such as files that cannot be deleted remaining in the hot folder and so on. Therefore when adding a printer, unmount the hot folder mounted with Macintosh first.

Resetting a printer


After registering a printer, to change the color mode (Example: From 4 colors to 6 colors), the output port, or the output port detailed settings, change the printer setting by following step.

- 1 First turn on the printer, and check that the RasterLinkPro5 PC and printer are connected with a USB 2.0 cable or IEEE 1394 cable.

Important!

- Before connecting multiple printers to RasterLinkPro5 with a USB 2.0 interface, it is necessary to change the “MACHINE NAME” of each printer to a unique name on the Operation Panel.
- If multiple printers are connected to RasterLinkPro5 with an IEEE1394 interface, the same number of IEEE1394 interface cards are required. Multiple printers cannot be connected to one IEEE1394 interface card.

- 2 On the printer management screen, select the printer to reset, and click **Properties**.
The printer setting screen appears.

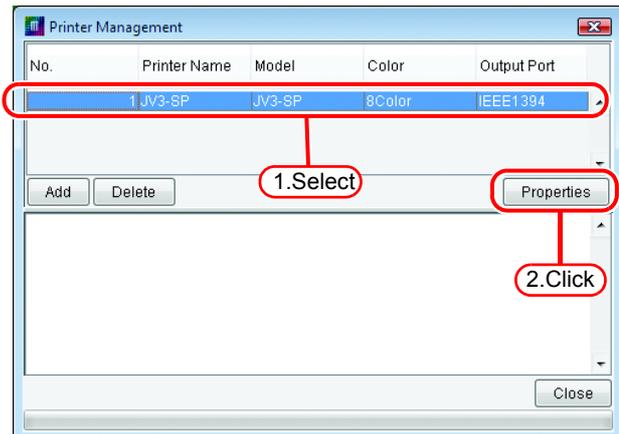

- 3** To change the color mode, select a value from the [Color] list, and to change the output port, select from the [Output Port] list. If the port is “USB 2.0” or “IEEE1394”, additionally select the relevant printer from the [Available Printers] list.




The model name and printer name cannot be changed. To change them, delete the printer, and add it again.



- 4** Click .
Click on the confirmation screen.

The printer settings are changed, and the printer setting screen closes.

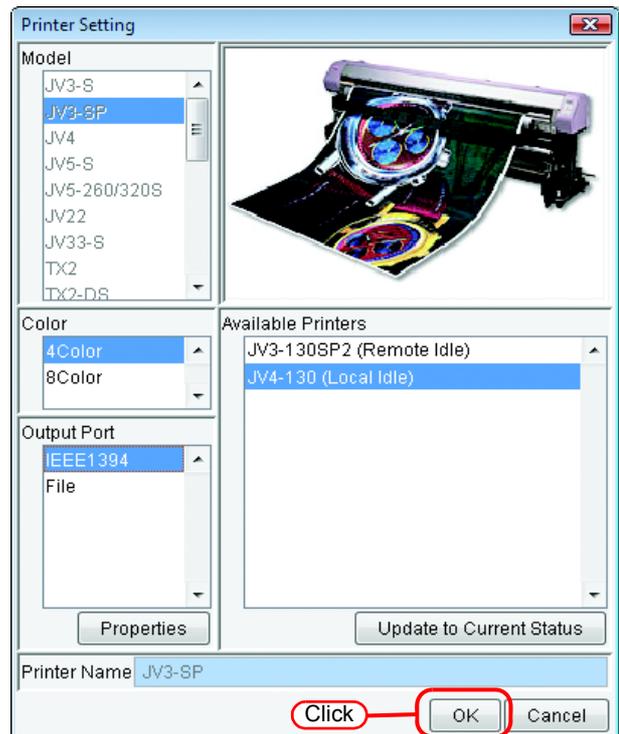


Deleting a printer

Delete a printer registered in RasterLinkPro5 by following step.

Important!



When the printer was deleted, all jobs of the deleted printer will be also deleted and the error message will be displayed at the startup of RasterLinkPro5 next time. Before deleting a printer, back up the necessary jobs first.

- 1 On the printer management screen, select a printer to delete, and click

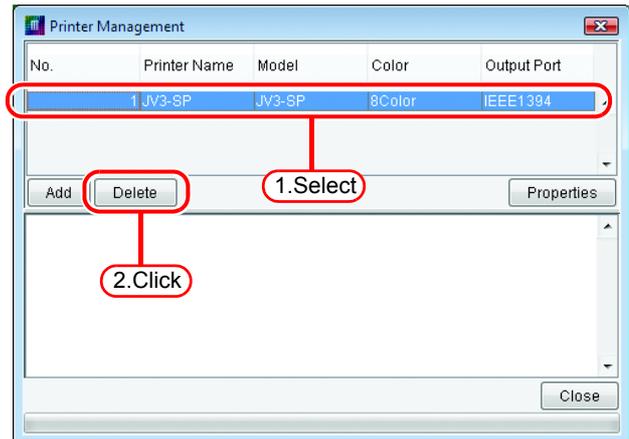

- 2 Click on the confirmation screen.

The process to delete the printer starts. The progress is displayed in the information field of the printer management screen. When the process is complete, the message "Completed" is displayed.

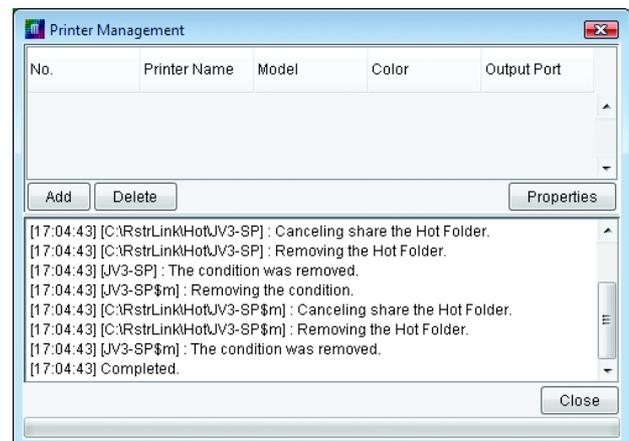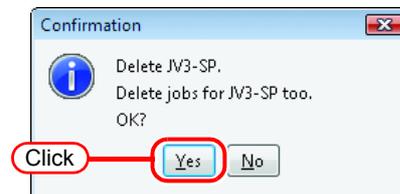

Important!

- Do not force quit printer management while a printer is being deleted.
- If PC MACLAN is installed on the RasterLinkPro5 PC, the [PC MACLAN file server warning] screen may appear while the printer is being deleted. Click the button to shutdown the PC MACLAN file server.

Canceling PC MACLAN settings

If PC MACLAN is installed on the RasterLinkPro5 PC, the PC MACLAN settings are canceled automatically when a printer is deleted.

Important!

- While a printer is being deleted, printer management restarts PC MACLAN. In this case, since the connection with the Macintosh client is cut, problems occur such as files that cannot be deleted remaining in the hot folder and so on. Therefore when deleting a printer, unmount the hot folder mounted with Macintosh first.
- The PC MACLAN file server folder information is not removed automatically. Remove the folder information in accordance with the chapter on using the File Server in the PC MACLAN User's Guide.

Resetting the output port

The detailed settings for each output port such as timeout value and buffer length can be changed.


Important!

- The settings for each output port are set to the recommended values by default. Do not change the settings unless there is a problem.
- The changes to the settings of each output port are enabled after clicking on the output port properties screen and clicking on the Printer Setting screen.



Clicking returns all the settings to the default recommended values.

- 1 To add a printer or change the printer settings, on the Printer Setting screen, select the output port whose settings you will change, and click . The properties screen of the selected output port appears.

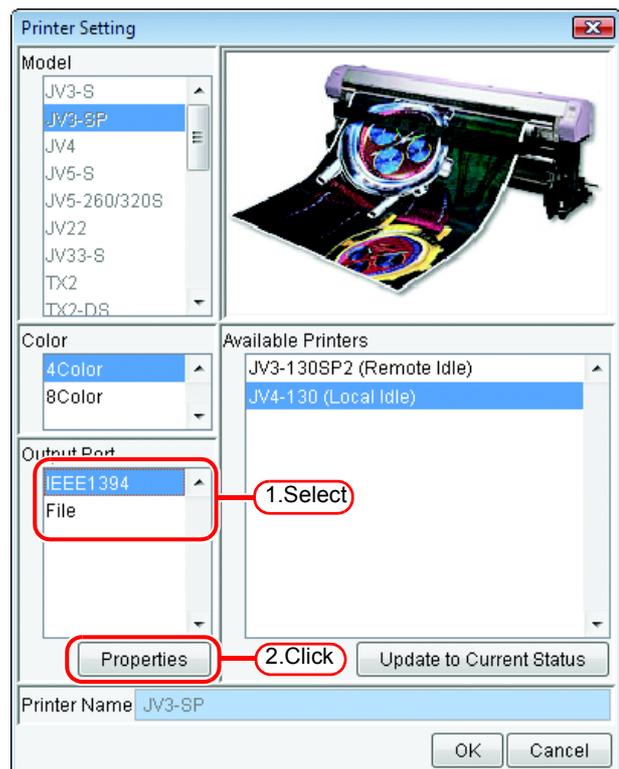


With an USB 2.0 port

Change the “Output Buffer Length” and “Output Time-out” values if necessary.



- The “Output Buffer Length” change is enabled after starting up RasterLinkPro5.
- The “Output Time-out” change is enabled after restarting the OS.

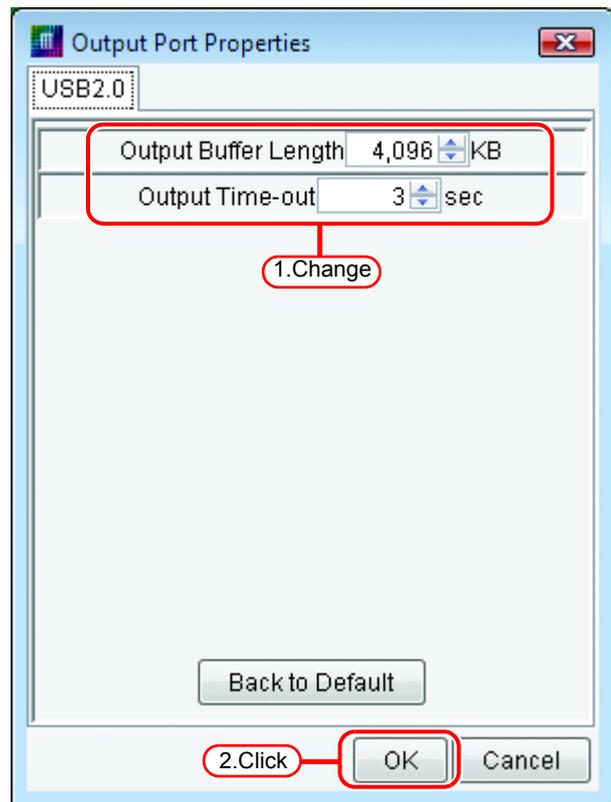

With an IEEE1394 port

- 1 Change the “Output Buffer Length” and “Output Reply Time-out” values if necessary.

Important!


With the following conditions, the printer may detect a communication error (ERROR 20) when printing.

- The cable is too long.
- The PC-side connector has 4 pins.
- A notebook PC is connected.
- When connected to an IEEE1394 port mounted on the PC motherboard.
- When using an interface card equipped with a controller chip with poor reliability.


In these cases, it is basically necessary to improve the reliability of IEEE1394 communication, but increasing the “Output Reply Time-out” value may make errors less likely.



- The “Output Buffer Length” change is enabled after starting up RasterLinkPro5.
- The “Output Reply Time-out” change is enabled after restarting the OS.

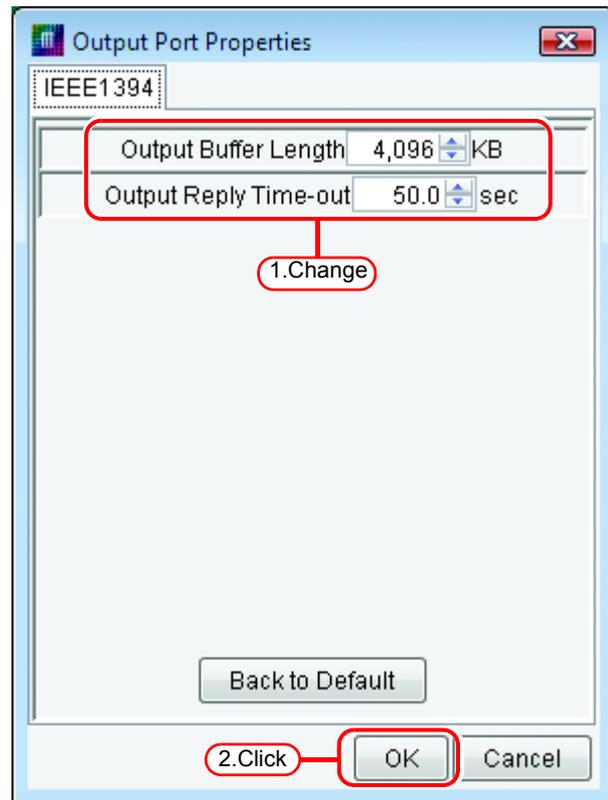

- 2 After clicking and closing the Output Port Properties screen, click on the Printer Setting screen.

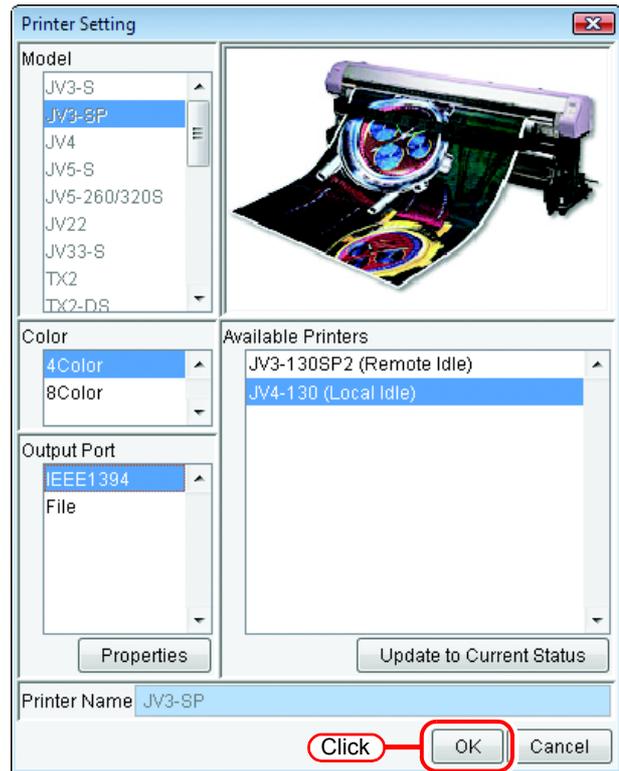


With File


- 1 Change “Output Buffer Length” if necessary.



The “Output Buffer Length” change is enabled after starting up RasterLinkPro5.

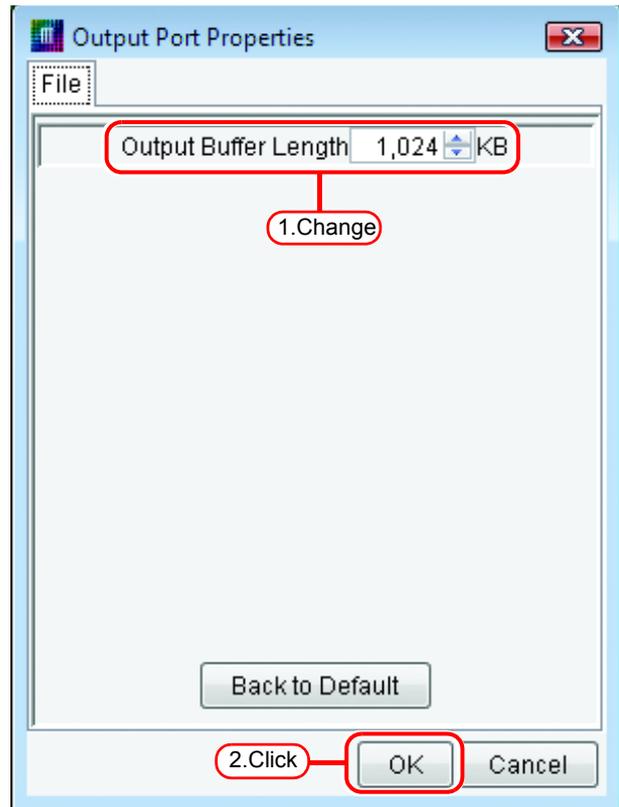

- 2 After clicking and closing the Output Port Properties screen, click on the Printer Setting screen.

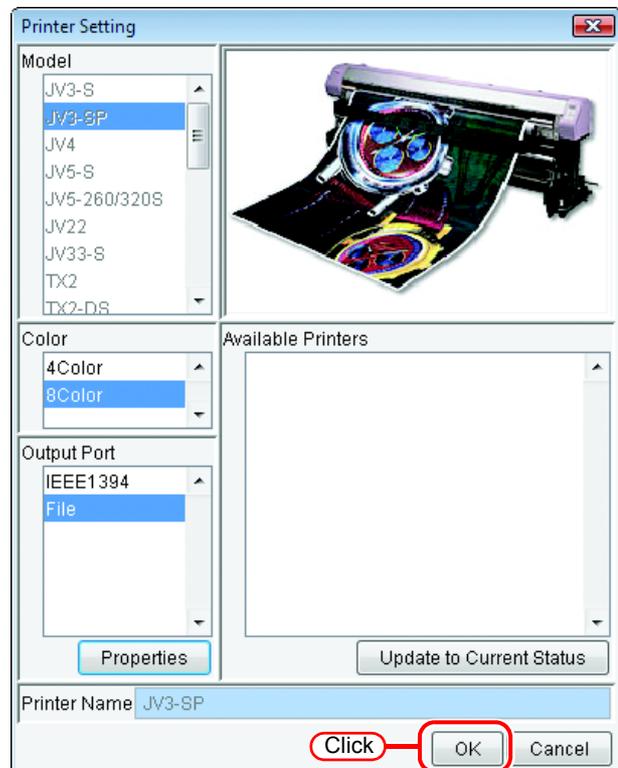


Starting RasterLinkPro5


This section explains how to launch RasterLinkPro5.

- 1 Select [RasterLinkPro5];
[Start] - [All Programs] -
[MimakiRasterLinkPro5] -
[MimakiRasterLinkPro5] menu.
Or double-click the “RasterLinkPro5”
icon on the desktop.


The RasterLinkPro5 start screen is displayed.

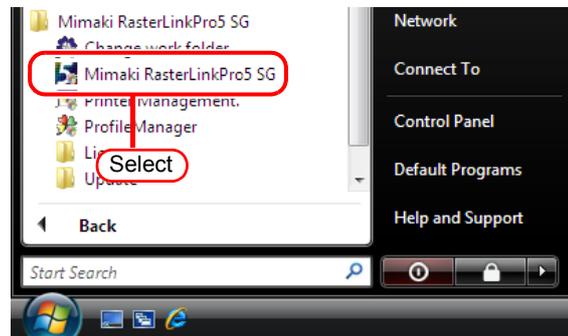

- 2 User Account Control screen is displayed.
Click .

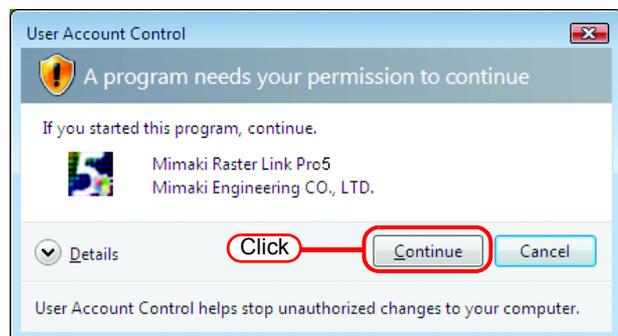

- 3 The main window of RasterLinkPro5 is displayed.

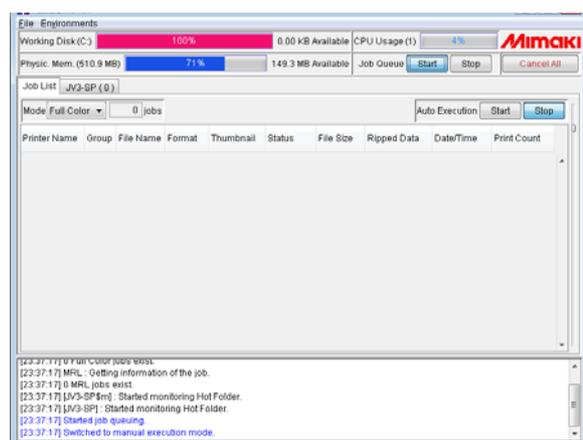


Quitting RasterLinkPro5

Important!


Do not quit RasterLinkPro5 during printing or spooling.

- 1 Make sure that there is no job which is under printing or which has been spooled.

Check the “Status” of the “Job List” to see if there is any job which is under printing or which has been spooled.

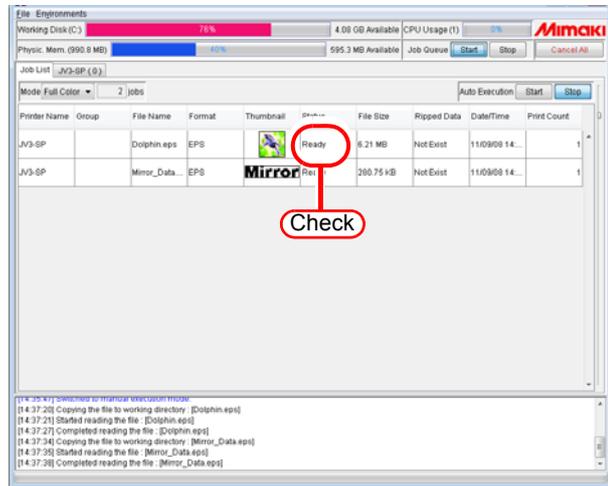

- 2 Select [Exit] .
[File] - [Exit] menu
or click close box [x].

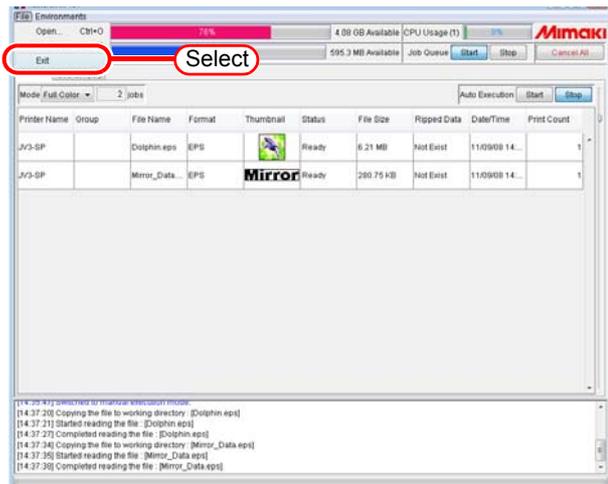


Change Work Folder


This section explains how to change the RasterLinkPro5 work folder.

- 1 Select [Change work folder].
[Start] - [All Programs] - [Mimaki RasterLinkPro5] - [Change work folder.] menu

The “Setup work folder” dialog is displayed.

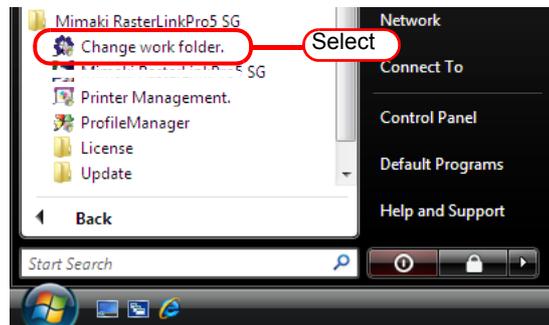

- 2 User Account Control screen is displayed.
Click .


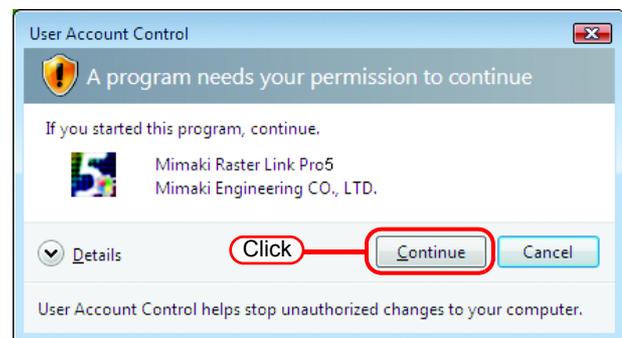


- 3 Designate a folder to be used as the new work folder.
Select a folder in a disk having a sufficient free space.

 You can create a new folder as the new work folder.

Click button.

The work file in the old work folder is moved into the new work folder.

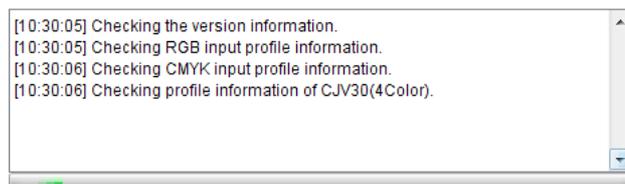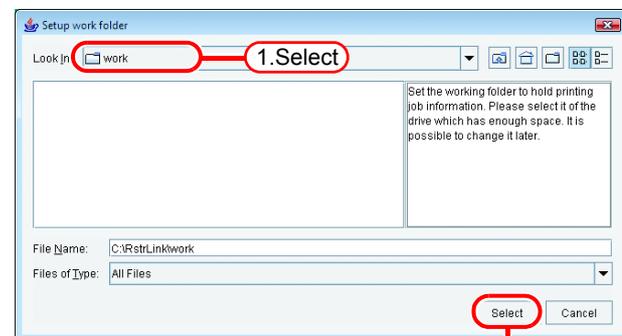

Job types

There are five types of job for each file format and output mode.

- Full Color
- RIP Separation
- Application Separation
- Multifunction
- MRL

You can switch between the jobs displayed with “Mode” at the top of the job list screen.

Also, hot folders and printers are created for each job type.

The printer name entered when adding a printer in Printer Management is used as the name of the default hot folder and printer.

Full Color

Outputs the colors of the image without changes.

Supported file formats : PS, EPS, TIFF, JPEG, BMP, PDF

Hot folder and printer name: “Printer name” and “Condition name” (Example: JV4)

RIP Separation

This can only be used for JV4.

The image is separated by RasterLinkPro5.

Supported file formats : PS, EPS, TIFF, JPEG, BMP, PDF

Hot folder and printer name: “Printer name \$R” and “Condition name” (Example: JV4\$R)

Application Separation

This can only be used for JV4.

The image is separated by the application.

Supported file formats : PS

Hot folder and printer name: “Printer name \$A” and “Condition name” (Example: JV4\$A)

Multifunction

This can be used for printers with print and cut functions.

Supported file formats: PS, EPS, TIFF, JPEG, BMP, PDF

Hot folder and printer name: “Printer name” and “Condition name” (Example: CJV30)

MRL

Outputs the MRL (Mimaki command file) to the printer without changes.


Supported file formats : MRL

Hot folder name : “Printer name \$m” (Example: JV4\$m)

About the Main Screen

Job List Screen (Full Color, RIP Separation, Application Separation)

This screen is displayed after startup. It is displayed when the output mode is set to Full Color, RIP Separation, and Application Separation.

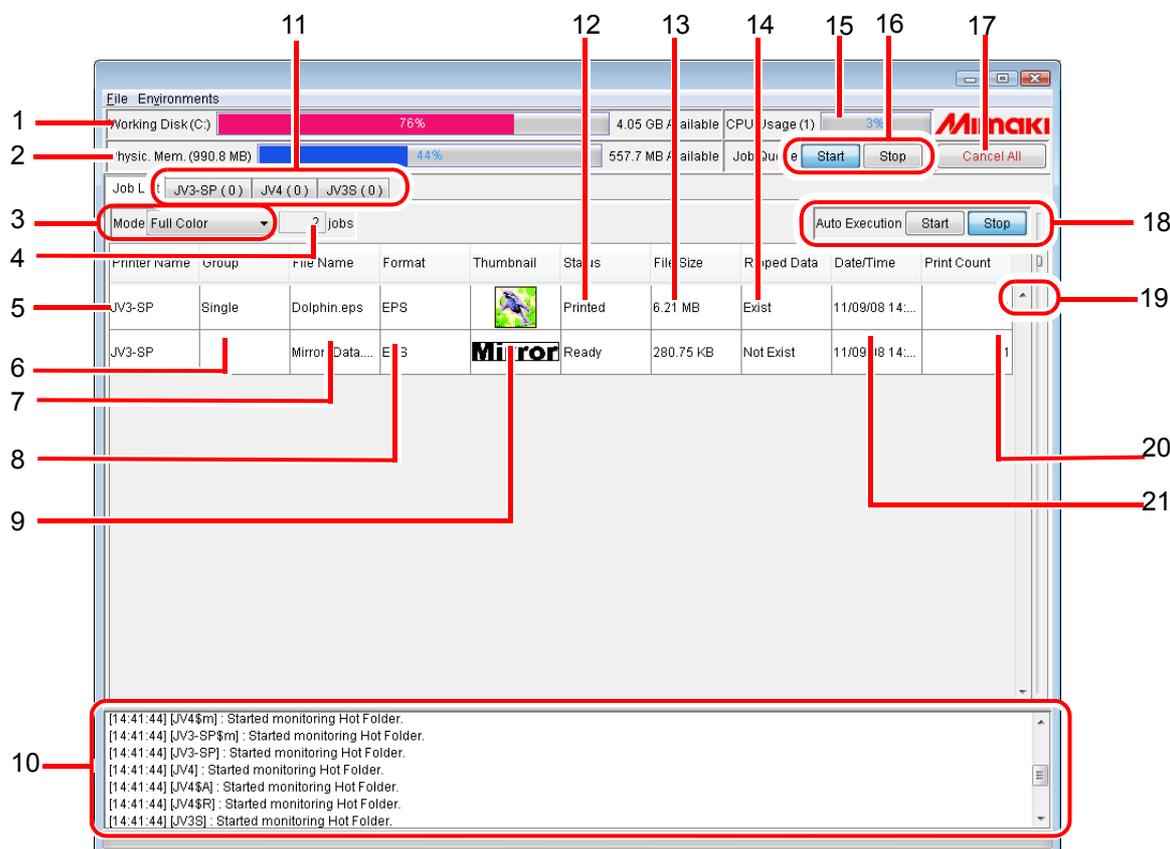

1. Working Disk

This line displays the usage of the disk that contains the work folder.

The usable size is given by the following equation:

Usable size = Disk size - Used size of disk - Disk Space to Keep*

* Specify "Disk Space to Keep" at the following place:

"Environments" - "Option" - "Disk"

2. Physical Memory

This displays the amount and usage status of physical memory of the RasterLink PC.

3. Mode

Changes the display on the main screen according to the output mode setting.

4. Number of jobs

Indicates the number of jobs for each output mode.



The total number of jobs for printers that can be registered for each output mode is 200.

5. Printer Name

Indicates the name of the printer for output.

You can change the output printer on the pull down menu that is displayed by clicking “Printer Name”.

6. Group

Indicates the status of group.

7. File name

Indicates the file name of the image.

8. Format

Indicates the format of the image.

9. Thumbnail

Displays a miniature version of each image.

10. Information display

Displays messages from RasterLinkPro5 which indicates logs, warnings, and errors.

11. Switch Execution Status screens

Switches between the Execution Status screens of each printer. It displays a maximum of 4 printers.

The printer status of each printer is also shown.

The printer name of the corresponding printer is shown in the tab. The total number of jobs being executed or waiting are shown in brackets.

The printer status display is updated when the tabs are switched if no processing jobs in the switched screen.

12. Status

Indicates the status of the job.

13. File size

Indicates the data size of the job.

14. Ripped Data

“Exist” is displayed when there is Ripped data.

15. CPU Usage

This displays the CPU usage of the RasterLink PC. (However, this is not displayed on the 64bit version OS.)

The number within the parentheses of “CPU Usage” is the number of logical CPUs. Even with a single CPU, the number becomes 2 in the case of hyper-threading or a dual-core CPU, and 4 in the case of a quad-core CPU.

16.Job Queue

When you want to change the execution order of jobs, stop/start the job execution queue. For details on changing the job execution order, see “Changing the Job Execution Order”( P.61).

17. Cancel All

Cancels all jobs being executed or waited by each printer.

18.Auto Execution

This selects the current state of whether to automatically execute (RIP, print, or cut) or manually execute a spooled job.

For details on auto execution, see “Automatically Executing RIP and Output Processing” ( P.93).

19.Spacing adjustment slide

Changes the height of each job on the Job List.

20.Print count

Specify the number of times printing of the print image displayed in the layout preview area.


21.Date/Time

Indicates the date and time when the job was read.

Job List Screen (Multifunction)

This screen is displayed when a multifunctional printer is registered. It is displayed when the output mode is set to Multifunction.

Multifunctional printer means a printer that can print and cut.

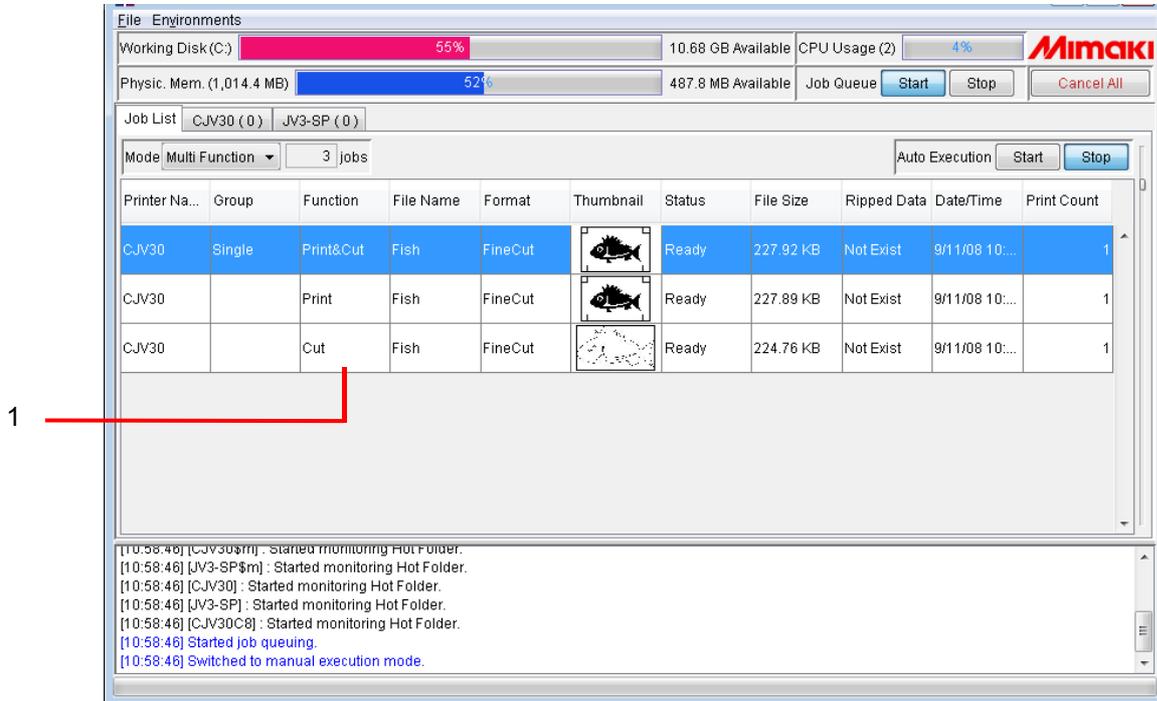

The job list screen is the same as that for Full Color, but with an additional display item for indicating the function type.

For details on the other display items, see the job list screen for Full Color.

1. Function

Indicates the function type.

Print and Cut: The job consists of printing images and cutting data, which you can print and cut, only print, or only cut.

Print: The job consists of printing images, which you can only print.

Cut: The job consists of cutting data, which you can only cut.


The cutting data must be created using FineCut produced by MIMAKI ENGINEERING, or Simple Studio. For more information, see the manuals for FineCut or Simple Studio.

Job List Screen (MRL)

This screen is displayed when you set “Mode” to “MRL”. A list of MRL command files is managed.

Important!

MRL is a command format for printers made by MIMAKI ENGINEERING. You cannot edit any MRL-format job in Job editor.

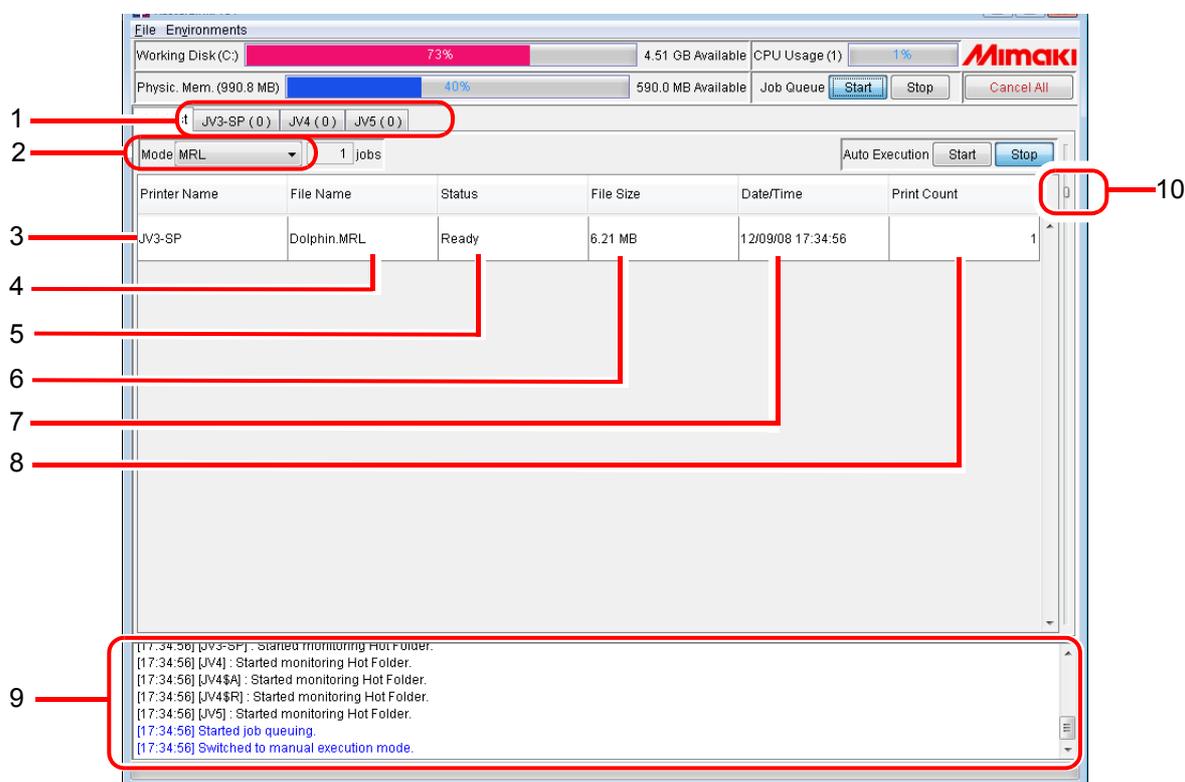

1. Switch Execution Status screens

Switches between the Execution Status screens of each printer. It displays a maximum of 4 printers.

The printer status of each printer is also shown.

The printer name of the corresponding printer is shown in the tab. The total number of jobs being executed or waiting are shown in brackets.

The printer status display is updated when the tabs are switched if no processing jobs in the switched screen.

2. Mode

Changes the display on the main screen according to the output mode setting.

3. Printer Name

Indicates the name of the printer for output.

You can change the output printer on the pulldown menu that is displayed by clicking “Printer Name”.

4. File name

Indicates the file name of the image.

5. Status

Indicates the status of the job.

6. File size

Indicates the data size of the job.

7. Date/Time

Indicates the date and time when the job was read.

8. Print count

Specify the number of times printing.

9. Information display


Indicates the whole current processing of RasterLinkPro5.

10. Spacing adjustment slide

Changes the height of each job on the Job List.

Execution Status Screen

This screen indicates a list of the jobs which are under processing such as spooling or printing. You can change the execution order of jobs waiting for RIP. No job is displayed when there is not a job under processing.

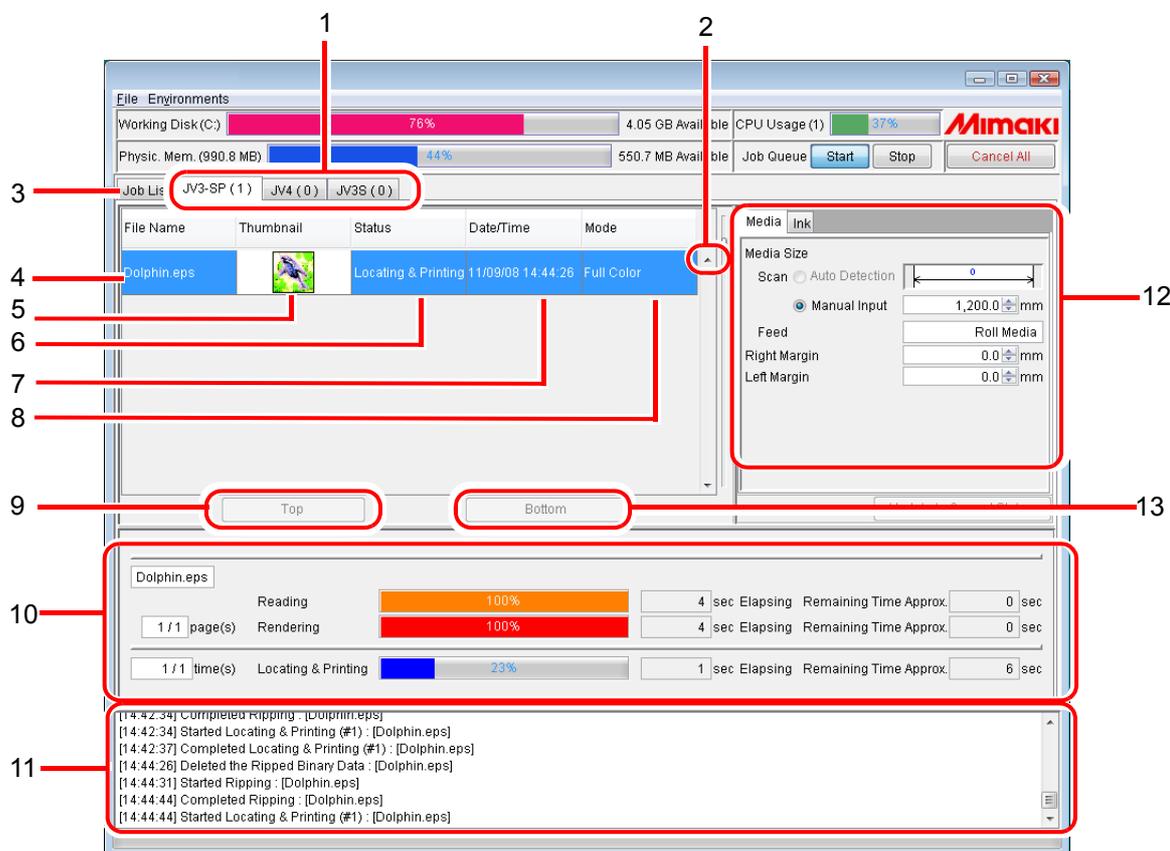

1. Switch Execution Status screens

Switches between the Execution Status screens of each printer. It displays a maximum of 4 printers.

The printer status of each printer is also shown. The printer name of the corresponding printer is shown in the tab. The total number of jobs being executed or waiting are shown in brackets.

The printer status display is updated when the tabs are switched if no processing jobs in the switched screen.

2. Spacing adjustment slide

Changes the height of each job on the execution Job List.

3. Job List

Switches to Job List screen.

4. File name

Indicates the file name of the job under processing.

5. Thumbnail

Displays the miniature version of the image under processing.

Nothing is displayed in the case of an MRL job.

6. Status

Indicates the current processing status.

The detail status is shown in the processing status view.

7. Date/Time

Indicates the processing start time.

8. Mode

Indicates the output mode (full color, MRL, RIP separation, application separation, and multifunction).

9. Top

When the stop button of the job queue is pressed, this moves the job selected in the job list being executed to the top of the list.

10. Processing status view

The indicator shows the progress of processing of the selected job.

The viewer also indicates the time elapsed for each processing and a predicted time required for remainder of the processing.

11. Information display

Displays messages from RasterLinkPro5 which indicates logs, warnings, and errors.

12. Printer status

Indicates the status of the printer. For the information displayed, see “Printer Status Display Function” in the Reference Guide for each model.

13. Bottom


When the stop button of the job queue is pressed, this moves the job selected in the job list being executed to the bottom of the list.

Changing the Job Execution Order

The following explains how to move the second job to the top.


- 1 Click the **Stop** button of the job queue.

 The job currently printing is not stopped.

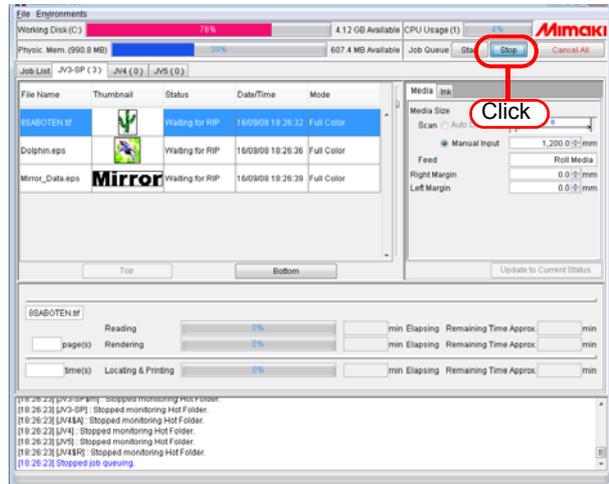


- 2 Select the job for which you want to change the order


The execution order cannot be changed when multiple jobs are selected. Grouped jobs and composite jobs cannot be moved.

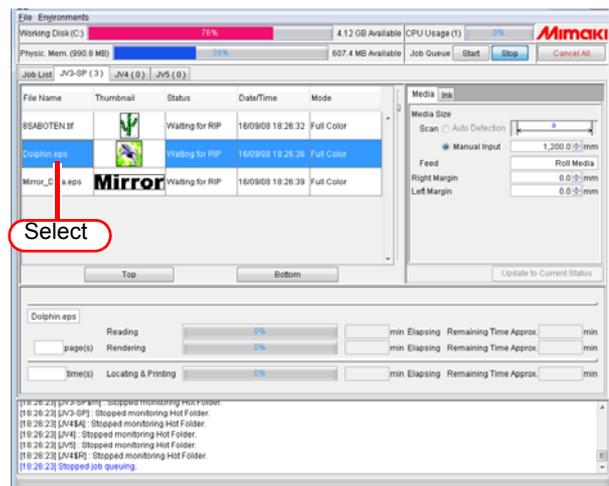

- 3 Click the **Top** button. Clicking the **Bottom** button will move the selected job to the bottom.

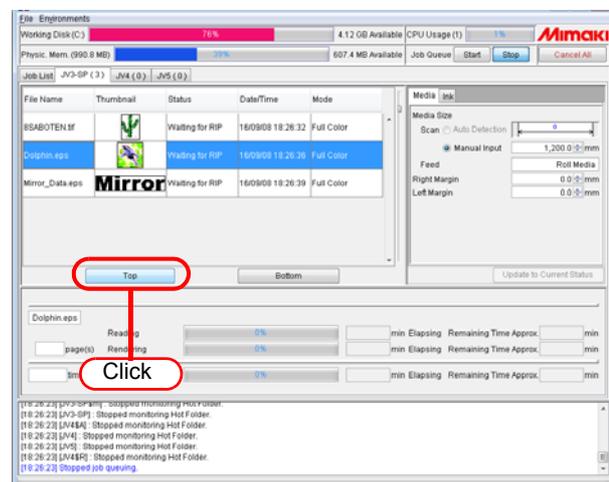

4 Click the **Start** button of the job queue.

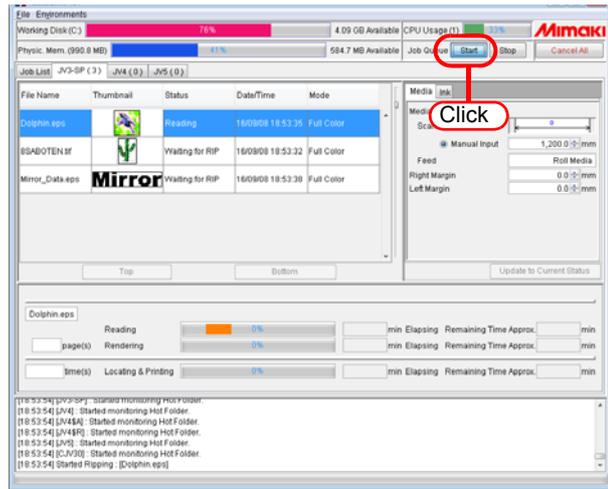

Output Method

This section describes a method to output data using RasterLinkPro5.

The output procedure is as follows:

Important!

When printing or printing with RIP on bundled RasterLinkPro5, turn the power of the printer on, and be sure to connect RasterLinkPro5 PC and the printer with USB2.0 cable or IEEE1394 cable.

Spooling of graphics data P.64

Read the image to be output into the RasterLinkPro5.
Four methods are available for spooling.

Editing P.74

For graphics data, make various settings on the “Job Editor”.

Printing P.81

Spooling of graphics data

About the Spooling Method of Graphics Data

Four methods are available for spooling the image to the RasterLinkPro5.

Method	Description	Readable File Formats
[Open] Menu ☞ P.65	Spool the file from [Open] in the menu.	PS, EPS, TIFF, JPEG, BMP, PDF*, MRL
Drag and Drop ☞ P.67	Drag and drop the icon for the file to be spooled into the window of the RasterLinkPro5.	PS, EPS, TIFF, JPEG, BMP, PDF*, MRL
Hot Folder ☞ P.69	Copy the file to be spooled into the hot folder. There is a hot folder for each output mode.	Full color folder : PS, EPS, TIFF, JPEG, BMP, PDF* RIP separation folder : PS, EPS, TIFF, JPG, BMP, PDF* Application separation folder : PS MRL folder : MRL
Printer Driver ☞ P.71	Via application software such as Adobe Illustrator, spool the file using the printer driver.	

* It is supported up to PDF1.4. PDF1.5 or above is not properly spooled.

Important!


- You cannot spool any file via a shortcut file.
Be sure to spool a original file of graphics data.

When Spooling Images from the [Open] Menu of RasterLinkPro5

The procedure for spooling an image from the menu of RasterLinkPro5 is as follows:

- 1 Select [Open].
[File] - [Open] menu

The “Select file name to print” dialog is displayed.

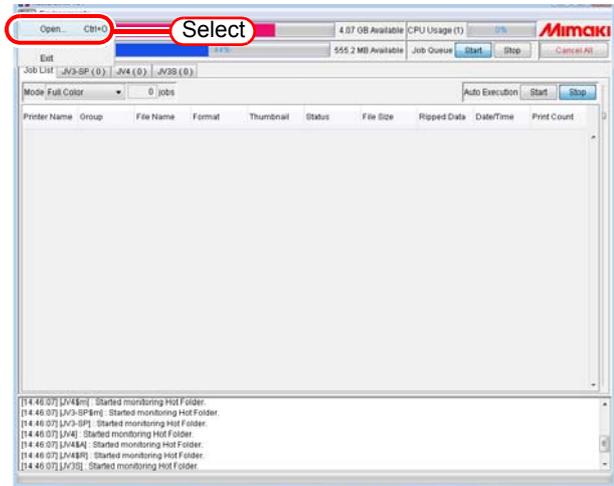


2 Select files to be spooled.



One or more files are selectable to be spooled.

Important!

- You cannot spool any file via a shortcut file. Be sure to select the file of graphics data.
- When there are many files in the folder selected, or if there are large files in it, it may take some time before the [Select file name to print] screen is updated. Wait until it is fully displayed.

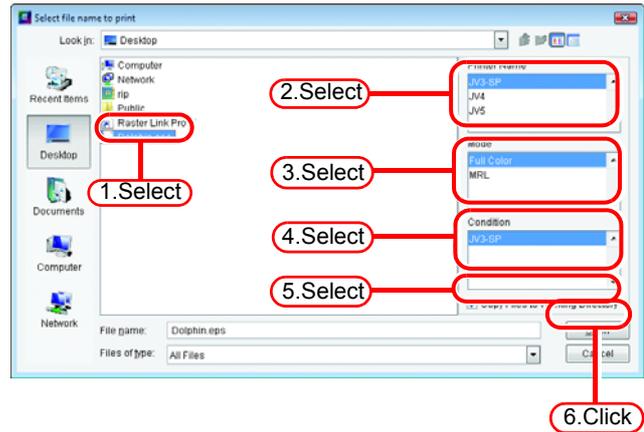

Select a printer for spooling with “Printer Name”.

Select “Mode”.

When you have added a management set in “Condition Management” (☞ See “Creating a New Condition Set” in the Reference Guide for each model.), select the condition set to be applied.

Designate “Copy Files to Working Directory”.

If original file may be changed or deleted after spool, check this check box.


Click .

3 The Job list screen shows the file that you selected and upon completion of spooling, it shows a thumbnail.

Important!

If the “Copy Files to working” was not checked, do not operate following things to the original file.

- Move the file to another folder, or delete it.
- Data modification

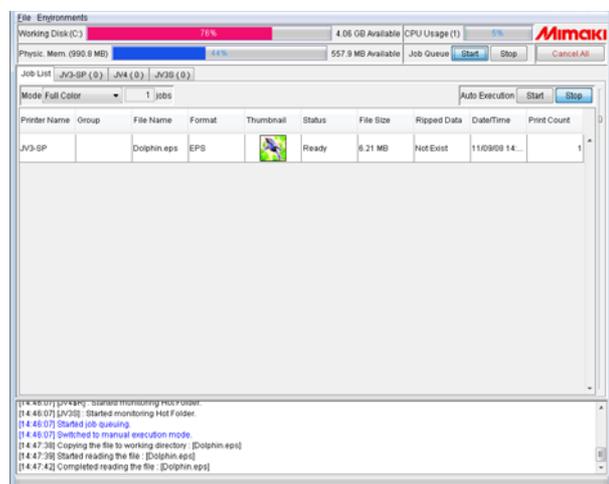


When Spooling Images by Drag and Drop

Described below is the procedure for spooling an image by dragging and dropping the file into the window of RasterLinkPro5.

Important!

When the OS of the PC with RasterLinkPro5 is Windows Vista/ Windows 7, if you execute RasterLinkpro5 with the administrative right, you cannot spool the job by drag and drop of file.


- 1 Select a file to be read on Explorer or the like.

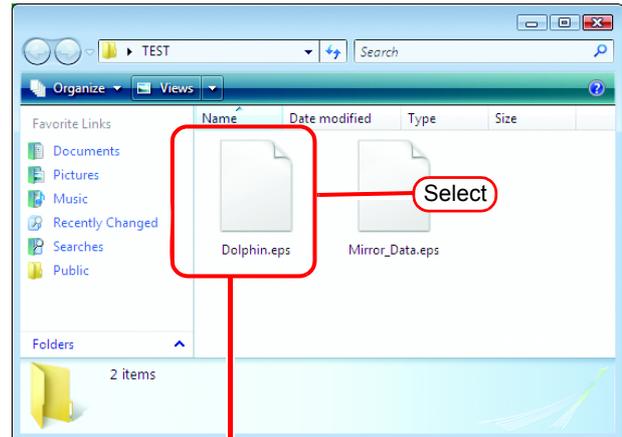

Drag and Drop

- 2 Drag and drop the selected file into the “Job List” screen of RasterLinkPro5.

The “Select file name to print” dialog is displayed.

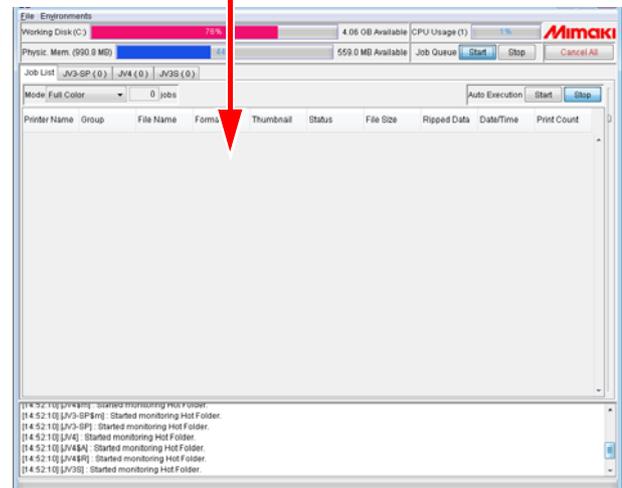

3 The dragged file is found highlighted.


Select a printer for spooling with “Printer Name”.
Select “Mode”.

When you have added a Condition set in “Condition Management” (☞ See “Creating a New Condition Set” in the Reference Guide for each model.), select the Condition set to be applied.

Designate “Copy Files to Working Directory”.

If original file may be changed or deleted after spool, check this check box.

Click the button.

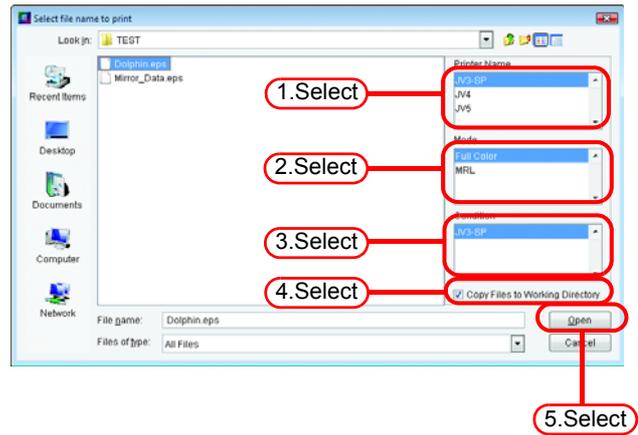

Important!


When there are many files in the folder selected or if there are large files in it, it may take some time before the [Selected file name to print] screen is updated. Wait until it is fully displayed.

4 The “Job List” screen shows the file that you selected and upon completion of spooling, it shows a thumbnail.

Important!

If the “Copy Files to working” was not checked, do not operate following things to the original file.

- * Move the file to another folder, or delete it.
- * Data modification

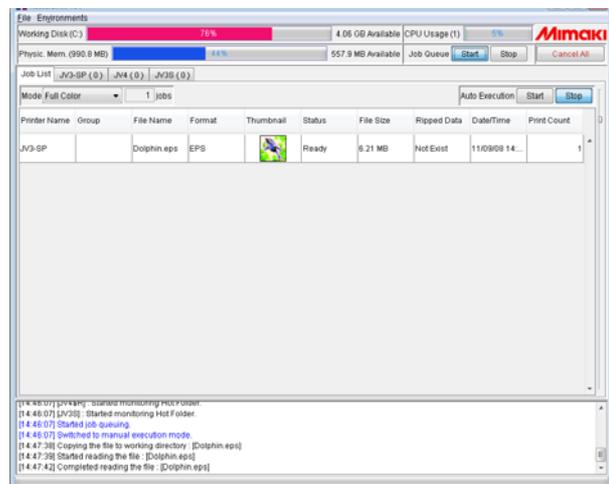


When Spooling Images by Using Hot Folder

This section describes the procedure for spooling images using a hot folder.



- Hot folders are created in the RasterLinkPro5 installation folder. Two (JV4 is four) hot folders are available for the different output modes, respectively.

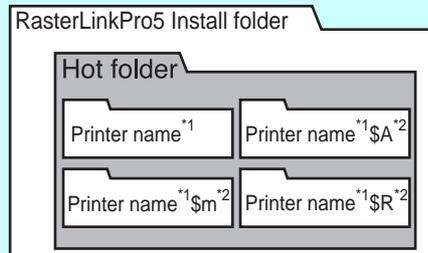

*1: The name entered when adding a printer with printer management.

*2: "\$A" (Application Separation) and "\$R" (RIP Separation) are JV4 series only, "\$m"(MRL)

- You can add a hot folder for which you can set output conditions. (👉 See "About Condition Management" in the Reference Guide for each model.)


1 Open an appropriate hot folder.

When spooling full color image files such as EPS and TIFF, open "Printer name".

When spooling MRL command files, open "Printer name \$m".


When spooling files separated into process colors by the application, open "Printer name \$A".

When separating full color images into process colors with RasterLinkPro5, open "Printer name \$R".

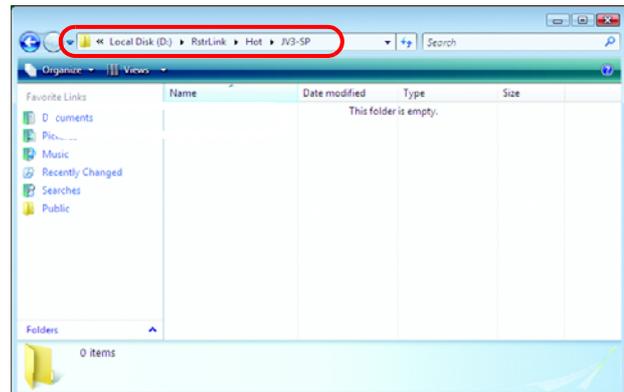

"Printer Name" is the printer name specified by adding a printer with printer management.


- 2 Copy a file to be spooled into the hot folder.

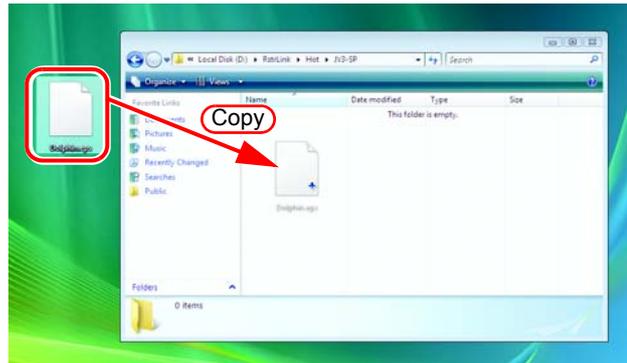


- 3 Upon completion of loading into the RasterLinkPro5, the copy in the hot folder disappears.

Important!

The files copied to the hot folder are moved to another folder after RasterLinkPro5 has read them. Be sure to move the copied files to the hot folder.

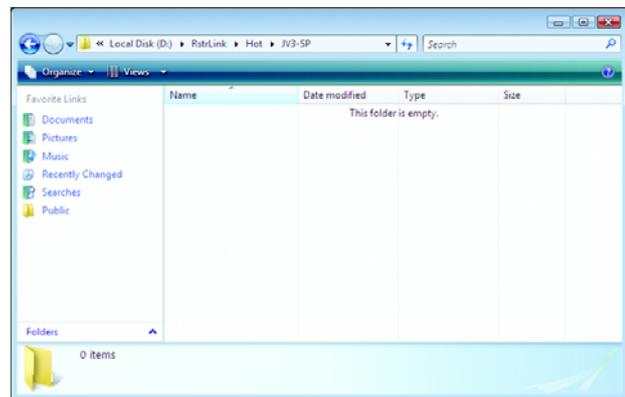

- 4 Files copied to the hot folder appear in the “Job List” screen, and when spooling is completed, a thumbnail is displayed.

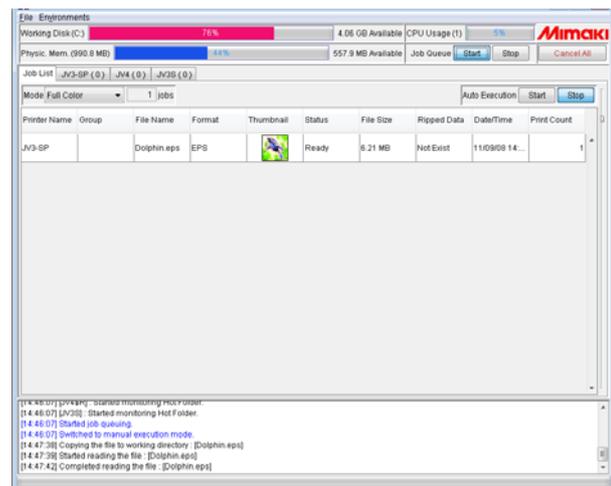


When Spooling Images Using the Printer Driver

Described below is an example of spooling image data using the printer driver from Adobe Illustrator.




- RasterLinkPro5 creates printer drivers with the following names when a printer is added.
“Printer name”, “Printer name \$A”, “Printer name \$R” (The “Printer name” part is the name entered when adding a printer with printer management.)
- Printer driver is addable with newly set output conditions. (☞ See “About Condition Management” in the Reference Guide for each model.)

- 1 Start Adobe Illustrator, and open the file to be spooled.

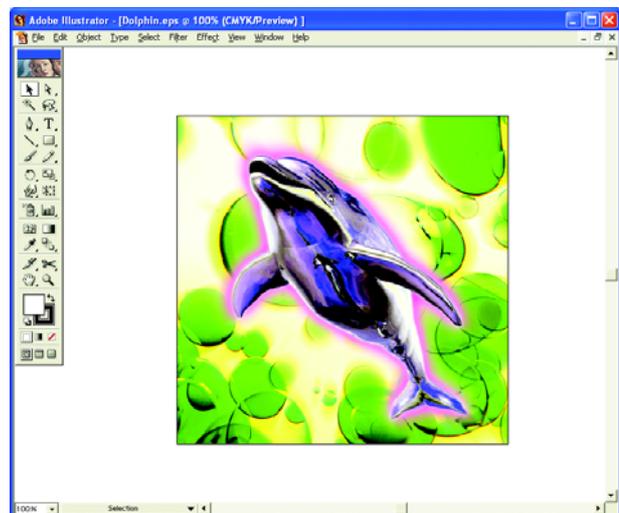

- 2 Select [Print].
[File] - [Print] menu

The “Print” dialog is displayed.

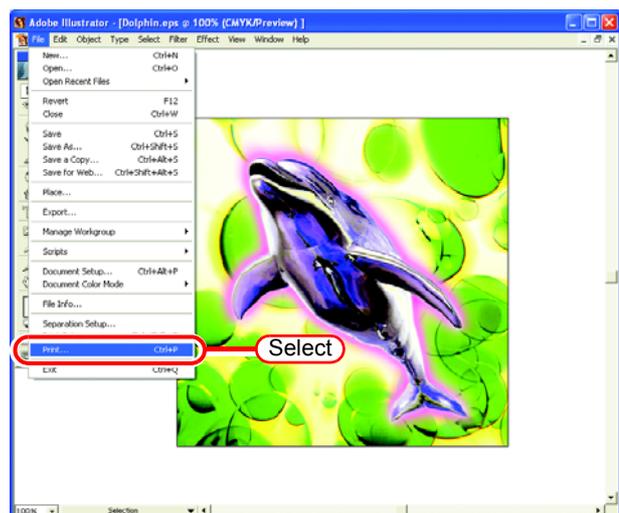

3 Select “Printer name”.


When spooling full color image files such as EPS and TIFF, select “Printer name”.

When spooling files separated into process colors by the application, select “Printer name \$A”.

When separating full color images into process colors with RasterLinkPro5, select “Printer name \$R”.




The currently set printer name appears in the “Printer name” part.

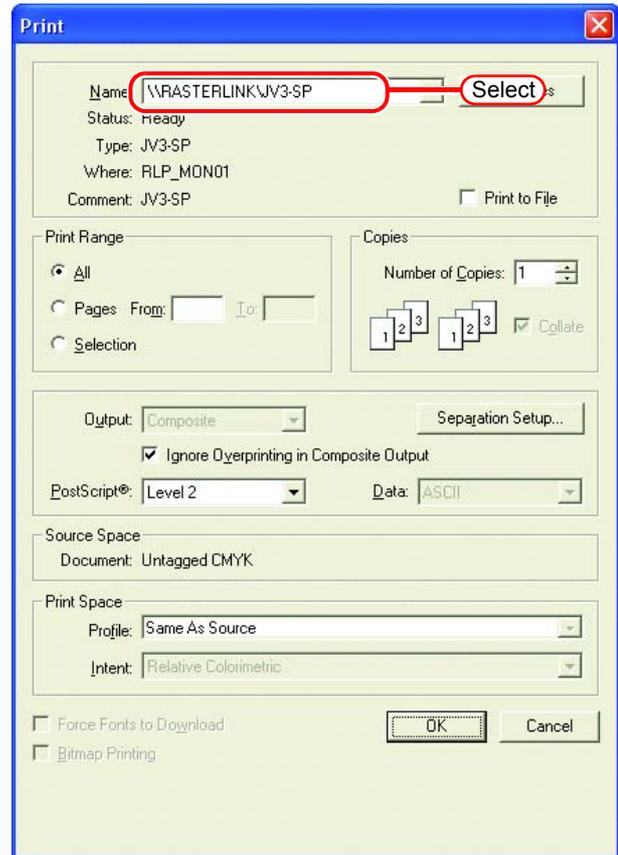


4 Click **Properties**.

The “Printer name Document Properties” dialog is displayed.

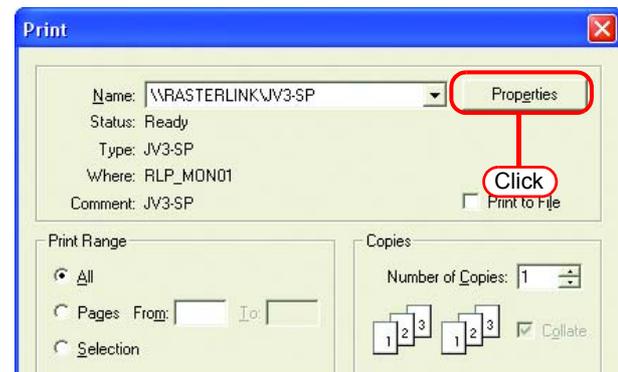


5 Click **Advanced**.

The “Printer name Advanced Options” dialog is displayed.

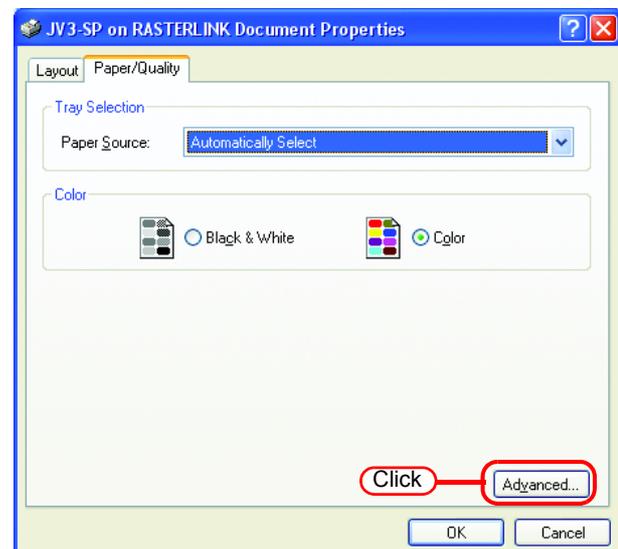


- 6 Set “PostScript Custom Page Size” and other necessary settings, and click the button.

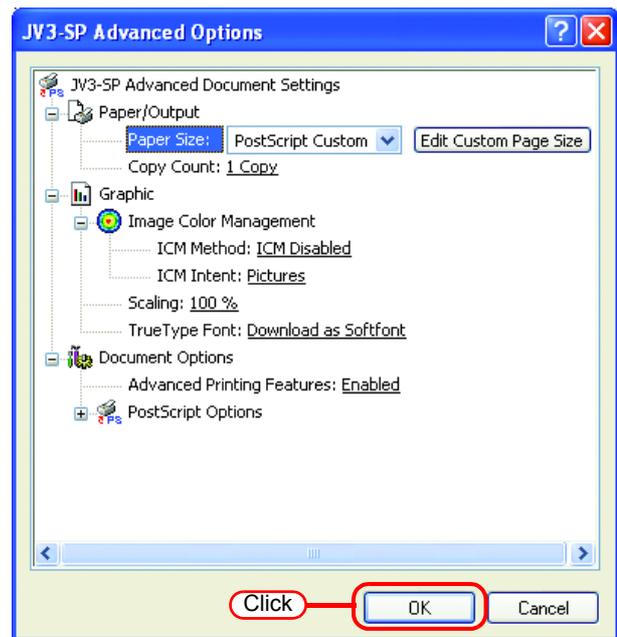


- 7 Click the button of each of the dialogs where you have made setting.

Click the button of the “Print” dialog, and the graphics data will be spooled.

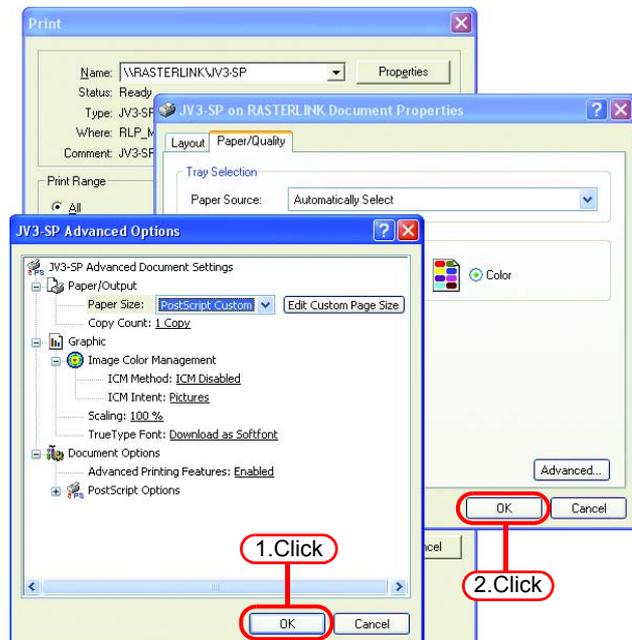

- 8 Spooled files appear in the “Job List” screen, and when spooling is completed, a thumbnail is displayed.

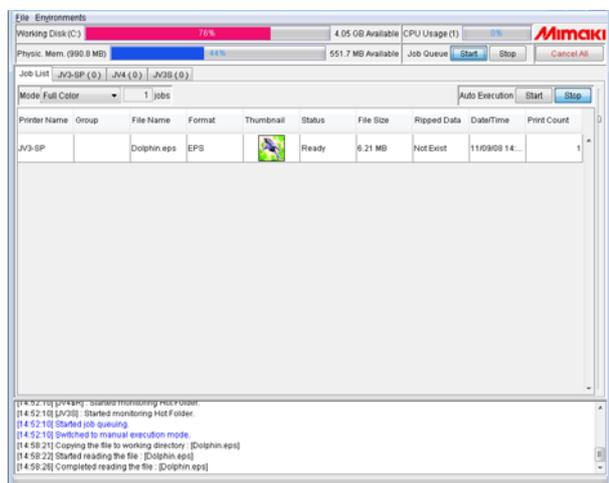

Important! The format of the image that you spooled via the printer driver becomes “ps”, irrespective of the file format of the original image.

Editing a Job

For jobs, you can make setting of various edit functions.

Select a job to be edited from “Job List”, and open the “Job Editor” by one of the following methods.



- Double click job on the “Job List”.
- Click the right button of the mouse, and select “Edit” from the pop-up menu.
- Hold down the key and press the key.

Edit functions are enable in the “Job Editor” window.

The Job Editor window differs according to the printer connected. Refer to the Reference Guide of the relevant printer.

Important!

- “Job Editor” does not open from MRL-formatted jobs.
- You cannot open the “Job Editor” window for any job other than that which is in “Printed”, “Ready”, “Cancel” or “Error” condition.

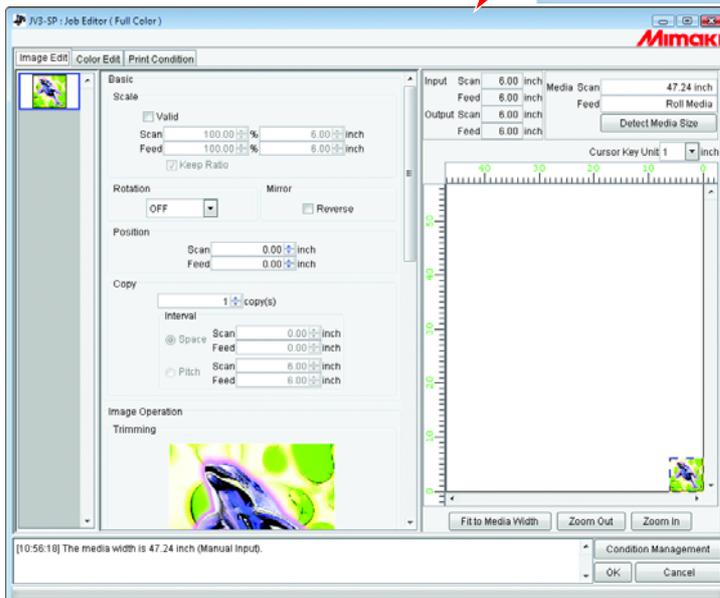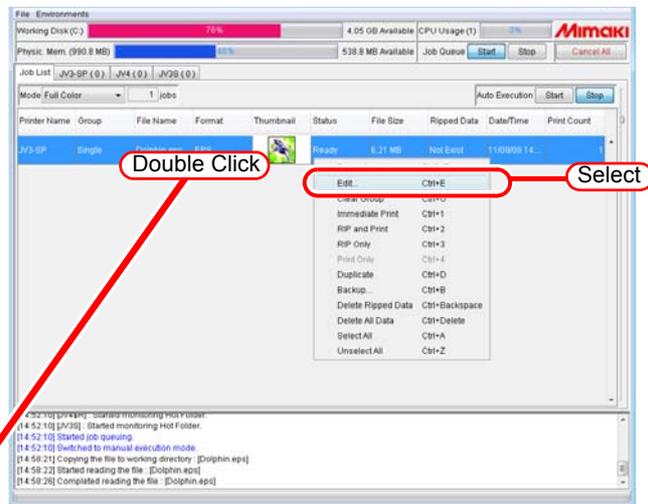

Duplicate jobs


You can duplicate jobs that have been spooled.

This saves the trouble of spooling the same image when printing it with different conditions.



Grouped jobs cannot be duplicated. Ungroup them before duplicate.


- 1 Select a job to duplicate.
Right click it and select “Duplicate”.
Or hold down the **Ctrl** key and press the **D** key.

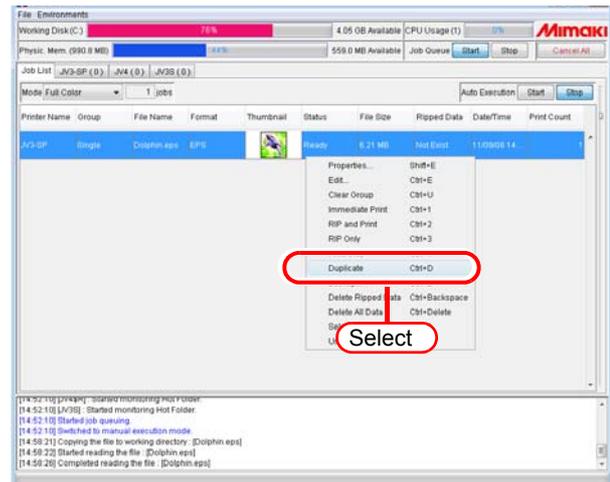

- 2 The job is duplicated.



- The output setting information (image edit, color edit, print condition) of the duplicated job and original job is the same.
- Ripped data from the original job is not duplicated.

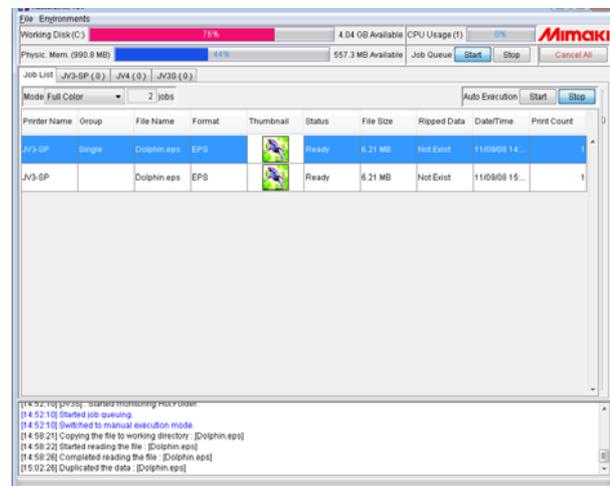

Back up and restore jobs

You can back up jobs to one file.

Using the restore function, you can also restore jobs.

Backup

Back up jobs to one file.

Grouped jobs can be backed up by group.

1 Select a job to back up.




You can also select multiple jobs.

Right click it and select “Backup”.

Or hold down the key and press the key.

The “Select file name to save” dialog box appears.

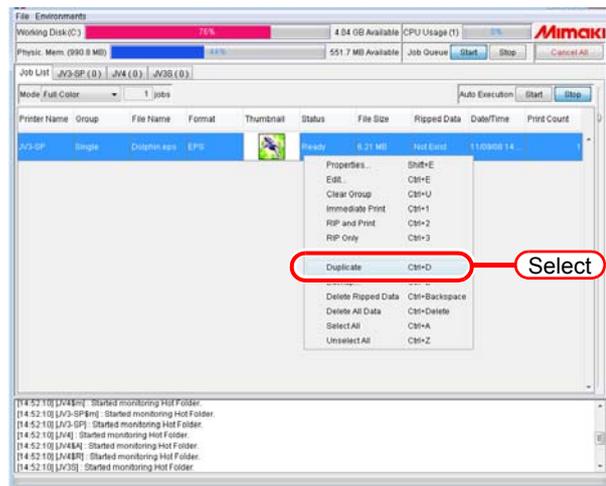


2 To backup ripped data, check “Includes Ripped Data”.

To delete the job after backup, check “Delete job after Backup”.

Enter a file name for saving the file.

Click .


The file is saved.

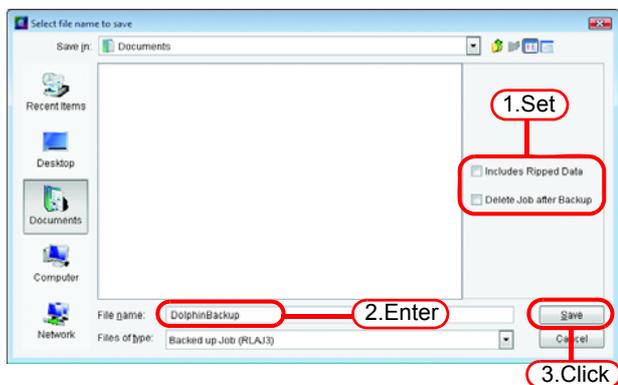

3 The extension of the backup file is “RLAJ5”.

 The backup files include the following files.

- Source image
- Job setting file
- Adjustment files used for the job
- Ripped data (when “Includes Ripped data” is checked)
- Input Profile and Device Profile used for the job

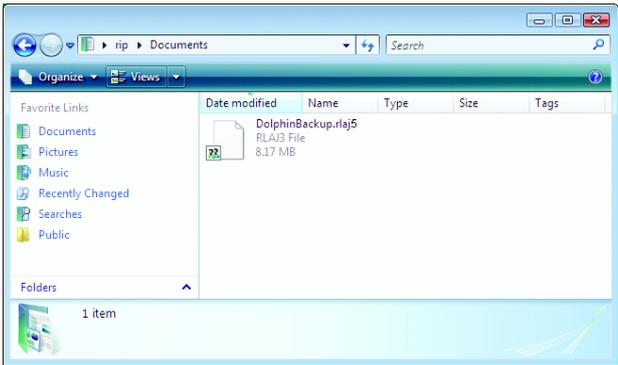

Restore

Restore and load backed up files.


 Restore is not possible if a printer for backup jobs is not registered. Restore after adding a printer of the same model as the backup job printer with printer management.

- If multiple printers of the same model as the backup job printer are registered, the job is restored to the printer with the lowest “No”. The printer “No” is displayed on the printer management screen. After restore, it is possible to change to another printer. ( Changing the output printer P.79)

1 Select [Restore].
[File] - [Restore] menu.

Or hold down the key and press the key.

The “Select file name to restore” dialog box appears.

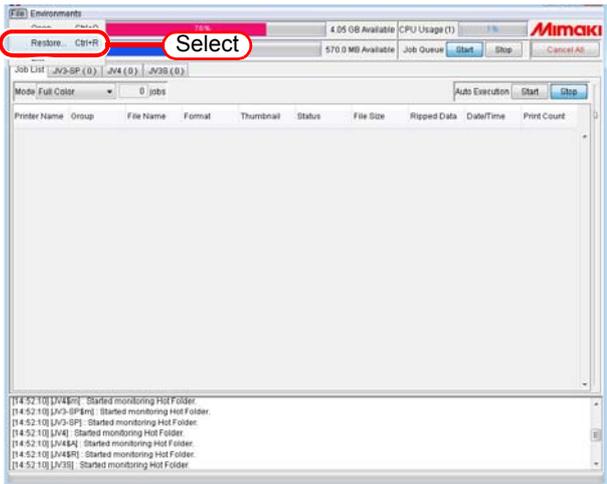


2 Select a backup file to restore.

To restore ripped data included in the backup file, check “Restore Ripped Data”.

Important!

If “Includes Ripped Data” was not checked when the backup file was created, the Ripped data cannot be restored even if “Restore Ripped Data” is checked.

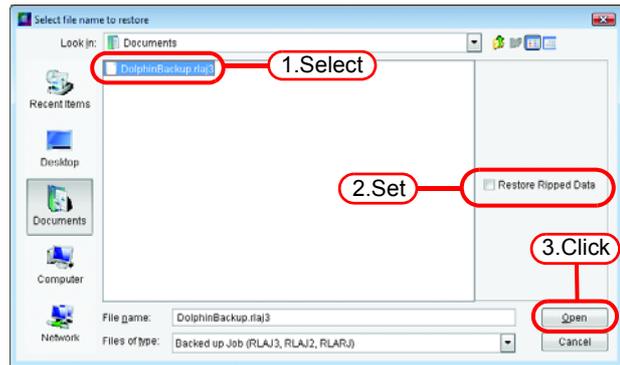

The backup job files with the extensions below can also be restored.


- “RLAJ” ...Raster LinkProII v1.0
- “RLAJ2” ..Raster LinkProII v2.0 - v2.1 v3.0 - v3.4
- “RLAJ3” ..RasterLink III Series
- “RLAJ4” ..RasterLinkPro4 Series
- “RLAJ5” ..RasterLinkPro5 Series

Click .



- If a target printer to restore the job is not registered, you cannot restore. When target printers are displayed, finish RasterLinkPro5, register the target printer, and restore again.
- If you try to restore without a profile in the job to restore installed, an error occurs and you cannot restore. A profile in the backup file is saved into the temporary folder. When the destination to save the profile is displayed, finish RasterLinkPro5, start the Profile Manager (P.14), and then restore again.
The profile saved in the temporary folder is automatically deleted when RasterLinkPro5 is started.

3 The job is restored.

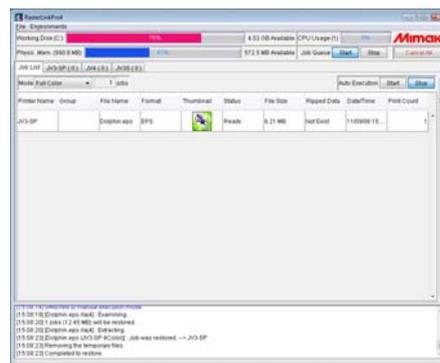

Changing the output printer

When multiple printers are registered, it is possible to change the output printer. This section shows an example in which two printers, with the model name “JV3-SP” and with 4 colors are registered with the following printer names.

Printer 1: JV3-A

Printer 2: JV3-B


Important!

- When the output destination is changed to a printer of a different model, job settings other than [Rotation], [Mirror], [Scale], [Trimming], [Position], and [Cut Line] are initialized.
- The same model means that the model name and colors are the same when the printers are registered in printer management. For example, if the model name is JV3-SP but the colors are 4 and 8, they are regarded as different models.
- After changing the output printer, open the Job Editor and check in the layout preview that the image does not extend beyond the media. If the output printer is changed, the layout position of the image is not adjusted automatically.




When the output printer for a grouped job is changed, the output printer for all the jobs in the same group is changed.

- 1 Click “Printer Name” for a job to change its output printer.

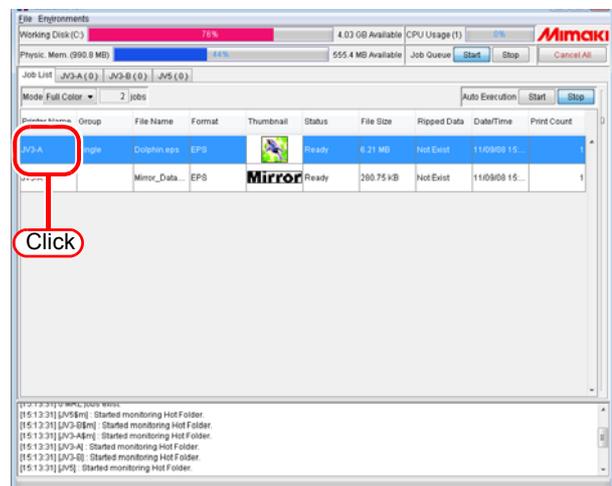

2 Available printer names are shown in a pull down menu. Select another output printer.

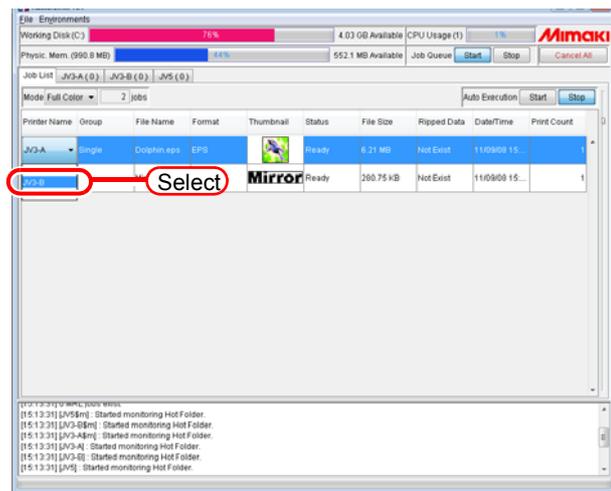

Printing

The available printing modes differ depending on the job type.

For details on MRL jobs, see “Printing MRL” (🔗 P.86).

For details on multifunctional jobs, see “Printing Multifunctional Data” (🔗 P.87).

Printing Full Color Data

The following four printing modes are available:

- Immediate print
- RIP only
- RIP and Print
- Print only

Important!

- A job cannot be printed except when “Status” of the job is “Printed”, “Ready”, “Cancel” or “Error”.
- When printing or printing with RIP on bundled RasterLinkPro5, turn the power of the printer on, and be sure to connect RasterLinkPro5 PC and the printer with USB2.0 cable or IEEE1394 cable.



- When the following printer error occurs or the following operation is performed, you can resume printing.
 - * Local status due to ink end -> Replace the ink and set to remote status
 - * Change from remote status to local status -> Set to remote status
- When the following printer error occurs or the following operation is performed, printing stops, and RIP standby jobs are also canceled.
 - * Change to local status, and the data in the printer is cleared.
 - * When bus reset occurs with a 1394 connection
 - * When the media finishes and media end is detected

Immediate print


Data is transferred to the printer simultaneously with RIP processing.

Important!

Jobs with the following conditions cannot be printed as “Immediate Print”.
Grouped / Application Separation / RIP Separation / MRL job / 2 or more copied in
“Print Count” / jobs with paneling / jobs with tiling and with [Free Location] specified

1 From “Job List”, select a job to be output.


Click the right button of the mouse, and select “Immediate print” from the pop-up menu.

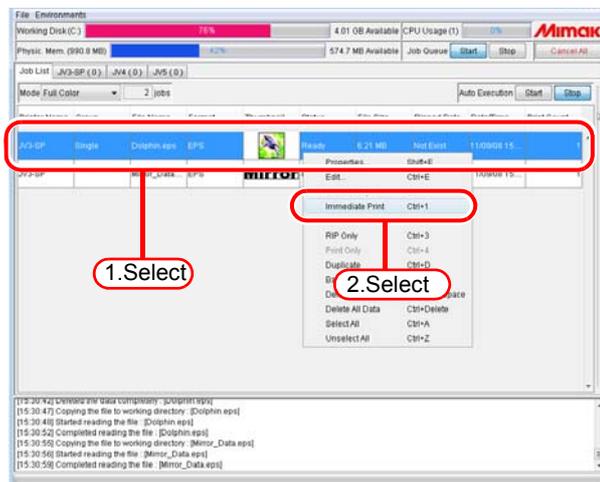

2 The execution status screen of the printer outputting the job shows the progress in the processing status view. Printing is started when the indicator of “Immediate printing” starts off.



- When processing multiple jobs, each processing status can be verified as selecting the job.
- The Ripped data is not remained after the “Immediate print” by default. The Ripped data is necessary as “Print Only” is performed afterward. (👉 P.85)
You may change the setting so that the Ripped data is remained in the Option - “Job Control” menu (👉 P.116).

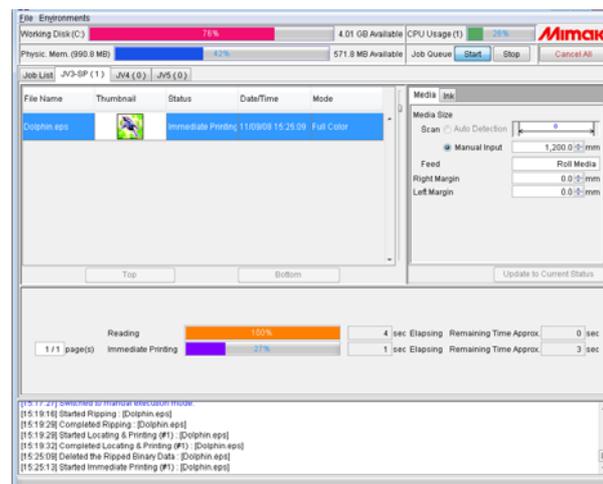

RIP and Print

The Ripped data is saved on the hard disk during RIP processing, and printing is started after completion of RIP processing.


Use this function when data transfer from RasterLinkPro5 to the printer does not catch up with printing speed.

After RIP and Print processing, “Exist” is displayed in the “Ripped Data” area of “Job List”.

Important! “RIP and Print” is not available with any MRL job.

1 From “Job List”, select a job to be output.

Click the right button of the mouse, and select “RIP and Print” from the pop-up menu.

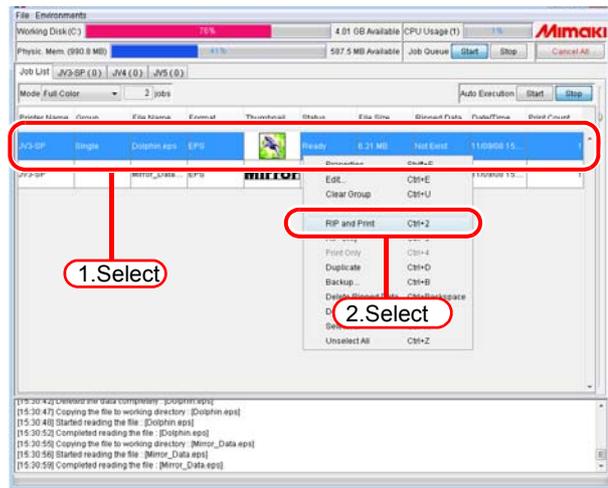


2 The execution status screen of the printer outputting the job shows the progress in the processing status view.

Printing is started when the indicator of Locating & Printing starts off.



- When processing multiple jobs, each processing status can be verified as selecting the job.
- The Ripped data is remained after the “RIP and Print” default setting. If you do not want to leave the Ripped data, due to the lack of disk space etc, change the setting to delete the Ripped data after print in the Option - “Job Control” menu (☞ P.116).

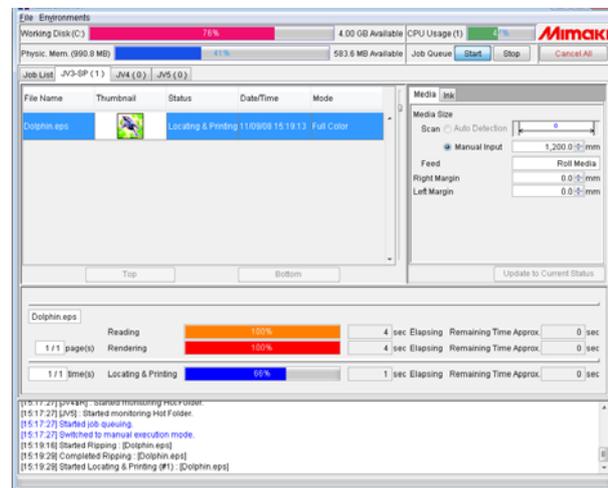

RIP only

Only RIP processing is carried out.


After RIP processing, “Exist” is displayed in the “Ripped Data” area of “Job List”.

Important!

“RIP only” is not available with any MRL job.

- 1 From “Job List”, select a job to be output.


Click the right button of the mouse, and select “RIP only” from the pop-up menu.

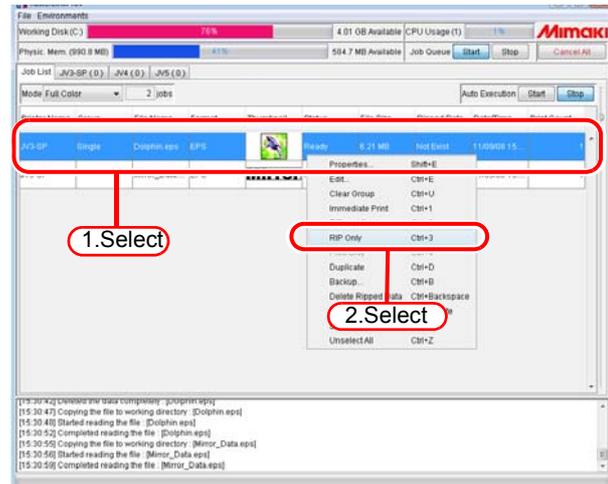

- 2 The execution status screen of the printer outputting the job shows the progress in the Processing status view.



When processing multiple jobs, each processing status can be verified as selecting the job.

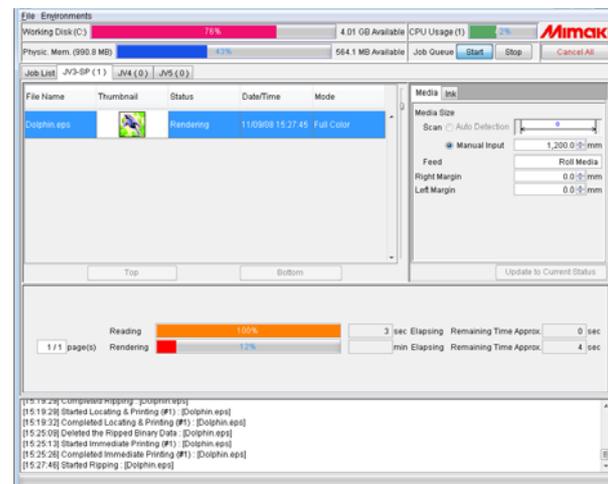

Print only


This function is available only when there is Ripped data.

Important!

- “Print only” is not available when there is no Ripped data.
- With grouped jobs, this function requires the Ripped data of all jobs belonging to the group.
- A tiling job requires the Ripped data for all tiles requested for printing.
- With multipage jobs, the Ripped data of all pages requested for printing is necessary.
- With Application Separation jobs, the Ripped data of all plates requested for printing is necessary.

- 1 From “Job List”, select a Ripped job to be output.
Select a job marked with “Exist” in the “Ripped Data” area.


Click the right button of the mouse, and select “Print only” from the pop-up menu.

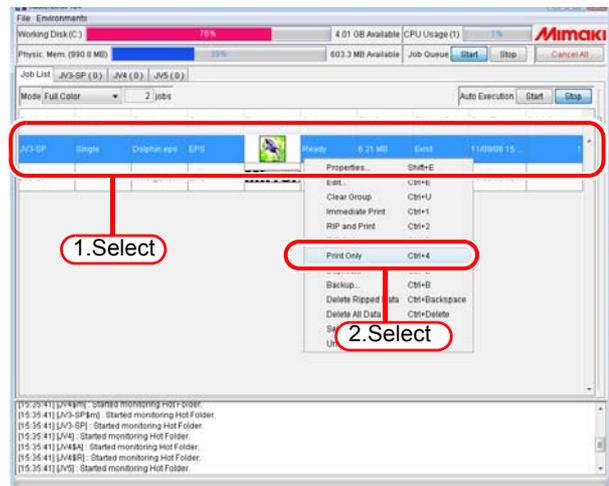

- 2 The execution status screen of the printer outputting the job shows the progress in the Processing status view.



When processing multiple jobs, each processing status can be verified as selecting the job.

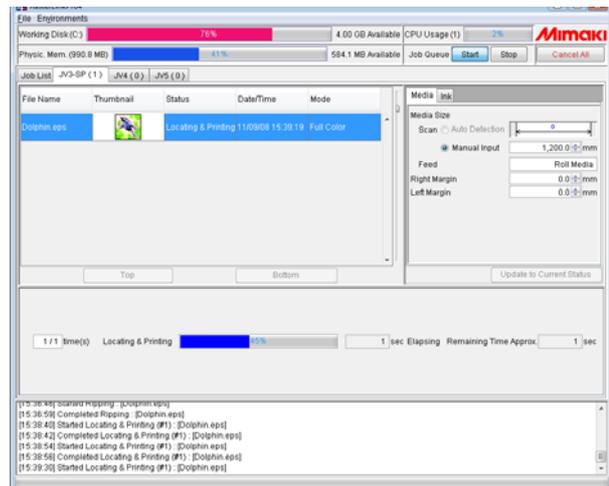


Printing MRL

The MRL command file is the data file which is receivable and printable on the printer produced by MIMAKI ENGINEERING.

The MRL command file created by a RIP other than the RasterLinkPro5 is available.


Print a MRL command file by following step:

- 1 Set "Mode" of "Job List" to "MRL".

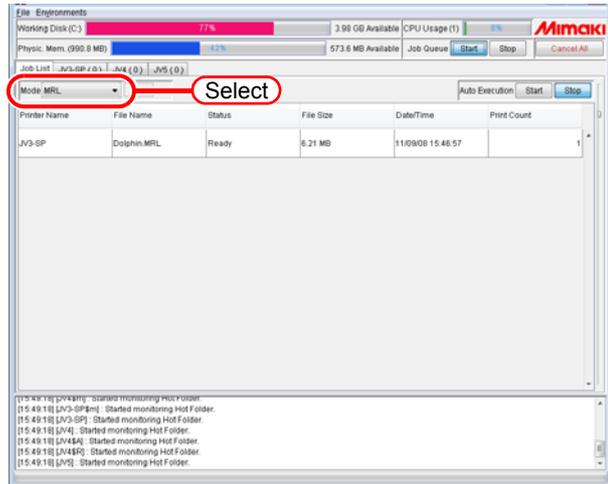

- 2 Select a job to print from the "Job List".


Click the right button of the mouse, and select "Print only" from the pop-up menu.

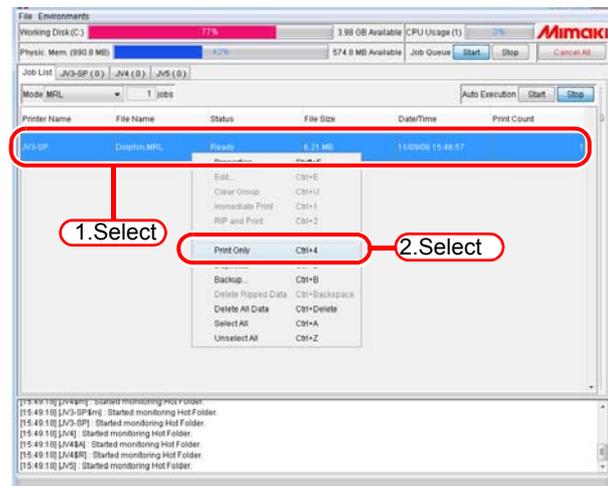

- 3 The execution status screen of the printer outputting the job shows the progress in the Processing status view.



- No thumbnail is displayed for any MRL job.
- When printing multiple jobs, each processing status can be verified as selecting the job.

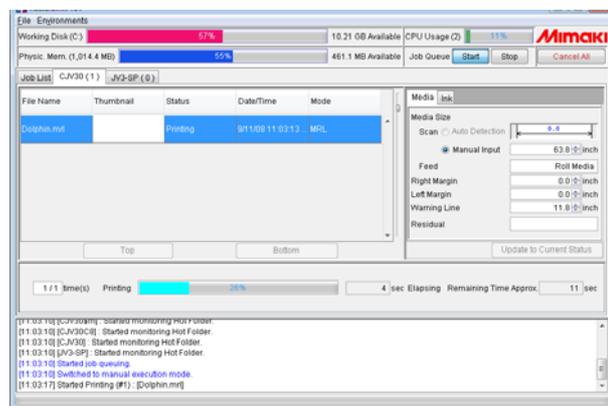

Printing Multifunctional Data

Data is output to a multifunctional printer with print and cut functions.
The available printing modes differ depending on the function type.

Print&Cut function jobs

- Immediate Print
- RIP and Print
- RIP Only
- Print Only
- Cut after Immediate Print
- Cut after RIP and Print
- Cut after Print
- Cut Only

Print function jobs

- Immediate Print
- RIP and Print
- RIP Only
- Print Only

Cut function jobs

- Cut Only

“Immediate Print”, “RIP and Print”, “RIP Only”, and “Print Only” are the same printing modes as those of Full Color jobs.


For details, see ? Printing Full Color Data?.

Cut after Immediate Print

RIP processing and printing are carried out simultaneously. Cutting is carried out after completion of printing.


- 1 From “Job List”, select a job to be output.

Click the right button of the mouse, and select “Cut” from the pop-up menu. Select “Cut after Immediate Print” from the submenu that appears.

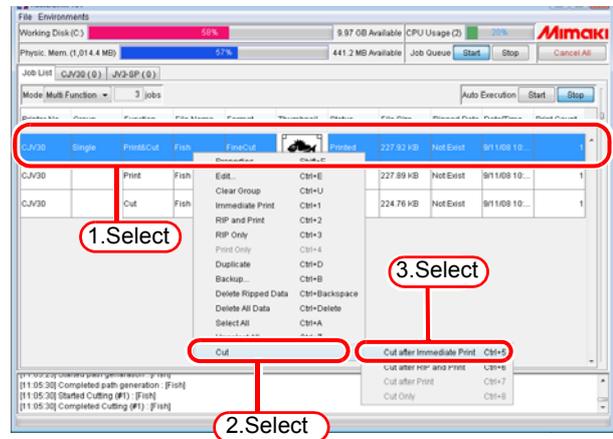

- 2 The execution status screen of the printer outputting the job shows the progress in the processing status view.

Printing is started when the indicator of "Immediate Printing" starts off.

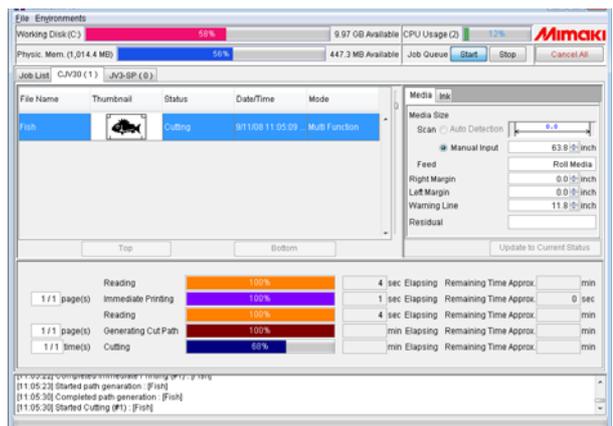


- 3 Cutting starts upon completion of “Immediate Print”.

Cut after RIP and Print

RIP processing is carried out first. Printing starts after completion of RIP processing. And, cutting is carried out after completion of printing.


- 1 From “Job List”, select a job to be output.

Click the right button of the mouse, and select “Cut” from the pop-up menu. Select “Cut after RIP and Print” from the submenu that appears.

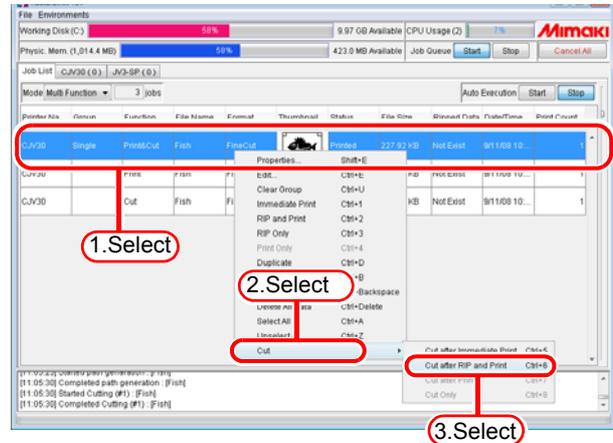

- 2 The execution status screen of the printer outputting the job shows the progress in the processing status view.

Printing is started when the indicator of “Locating & Printing” starts off.

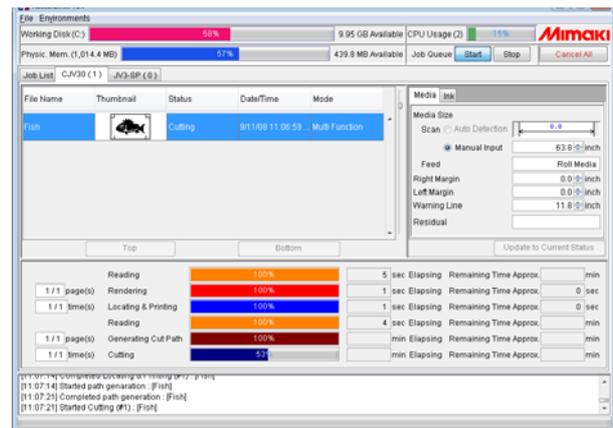


- 3 Cutting starts upon completion of printing.

Cut after Print

Only printing is carried out first and cutting starts after completion of printing. This function is available when there is Ripped data created by a previously executed RIP processing.


- 1 From "Job List", select a job to be output.

Click the right button of the mouse, and select "Cut" from the pop-up menu. Select "Cut after Print" from the submenu that appears.

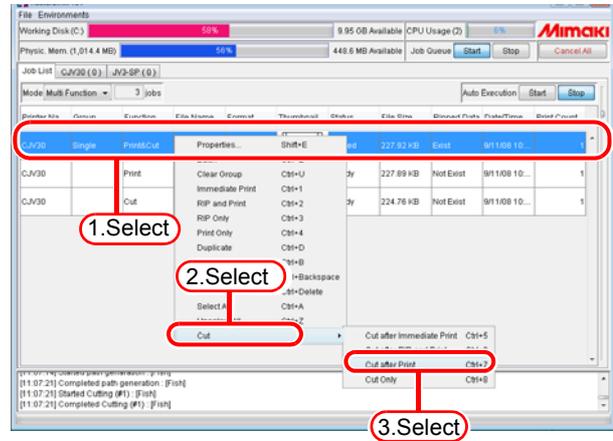

- 2 The execution status screen of the printer outputting the job shows the progress in the processing status view.

Printing is started when the indicator of "Locating & Printing" starts off.

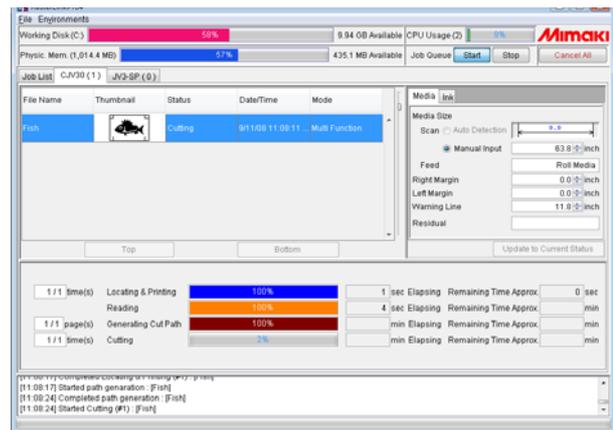


- 3 Cutting starts upon completion of printing.

Cut Only

Only cutting is carried out. For a job which function is “Print&Cut”, this function is available when there is Ripped data created by a previously executed RIP processing.


- 1 From “Job List”, select a job to be output.

Click the right button of the mouse, and select “Cut” from the pop-up menu. Select “Cut Only” from the submenu that appears.

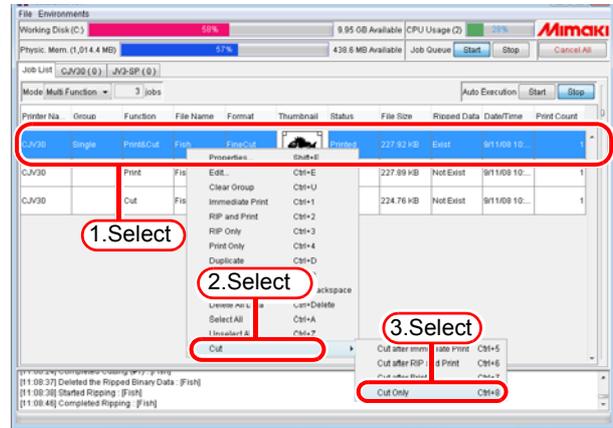

- 2 The execution status screen of the printer outputting the job shows the progress in the processing status view.


Cutting is started when the indicator of “Cut” starts off.

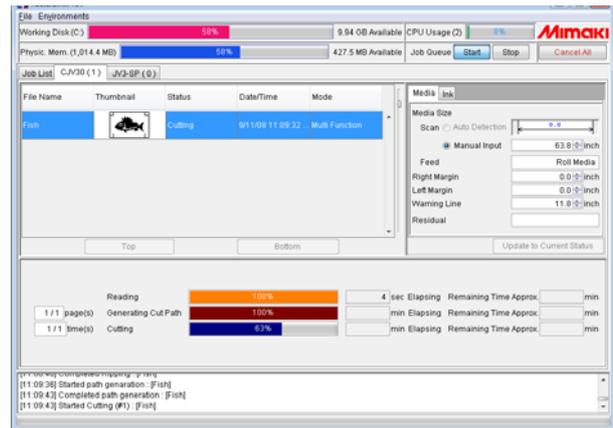

Printing by Designating the Number of Printed Sheets


Print the edited job repeatedly.

- 1 From “Job List”, select a job to be output.

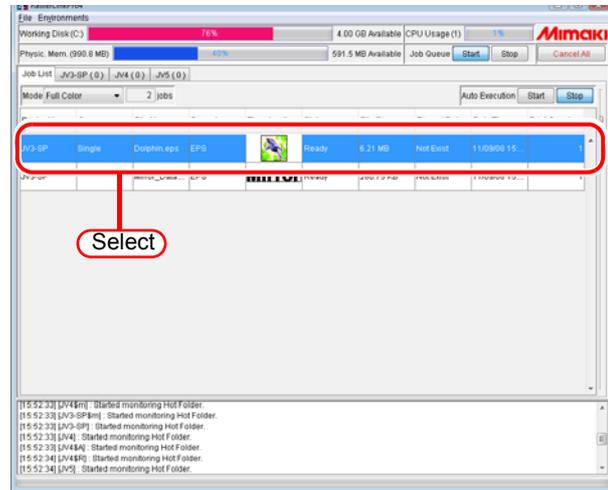

- 2 Click “Print Count”, and set printing count.

When “Print Count” has been changed, finalize the changed value by pressing the **ENTER** key.

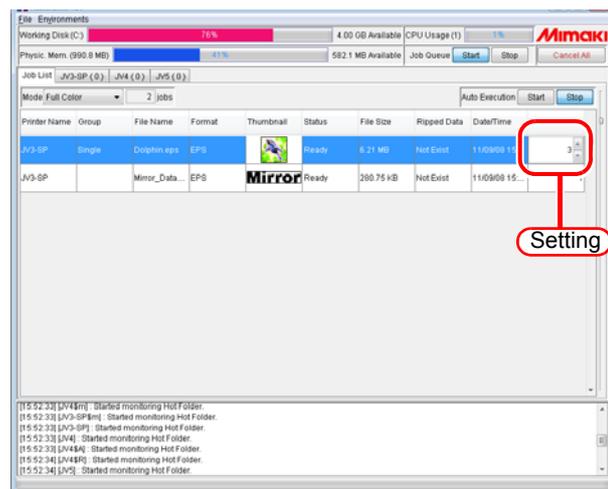

- 3 Print it. (☞ P.81)




If it is set to print twice or more, it cannot be printed as “Immediate Print”.

Automatically Executing RIP and Output Processing

- 1 Click the button of auto execution.

Important!

- A job that has already been spooled in the job list cannot be executed automatically.
- Auto execution is applied from newly spooled jobs.
- If an error occurs during auto execution, the job queue stops automatically.

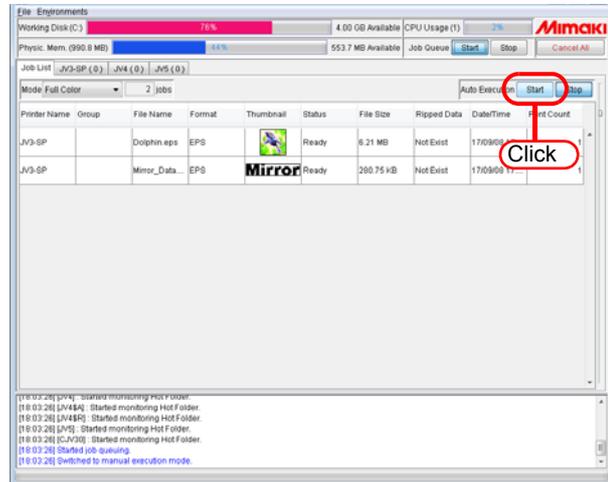

- 2 Spool jobs to RasterLinkPro5. Execute hot folder output, driver output, RasterLink output from FineCut, and RasterLink output from SimpleStudio (P.64). Spooled jobs are executed automatically with the specified execution method. Clicking the button stops auto execution.

Important!


It is not possible to specify grouping, tiling, paneling, or copying and then perform auto execution. However, if the number of copies was specified in FineCut or SimpleStudio and then the job was output with RasterLink, execution of the specified number of copies is possible.

Canceling RIP and Output processing

- 1 Select the job you wish to stop processing from the “Execution Status”.


Right click it and select “Cancel” from the pop-up menu.

Or hold down the **Ctrl** key and press the **S** key.

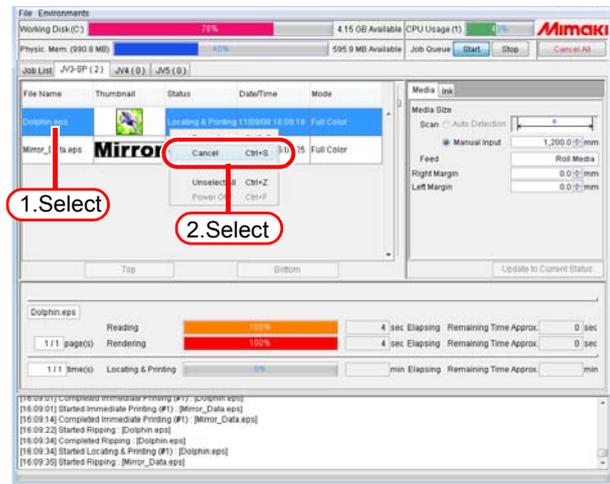


- 2 The job is deleted from the “Execution Status” after a while.

 To cancel the output immediately, execute “Data clear” several times on the printer.

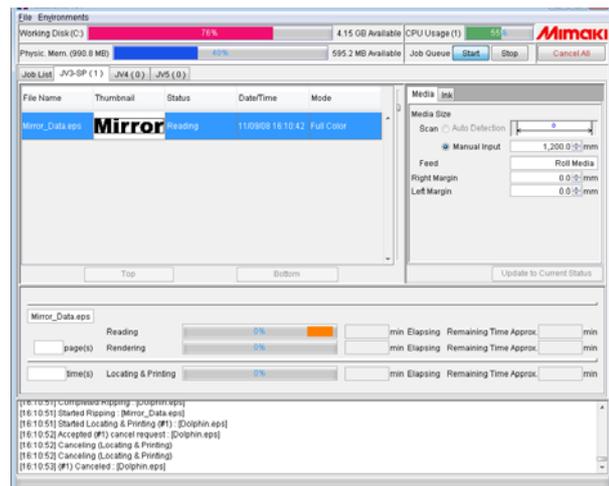

 The “Cancel” is displayed in the “Status” as you come back to the “Job List”.

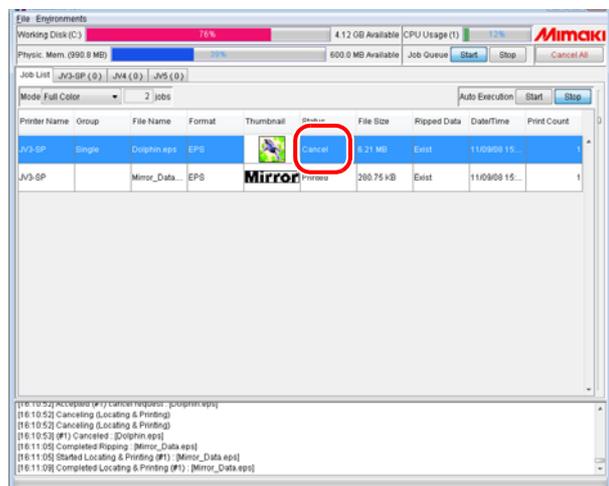



Important!

- Run the “DATA CLEAR” function of the printer several times when you stop outputting.
The accurate output results may not be obtained, if you do not run the “DATA CLEAR” function.
- When the print count is set more than 2, the printing after the cancellation does not take place.

Canceling All RIP and Output Processing

When printing from multiple printers, it is possible to cancel jobs on all printers that are queued or are being printed, with one operation.

On the job list screen, click the **Cancel All** button.

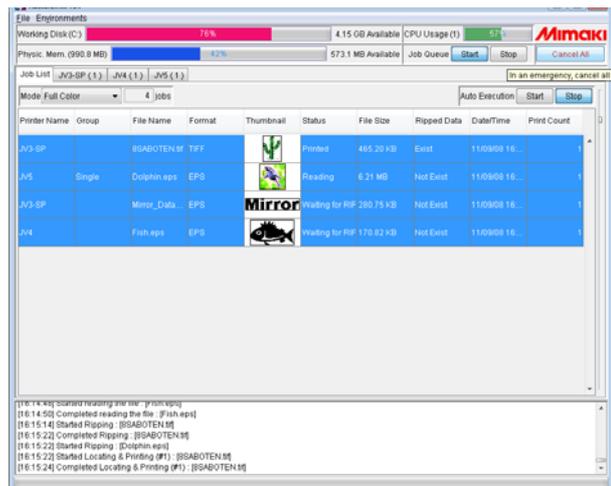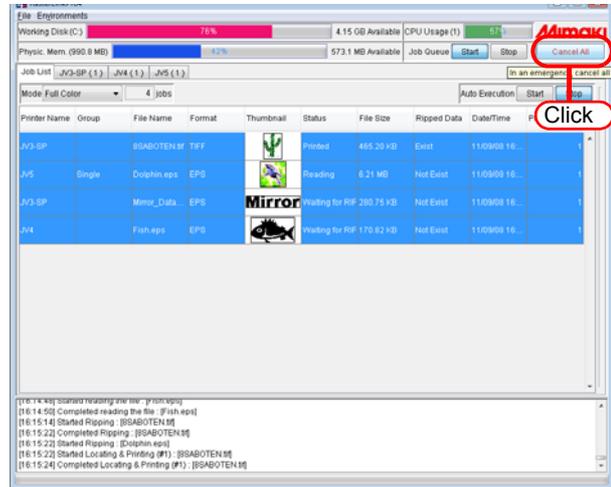

Create a color chart

You can create three color charts below in the Raster Link Pro5.

- A color chart of colors specified by RGB can be created.
- A color chart of colors specified by CMYK can be created.
- A color chart for printing with special color ink can be created.

About color chart


A color chart is a color sample list created by placing the specified color (base color) in the center and by changing its color component based on a certain standard.



- You can also set two or four base colors. In this case, color component change between two (or four) base colors can be created as a color chart.

Example of color chart


For one base color

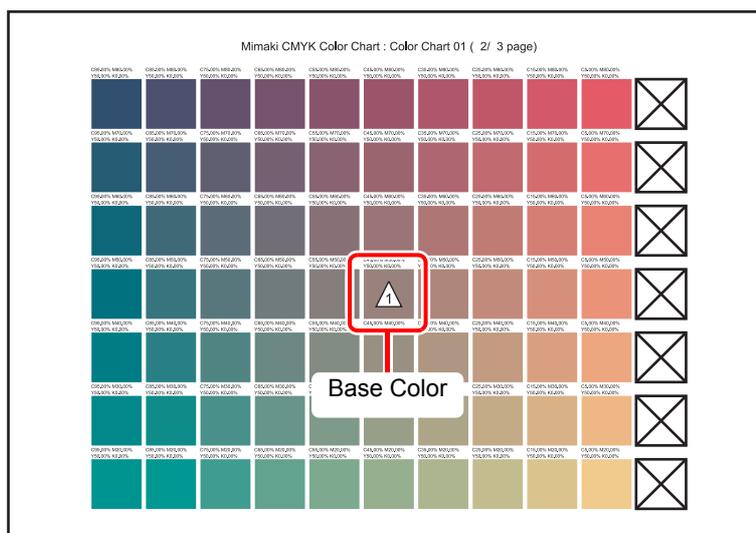

For two base color



For four base color

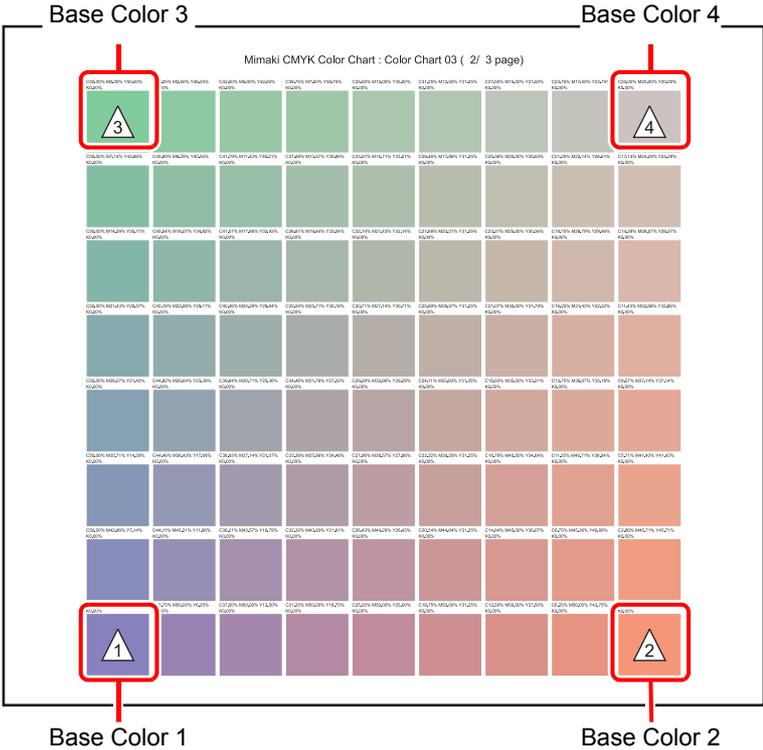


Create RGB or CMYK color chart

You can create a color chart of colors specified by RGB or CMYK.

Utilizing method of RGB/CMYK color chart

The creating flow of RGB/CMYK color chart and its utilizing method are introduced here.

You can output the created chart with the printer to check actual colors, and you can read it in the application such as Adobe Illustrator by creating the PDF file of the color chart.

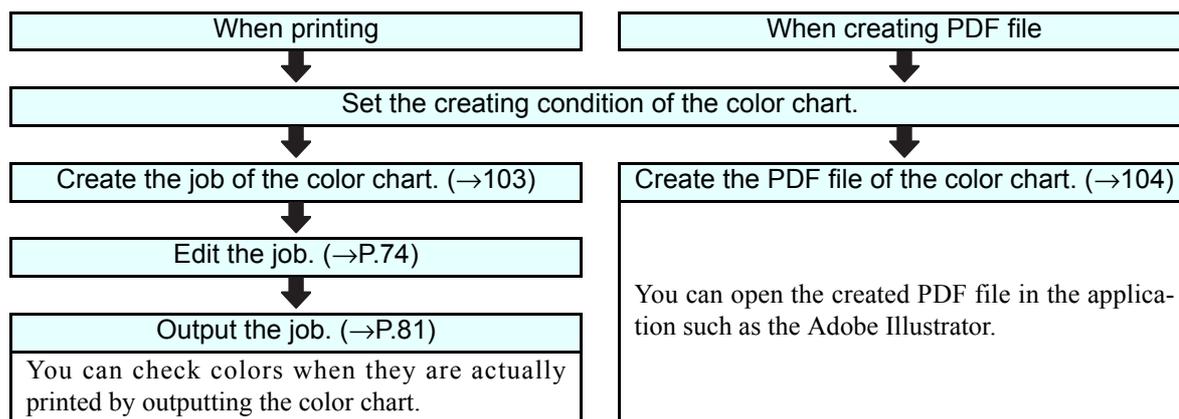


Specify the creating condition of the color chart

Here, the method to specify in the CMYK color chart is explained.


- 1 From the menu of the RasterLinkPro5, select [Tool]-[CMYK color chart].



- When specifying the creating condition of the RGB color chart, select [Tool]-[RGB color chart].

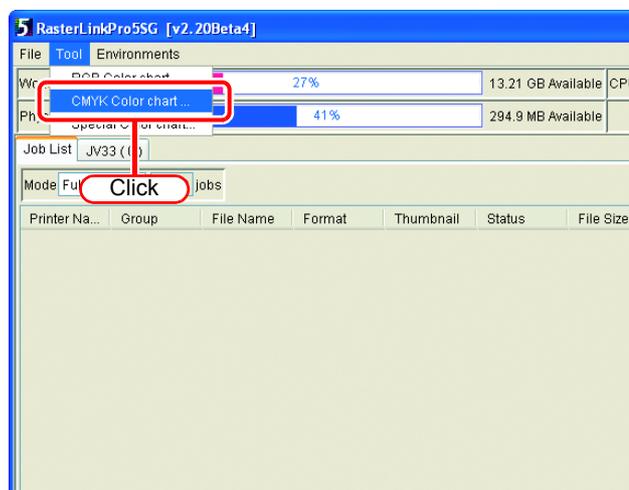

2 Specify the “Color chart name” and the “Number of base colors”. Then click the **Add** button.

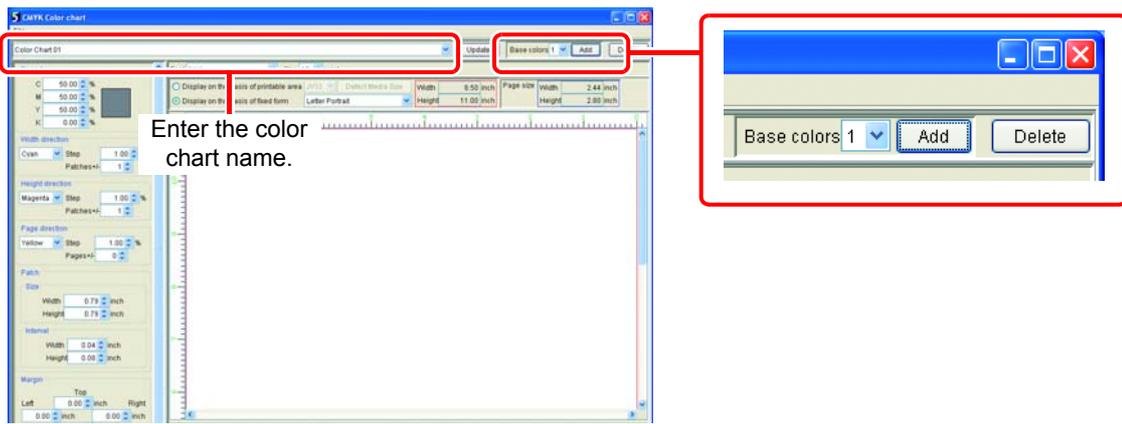

Important! • You cannot change the number of base colors after clicking the **Add** button. First, determine the number of base colors and then click the **Add** button.

3 Set the creating condition of the color chart.

For the creating condition of the color chart, set each item below:


When the base color is “1”

Specify the color component of the base color by CMYK.



The current base color is displayed. When you click this, the color selection dialog is displayed.

Set the changing amount of the color component from the base color and the number of color components to be changed. For the RasterLinkPro5, you can create a color chart changed by three color components.

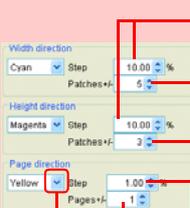

Set the changing amount of the color component of the adjacent color patches.

Specify the number of patches to be added to the right and the left (or upper and lower) by making the base color center.

 
Set the changing amount of the color component for each page.

Specify the number of pages of the previous/after pages of the basic page.

You can select the color to change by clicking this.



Set the size and the interval of the color patch.



Set the upper/bottom/right/left margins.


Font : Set the font to be used for the color chart title and the color component value information located above the color patch.

Size : Set the font size to be used for the title.

Specify the display method of the preview.

The drawing area of the printer or the blank form size is displayed (red square on the preview).

The color chart size is displayed (blue square on the preview). This shall be smaller than the red square.

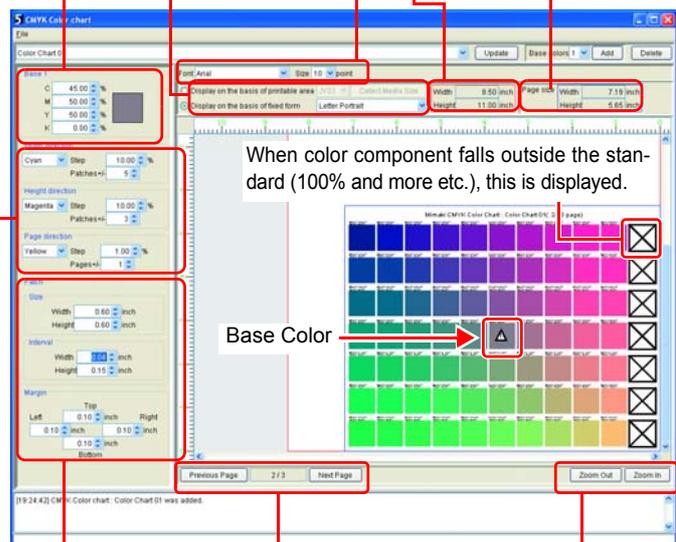

When color component falls outside the standard (100% and more etc.), this is displayed.

Base Color

Switches the pages to display preview.

Enlarges/zooms the preview display.

When the base color is "2"

- Here, if the specifying method is different from that for the base color 1, such an item is explained.
For the common items to the base color 1 such as the patch size, refer to the explanation of the previous page.

Specify the color component of the base color 1 and 2 by CMYK.

The current base color is displayed. When you click this, the color selection dialog is displayed.

Set the number of patches between the base color 1 and 2. Depending on the set number of patches, the color components will be changed automatically.

Set the changing amount of the color components of the upper/lower color patches.

Specify the number of patches to be added to upper/lower by making the base color center.

Set the changing amount of the color component for each page.

Specify the number of pages of the previous/after pages of the basic page.

You can select the color to change by clicking this.

Base Color 1

Base Color 2

When the base color is "4"

- Here, if the specifying method is different from that for the base color 1, such an item is explained.
For the common items to the base color 1 such as the patch size, refer to the explanation of the previous page.

Specify the color component of the base color by CMYK.

The current base color is displayed. When you click this, the color selection dialog is displayed.

Set the number of patches to be arranged in the height direction between the base colors. Depending on the set number of patches, the color components will be changed automatically.

Set the number of patches to be arranged in the width direction between the base colors. Depending on the set number of patches, the color components will be changed automatically.

Base Color 3

Base Color 4

Base Color 1

Base Color 2



- You can change the base color by using the preview screen.
 1. Move the mouse onto the color patch that you wish to make the base color newly and right-click it.
 2. Click “Apply color Base 1”.




Right-click to set it as the new base color.

- 4 Click the button to save the color chart setting.
You can display the saved creating condition later.



- You can delete the unnecessary creating condition.
 1. Display the creating condition to delete.
 2. Click the button.

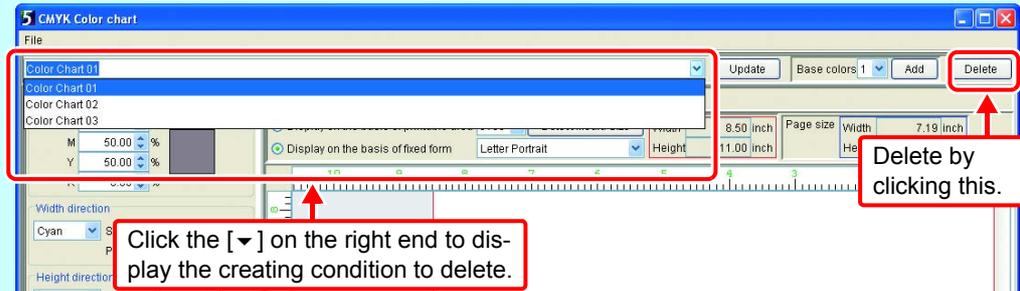


Delete by clicking this.

Click the [▼] on the right end to display the creating condition to delete.


Create the job of the color chart

Create the printing job to output the created color chart with the printer.

- 1 Select [File]-[Creat job] menu of the color chart.
The “Select condition to print” dialog is displayed.

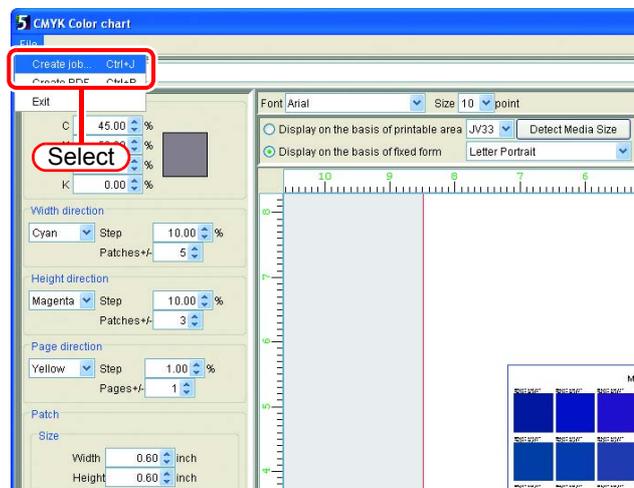

- 2 Select the printer you will use and the printing condition.

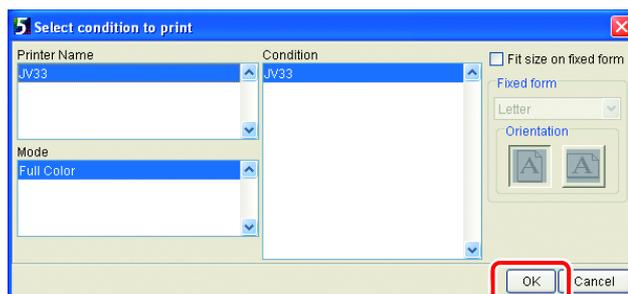

- 3 Click the button.

The color chart job is registered in the RasterLinkPro5.

For edit and output of the registered job, refer to the P.74, P.81.

By specifying “Fit size on fixed form”, you can enlarge/zoom automatically the PDF file page size depending on the specified paper size.


Create the PDF file of RGB/CMYK color chart.

Important!

- You cannot create the PDF file of the color chart of special color.


1 Select [File]-[Creating PDF file] menu of the color chart.

The “Select file name to save” dialog is displayed.

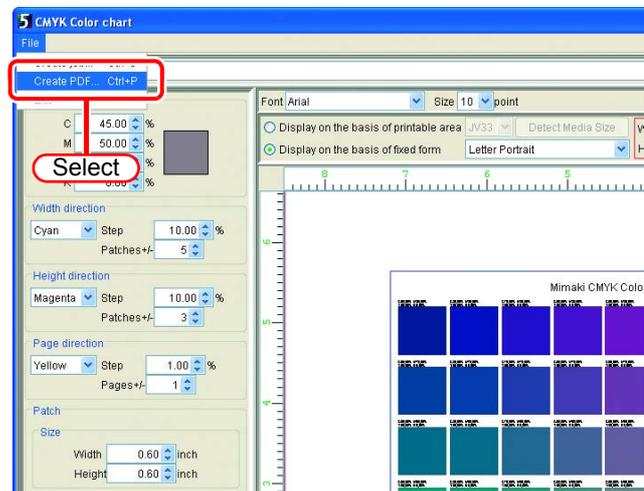

2 Specify the saving destination and the file name of the PDF file.

If you specify “Fit size on fixed form”, you can enlarge/zoom automatically the PDF file page size depending on the specified paper size.

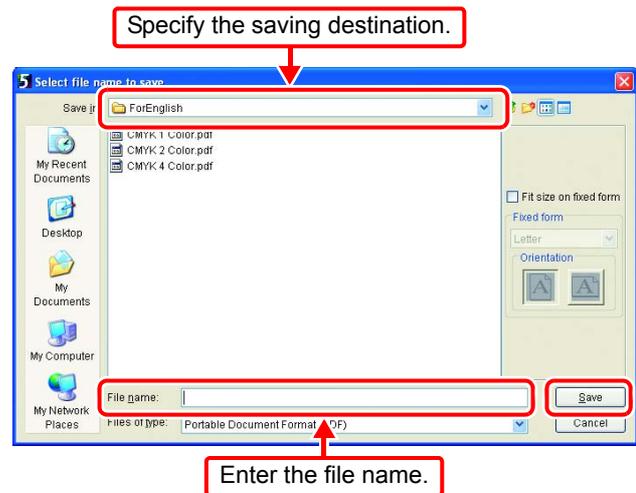

Create the color chart of special color

By creating a color chart using special color ink set in the printer, you can register color replacing information of spot color to be output by color replacing.



- For the color set by CMYK ink only, you can register the color replacing information to be output by color replacing.




- You cannot create the color chart of special color if the PC is not connected with the printer. First, check that the PC and the printer are connected.
- When you use Sb51 ink set “BMYKLbLm” in the JV22, you cannot create the special color chart.

Utilizing method of color chart of special color

The creating flow of color chart of special color and its utilizing method are introduced. By outputting the created chart with the printer, you can determine colors when you print actually.

In addition, if you register the color to use for printing to “Color replacing set”, you can convert the color replacing set to the swatch library used in the Adobe Illustrator etc.

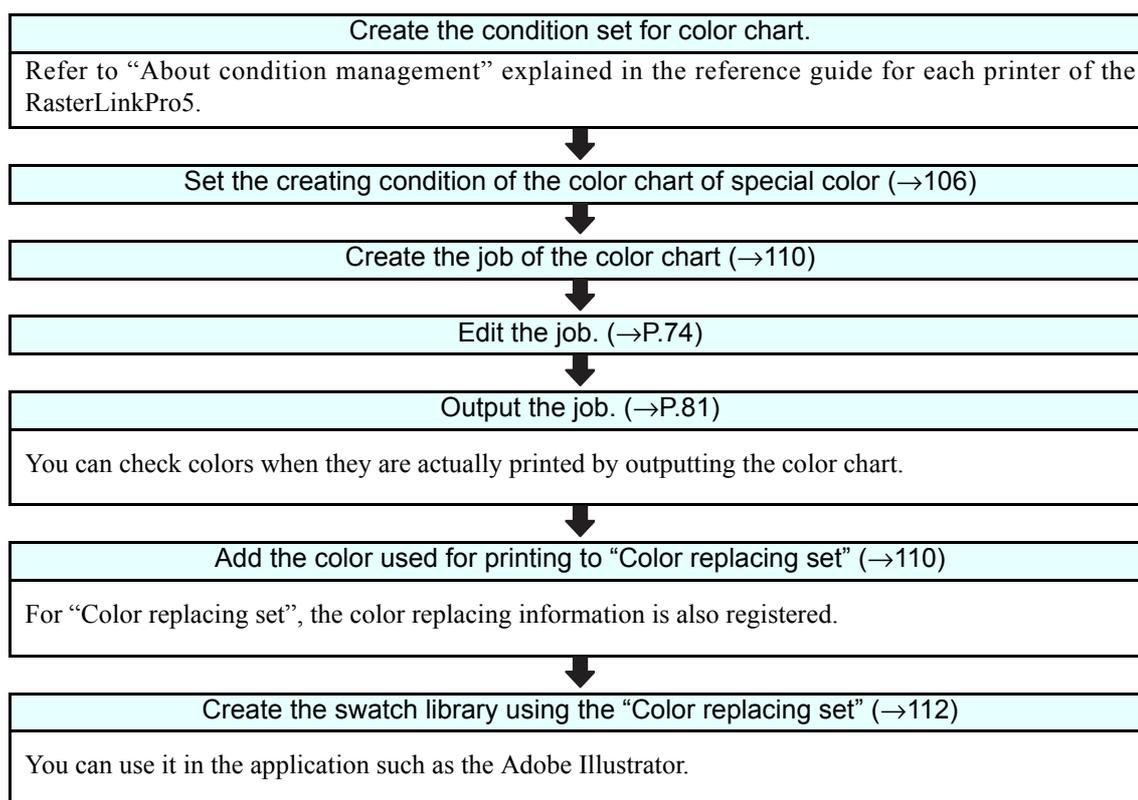


Create the condition set for the color chart of special color

To print the special color chart, it is necessary to create the [Condition set] in advance. For the creation method of the [Condition set], refer to “About Condition Management” explained in the reference guide for each printer.

Specify the creating condition of the color chart of special color


- 1 Select [Tool]-[Special Color chart] menu of the RasterLinkPro5.

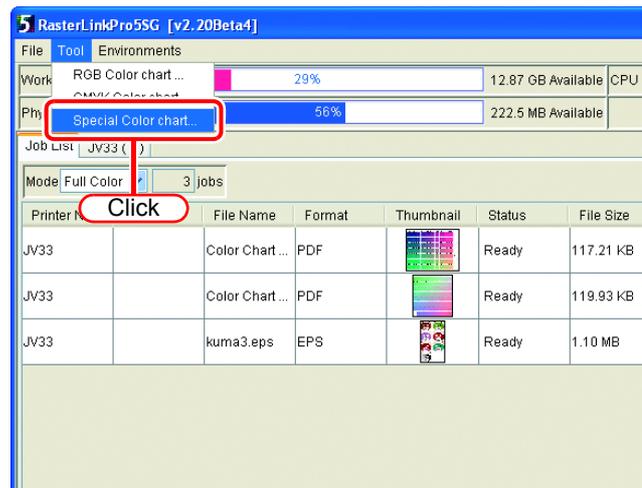

- 2 Specify three items of “Printer to print”, “Color chart name” and “Number of basic colors”. Click the button.

Select the printer.

Enter the color chart name.

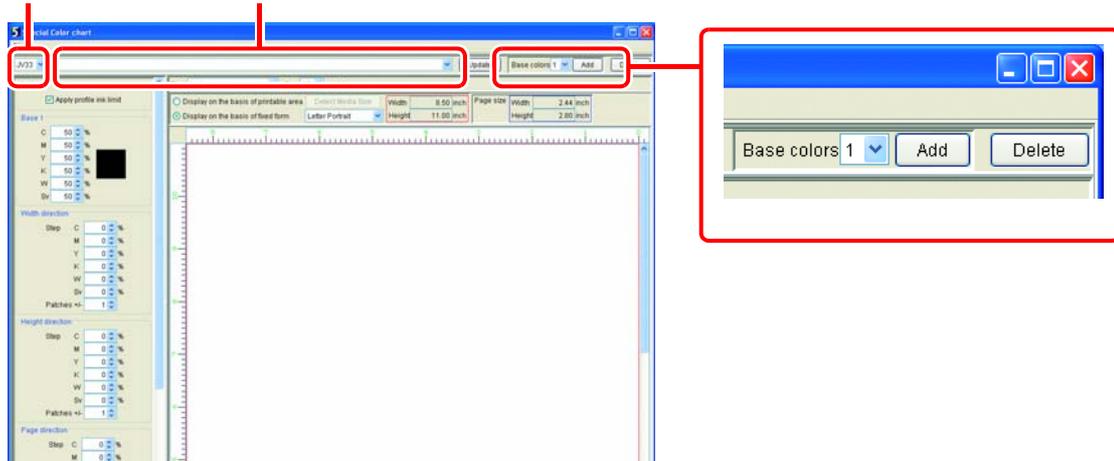

Important!

- You cannot change the number of base colors after clicking the button. First, determine the number of base colors and then click the button.

- 3 Select the condition to print the color chart, and click the button.
In the “Condition” list, the condition set registered in the condition management. When you select the condition set to print the color chart, the special color set specified in the condition set is automatically selected.



4 Set the creating condition of the color chart.

When using metallic ink, the color patch is displayed in the gradation in the preview screen.

For the creating condition of the color chart, set each item below:

When the base color is "1"

Ink Limit
 Apply profile ink limit

About "Apply profile ink limit"
 If it is checked, ink overflow can be reduced when printing.

- To reduce ink overflow, print by converting the set value to the lower value automatically (when it is set to 100%, print with the lower value than 100%).
- When it is not checked
- Print depending on the specified color component value, however, printing defect (blur etc.) can easily occur due to ink overflow.
- It is recommended to check "Apply profile ink limit".

Base 1

C	0	%
M	21	%
Y	93	%
K	0	%
W	0	%
Sv	65	%

The current basic color is displayed. When you click this, the [Base color] selection dialog is displayed.

Specify the color component of the base color.

Width direction

Step	C	0	%
	M	2	%
	Y	0	%
	K	0	%
	W	0	%
	Sv	0	%

Set the changing amount of the color component of the adjacent color patches.

Patches +/-: 6

Specify the number of patches to be arranged in the right and left by making the base color center.

Height direction

Step	C	0	%
	M	0	%
	Y	2	%
	K	0	%
	W	0	%
	Sv	0	%

Set the changing amount of the color components of the upper/lower color patches.

Patches +/-: 4

Page direction

Step	C	0	%
	M	0	%
	Y	1	%
	K	0	%
	W	0	%
	Sv	0	%

Specify the number of patches to be added to upper/lower by making the base color center.

Patches +/-: 1

Pages +/-: 1

Set the changing amount of the color component for each page.

Specify the number of pages of the previous/after pages of the basic page.

Patch Size

Width: 0.50 inch
 Height: 0.50 inch

Interval

Width: 0.04 inch
 Height: 0.15 inch

Margin

Top: 0.10 inch
 Left: 0.10 inch
 Right: 0.10 inch
 Bottom: 0.10 inch

Set the upper/bottom/right/left margins.

Font : Set the font to be used for the color chart title and the color component value information located above the color patch.
 Size : Set the font size to be used for the title.

Specify the display method of the preview.

The drawing area of the printer or the blank form size is displayed (red square on the preview).

The color chart size is displayed (blue square on the preview). This shall be smaller than the red square.

When color component falls outside the standard (100% and more etc.), this is displayed.

Base color

Switches the pages to display preview.

Enlarges/zooms the preview display.

Important!

- If ink of the specified special color set exists in three slots and more, you cannot uncheck "Apply profile ink limit".
- It is the same for the setting of [Applying profile ink limit] of [Color edit]-[Color replacement].

When the base color is "2"

- Here, if the specifying method is different from that for the base color 1, such an item is explained.
For the common items to the base color 1 such as the patch size, refer to the explanation of the previous page.

Specify the color component of the base color 1 and 2 by CMYK.

The current base color is displayed. When you click this, the [base color] dialog is displayed.

Base color 1 Base color 2

Set the number of patches between the base color 1 and 2. Depending on the set number of patches, the color components will be changed automatically.

Set the changing amount of the color components of the upper/lower color patches.

Specify the number of patches to be added to upper/lower by making the base color center.

Set the changing amount of the color component for each page.

Specify the number of pages of the previous/after pages of the basic page.

When the base color is "4"

- Here, if the specifying method is different from that for the base color 1, such an item is explained.
For the common items to the base color 1 such as the patch size, refer to the explanation of the previous page.

Specify the color component of the base color

The current base color is displayed. When you click this, the [base color] dialog is displayed.

Base color 3 Base color 4

Base color 1 Base color 2


Patches

Set the number of patches to be arranged in the height direction between the base colors. Depending on the set number of patches, the color components will be changed automatically.

Set the number of patches to be arranged in the width direction between the base colors. Depending on the set number of patches, the color components will be changed automatically.

 • You can change the base color by using the preview screen.

1. Move the mouse onto the color patch that you wish to make the base color newly and right-click it.
2. Click "Apply color Base 1".

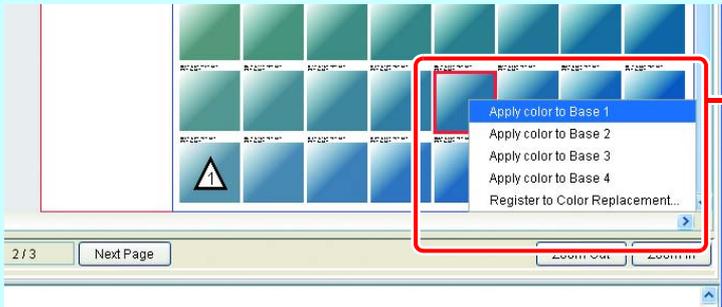


Right-click to set it as the new base color.

- 5** Click the button to save the color chart setting.
You can display the saved creating condition later.

 • You can delete the unnecessary creating condition.

1. Display the creating condition to delete.
2. Click the button.

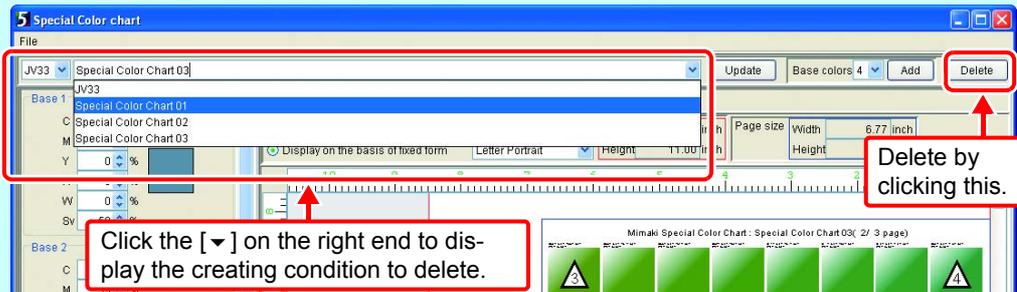

Click the [▼] on the right end to display the creating condition to delete.


Delete by clicking this.

Create the job of the color chart

Create the printing job to output the created color chart with the printer.


- 1 Select [File]-[Creat job] menu of the color chart.

The “Select condition to print” dialog is displayed.

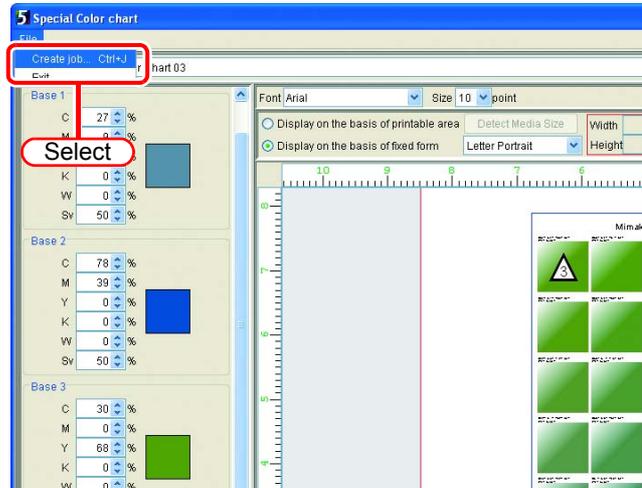

- 2 Select the printer you will use and the [Condition set].

You cannot select the printer for the color chart of special color.

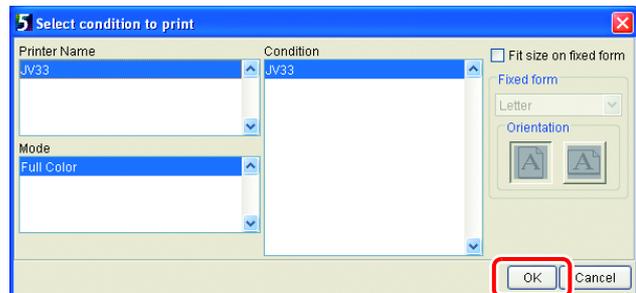

- 3 Click the button.

The color chart job is registered in the RasterLinkPro5.

For edit and output of the registered job, refer to the P.74, P.81.

By specifying “Fit size on fixed form”, you can enlarge/zoom automatically the printing job page size depending on the specified paper size.


Add the color to use for printing to "Color replacing set"

After determining the color to use for printing by outputting the color chart, add the determined color to “Color replacing set”.



- The “Color replacing set” includes the “Color replacing information” to be used for color replacement in the RasterLinkPro5.
- You can create the swatch library with the “Color replacing set” contents (→P.112) and use it in the Adobe Illustrator etc.
- For the data using the created swatch library, it is not necessary to specify the color replacing information at color replacement in the RasterLinkPro5. The color replacing information registered in the “Color replacing set” is automatically specified.

- 1 Display the saved creating condition.

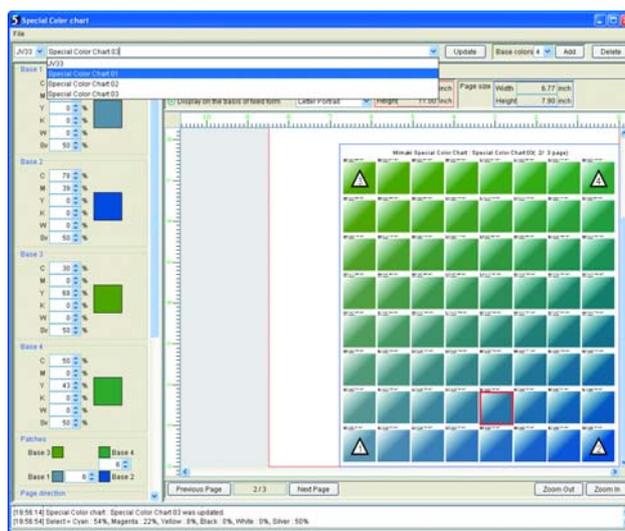

- 2 Right-click on the patch to register in the color replacing set and click "Register to Color Replacement". The "Register to Color Replacement" dialog is displayed.




- 3 Select the color replacing set to register.

- 4 Enter the "Color name" and click the button.

The color replacing set of the determined color is registered.

When you wish to change the registered color, select the color to change in the color name list and then click the button.

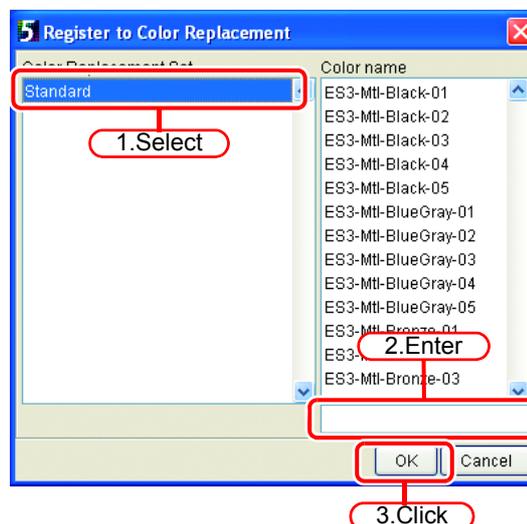

Create the swatch library

Using the registered contents in the “Color replacing set”, you can create the swatch library. You can use the created swatch library in the Adobe Illustrator etc.


Important!

- You cannot create the swatch library if the PC is not connected with the printer. First, check that the PC and the printer are connected.

- 1 Display the job list screen of the RasterLinkPro5 to select the job other than that of the color chart of special color.

Important!


- As the special color chart job is a special job, you cannot create the swatch library for it. In addition, you cannot change the setting of color replacement.

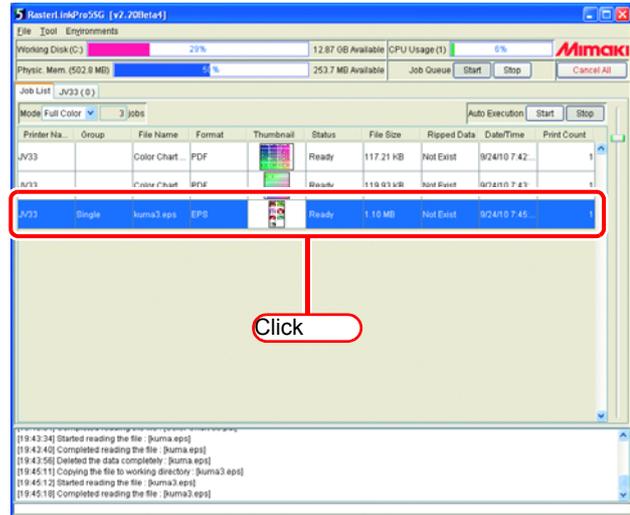

- 2 Display the “Job editor” of the selected job.

By referring to the P75 “Editing job”, display the “Job editor”.


- 3 Click the [Color Edit] menu to select the [Color Replacement].

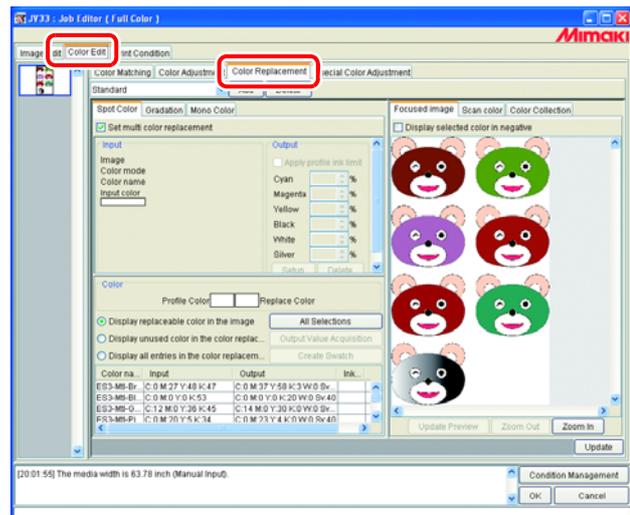

- 4** Check “Display all entries in the color replacement” and select the color name whose swatch library you wish to create.

When you click it while pressing the [Ctrl] key, you can select multiple color names.


If you wish to create the swatch libraries of all color names, press the [Ctrl] + [A] key.

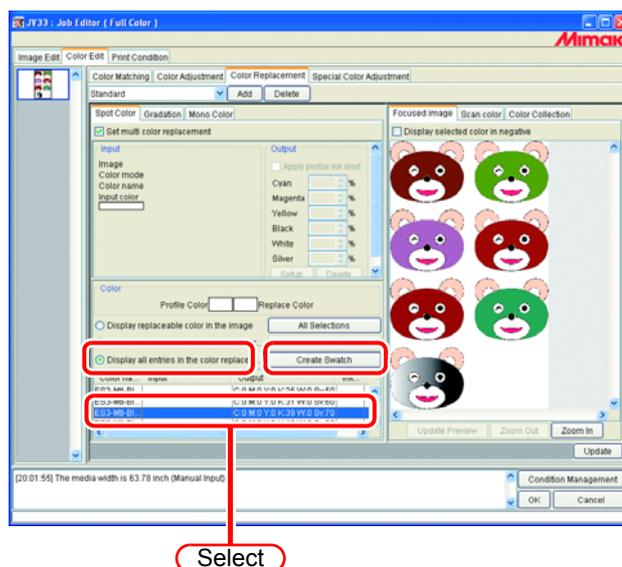

- 5** Click button.
The “Select file name to save” dialog is displayed.

- 6** Specify the save direction and enter the file name.


- 7** Specify the swatch file type to create and click the button.
The swatch library was created.
You can use the created swatch library in the Adobe Illustrator etc.

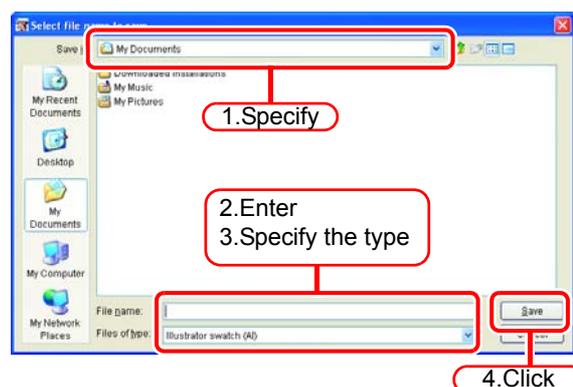

Open the created swatch library in the application

For Adobe Illustrator


- 1 Open the swatch file from [Window]-[Swatch Library]-[Other Library] menu.

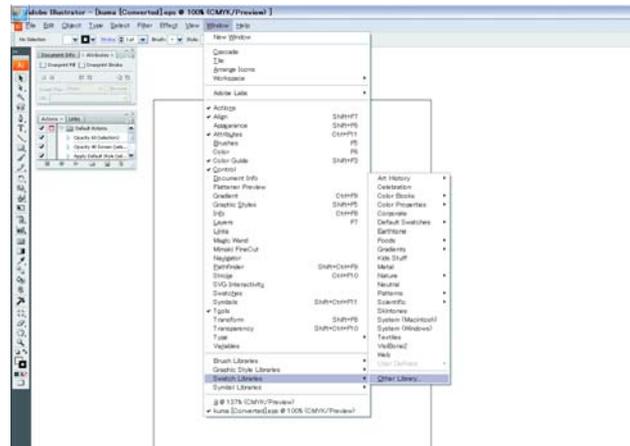

- If you save the swatch file in the folder below, you can open directly from [Window]-[Swatch library] menu of the Illustrator.
Illustrator installation folder\Preset\Swatch

For CoreIDRAW

- 1 Open the swatch library from [Window]-[Color palettes]-[Open palette] menu.

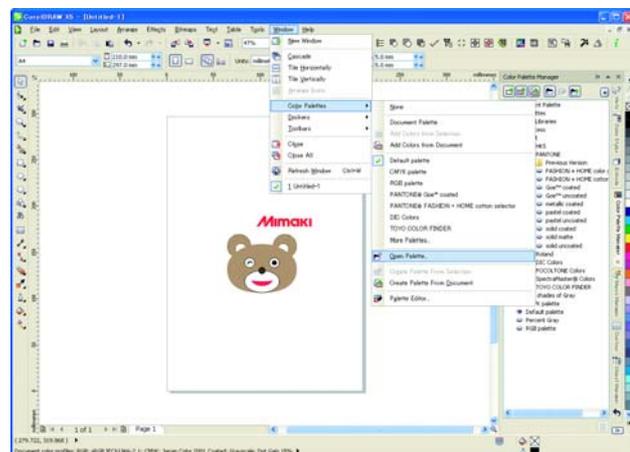

Important!

Note when using swatch in the CoreIDRAW X4

- Make the file name when creating swatch "userinks.cpl".
- Save the created file in the following place. (It is recommended to save the preexistent files by saving again with another name.)
- For Windows XP
Current drive\Documents and Settings\User name\Application Data\Core\CoreIDRAW Graphics Suite X4\User Custom Data\Palettes
- For Windows Vista and later
Current drive\Users\User name\AppData\Roaming\Core\CoreIDRAW Graphics Suite X4\User Custom Data\Palettes

Job Property



Settings of “File”, “Results”, “Image edit”, “Color edit”, “Print condition” are displayed.

- Important!**
- Displayed property items differ depending on the printer used.
 - The Property is not displayed with the job you are editing.
 - For a MRL job, only “MRL” information is displayed.
 - For a job being currently executed, the “Results” is not displayed.

Select one job for which Job property is to be displayed.

Click the right button of the mouse, and select “Properties” from the pop-up menu.

Or hold down the **Shift** key and press the **E** key.

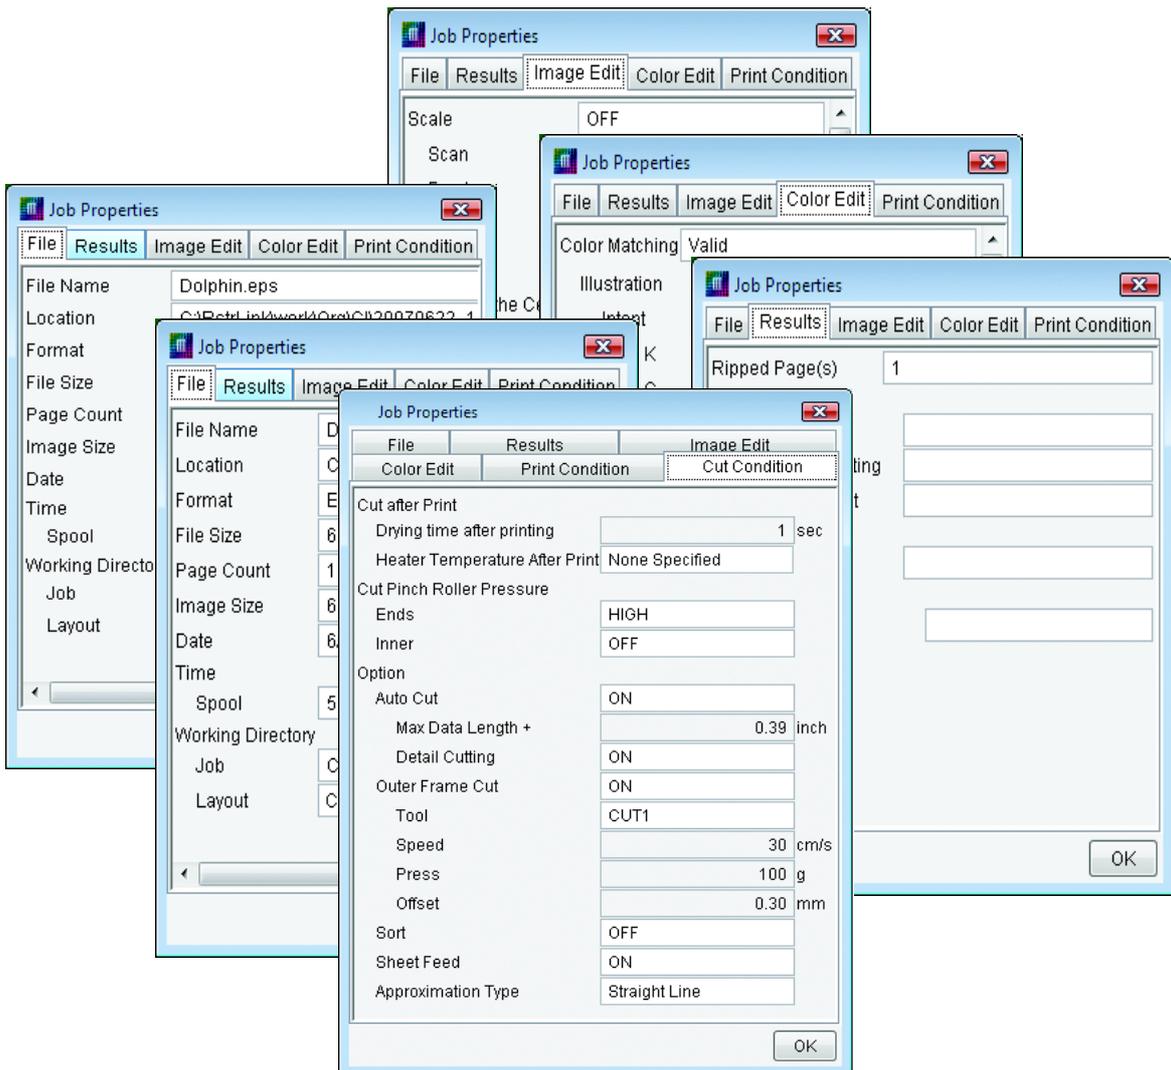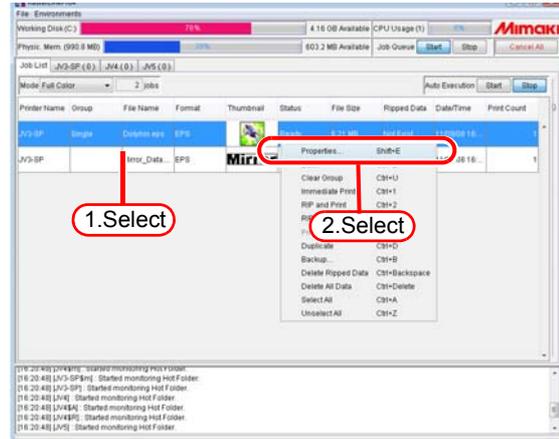

Option Setting


In the “Option” window, you can set options related to environment of RasterLinkPro5. To display the “Option” Window, select “Option” from the [Environments] menu of RasterLinkPro5.

Important!

You cannot open the “Option” window while editing Jobs.

[Job Control] Menu

The new setting is valid when the job is executed after the setting change.

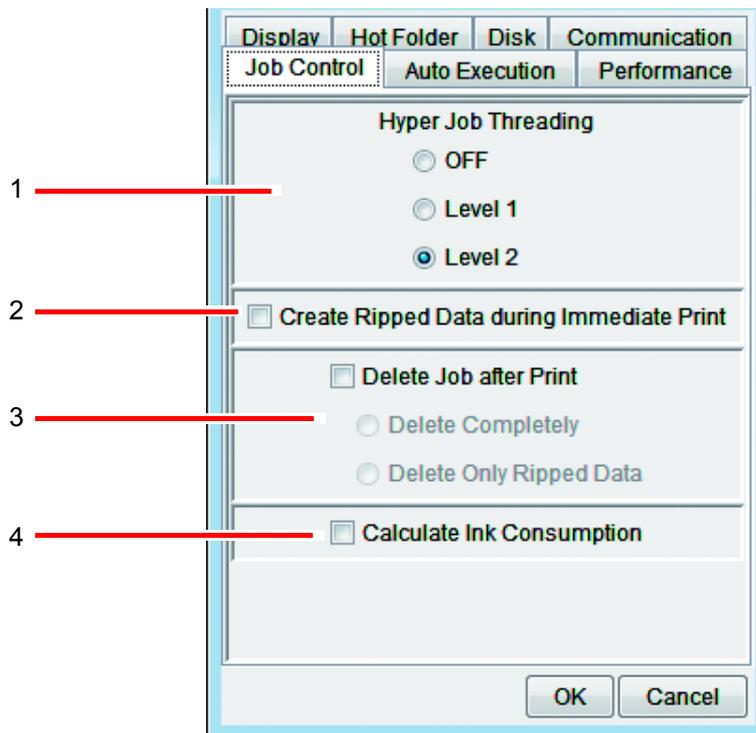

1. Hyper Job Threading

Specifies the parallel processing method for jobs when executing multiple jobs continuously with one printer. Changes to the settings are enabled when the job is executed after the changes.

OFF : Jobs are not executed in parallel.
Spool, RIP, and print processing are executed in sequence.

Level 1 : RIP and print processing are executed in parallel.
A maximum of two jobs can be executed in parallel.
They are not executed in parallel with [Immediate Print].

Level 2 : Spool, RIP and print processing are executed in parallel.

A maximum of three jobs can be executed in parallel.

Spooling during [Immediate Print] is possible.

When “Level 2” is specified, a PC with the following performance is recommended.

CPU : Multi core intel Core2 processor

RAM : 1GB or above

When continuously executing jobs, if the printer head stops during printing, lower the level of Hyper Job Threading.

2. Create Ripped Data during Immediate Print

With this box checked, a Ripped Data is created at “Immediate Print”.

After “Immediate Print”, execution of “Print Only” is allowed.

With this box unchecked, no Ripped Data created and “Not Exist” remains displayed in the “Ripped Data” area of “Job List”.

However, when the [Copy] count of the job was specified with 2 or more at the Job Editor, the Ripped Data is created unconditionally.

3. Delete Job after Print

Specifies whether to delete the job after print or cut.

The job is not deleted when execution has been canceled or an error has occurred.

Delete Completely : The job is deleted completely from “Job List”.

Delete Only Ripped Data : When there is Ripped data, only the Ripped data is deleted and the job is left in “Job List”.

4. Calculate Ink Consumption

The estimate volume of ink to spend for printing appears in Job Properties “Results”. (P.115)

Ink consumption is calculated, during Ripping Data by RIP Only, Immediate Print or RIP and Print




The displayed value is an approximate value. The value should be treated as a reference value.

If [Overprint] is set to 2 or more of [Print Condition] - [Print Mode], the value is multiplied by [Overprint].

When [Print Count] has been specified 2 or more at “Job List”, it is counted as 1.

[Auto Execution] Menu

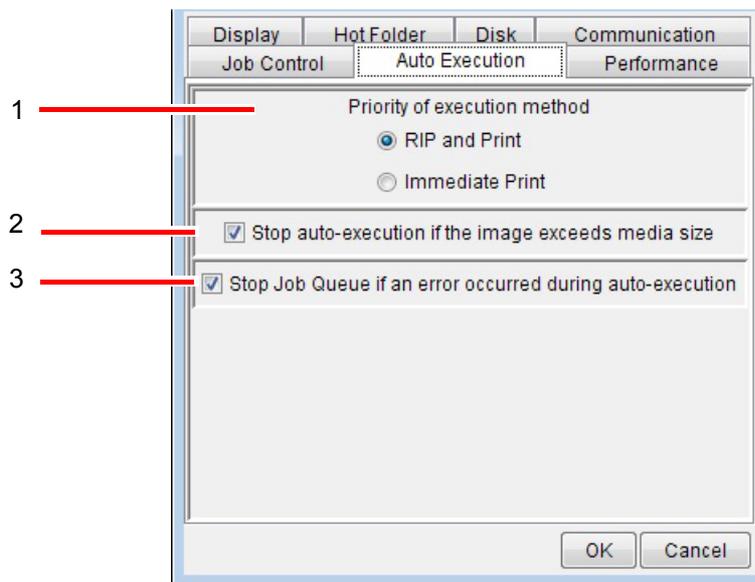

1. Priority Execution Method

Specify the priority job execution method for when the start button is selected for auto execution in the main screen.

The specification may not be applied for some jobs, depending on the job type.

Job		Type
Print&Cut Job	->	Priority is given to the specified execution method
Cut Job	->	Priority is given to the specified execution method
Print Job	->	Priority is given to the specified execution method
APP Separation Job	->	Printing is fixed after RIP
Separation Job	->	Printing is fixed after RIP
MRL Job	->	Only printing is fixed

2. Stop auto-execution if the image exceeds media size


If this checkbox is selected, when the image size after RIP exceeds the media width or when an image does not fit in the media because the specification for the number of copies from FineCut or SimpleStudio was inappropriate, execution of the job is canceled.

If this checkbox is not selected, an image exceeding the media is ignored and the job is executed. The initial value is ON (checkbox selected)

3. Stop Job Queue if an error occurred during auto-execution

If an error occurs during auto execution of the job, select whether the job queue is stopped or not.

[Performance] Menu

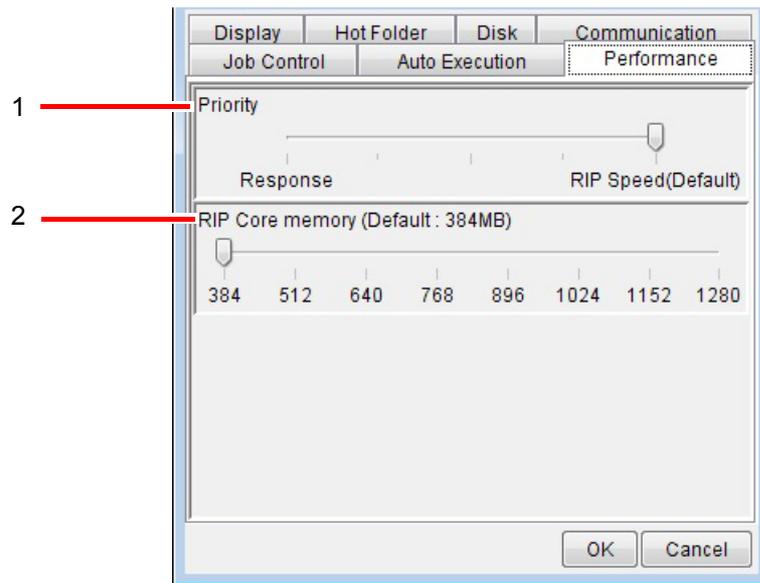

1. Priority

When opening the [Job Editor] window during RIP process using low spec. PC, it may take time. In this case, you can improve the operation response by adjusting [Priority] to [Response] side. But the RIP speed becomes slower. Therefore default setting is recommended, and if you have no problem with the operation performance, please do not change the setting.

If a high-performance PC (such as : Multi core, Hyper Threading and High frequency CPU) is used, this setting is not effective to improve the operation response.

2. RIP Core memory


Set amount of memory assigned to RIP core.

For the RIP of vector gradation*, increasing this may improve the operation speed.

* RasterLinkPro5 treats the gradation of Illustrator as raster or vector.

To confirm this, see the color replacement preview.

[Display] Menu

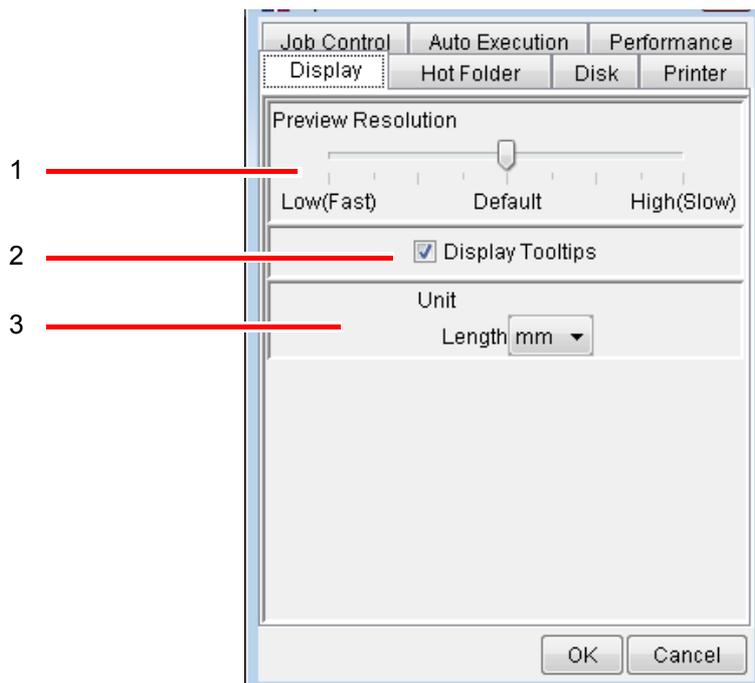

1. Preview Resolution

Specify the resolution of the preview image created when spooling.

Normally set it to "Default".

When enlarging the image to check details for color replacement settings and so on, increase the resolution. However, increasing the resolution uses a lot of memory, so the following problems may occur especially when editing multiple jobs at the same time.

- The Job Editor screen does not open
- Editing operations in the Job Editor screen are slow
- The message "Failed in the operation due to out of memory" appears in the Job Editor screen during editing, and RasterLinkPro5 quits.

When the resolution is increased, do not edit multiple jobs at the same time.

Changes to the resolution settings are enabled from the next spooling.

2. Display Tooltip

Show explanation for display item pointed by mouse.

The new setting becomes valid on the screen that is displayed for the first time after the setting change.

Close the currently opened screen once and then open it again, and the new setting is come valid.

3. Unit

Set a unit of length (mm or inch) .


The new setting becomes valid on the screen that is displayed for the first time after the setting change.

Close the currently opened screen once and then open it again, and the new setting is come valid.

[Hot Folder] Menu

When data from application software is saved directly into a hot folder, sometimes an intermediate file is prepared in the process of storing the data in the hot folder. Register part of “Ignored String When Detecting File” so that no intermediate file is detected by mistake during detection of hot folders.

The new setting becomes valid immediately after the setting change.

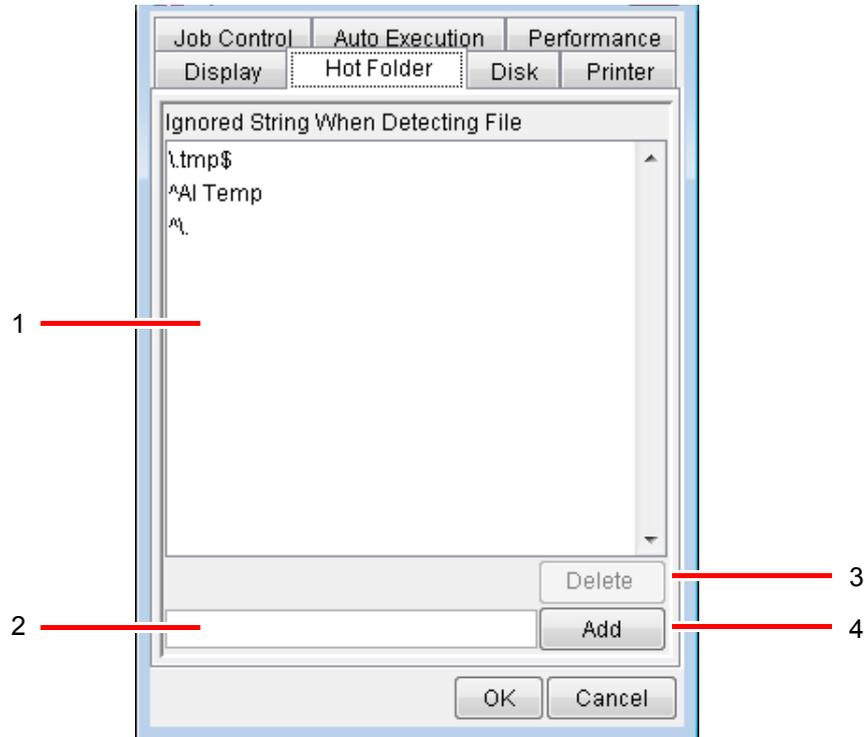

1. Ignored String When Detecting File

Indicates the list of character strings which are included in the file name of intermediate files that should be ignored.

2. Ignored String When Detecting File input box

Enter the Ignoring name string for file detection.
This can be specified with a regular expression.

3. button

Delete the Ignoring name string for file detection.

4. button

Add the Ignoring name string for file detection.



- Explanation of the default setting

By default, 3 types of string are set. The following section explains the settings of the defaults.

`\. tmp$`

Ignores file names ending in “.tmp”.

In the Windows version of Illustrator, executing [Save] and [Save As] creates a temporary file with the extension “tmp”.

`^AI Temp`

Ignores file names starting with “AI Temp”.

In the Macintosh version of Illustrator, executing [Save] and [Save As] creates a temporary file starting with “AI Temp”.

`^\.`

Ignores file names starting with “.”.

If files with a source fork are copied from a Macintosh client, a file starting with “.” may be created.

- Regular expressions

The default strings use regular expressions. The following section provides a simple explanation of the regular expression meta-characters used in the default strings.

`^` (caret)

Indicates the start of the string.

`$` (dollar symbol)


Indicates the end of the string.

`\` (backslash)

Escapes meta-characters.

Since “.” in regular expressions is handled as a meta-character which represents a free character, if “.” is specified as a character, insert a backslash in front of it, “\.”.

[Disk] Menu

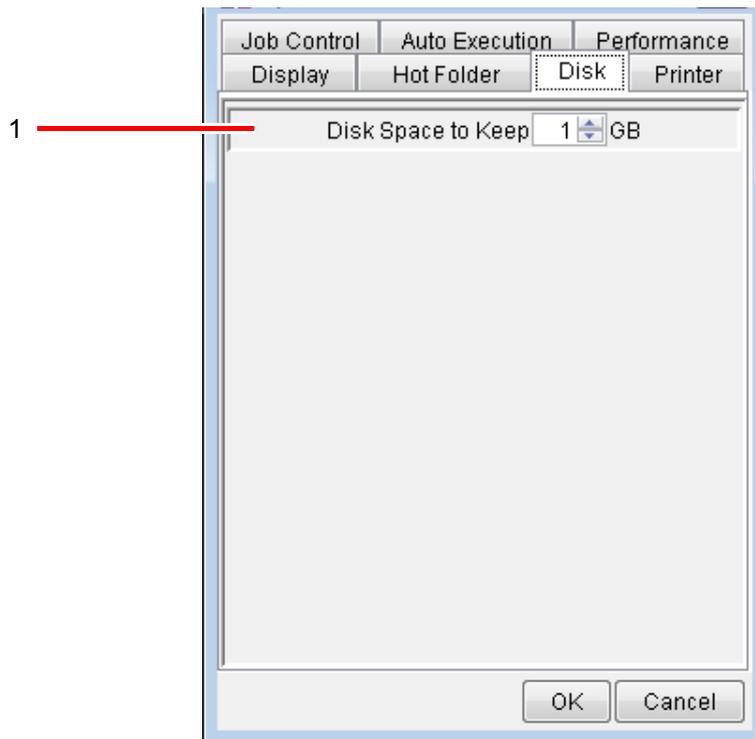


1. Disk Space to Keep

Set the minimum free space of the hard disk on which the work folder has been set.

If the hard disk spare capacity falls below the capacity set, spooling, executing, duplicating and restoring jobs is not possible.

Execution of a job is interrupted if the free space of the hard disk has gone down below the setting value during execution.

[Printer Management] Menu

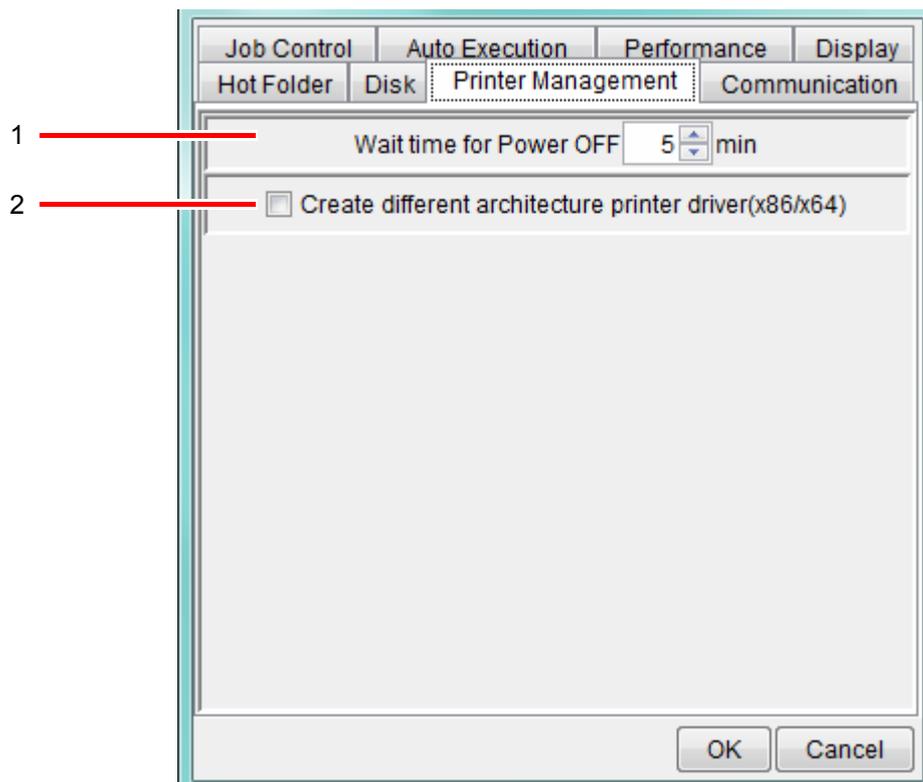

1. Wait time for Power OFF

Specify the wait time to switch off the printer after the print finishes.

This option is effective when [Power OFF] is selected for the printer on Execution Status Screen.

2. Create different architecture printer driver(x86 / x64)

When set to ON, create a driver of architecture (x86 / x64) which is different from the PC's OS, of which RasterLinkPro5 has been installed when created a printer driver.

Important!

- Please set ON this function when the driver output from the client PC whose Windows OS architecture (x86/x64) is different from the RIP-PC's.
- Depending on the OS of the RIP-PC, with this function ON an error occurs when creating a printer driver, and you may not be able to create a printer driver.
- If an error occurs, please set this function to OFF.
But if you create a printer driver after you set this function to OFF, you cannot driver output from the client PC whose Windows OS architecture is different from the RIP-PC architecture (x86/ x64).
Please use the hot folder output.

Trouble Shooting

Error message

Error message	Indicate condition	Remedies
A required privilege for RasterLinkPro5 is not held by this computer. Please restart RasterLinkPro5 after log on as an administrators group user. Otherwise, check the [Local Security Policy] settings.	Starting up (Logged on as an ordinary groups user in Windows2000)	Logged on as an Administrators group user, and then start RasterLinkPro5. Or perform the [Local Security Policy] setting according to the Install Guide.
No printer is registered. Please register printer at [Printer Management] menu.	Starting up	RasterLinkPro5 was started without any printer registered. Start RasterLinkPro5 after adding a printer with printer management.
Failed to start RasterLinkPro5 because Profile-database is used by another program.	Starting up (RasterLinkPro5)	Exit the Profile Manager, and then start RasterLinkPro5.
Failed to start ProfileManager because Profile-database is used by another program.	Starting up (Profile Manager)	Exit the RasterLinkPro5, and then start Profile Manager.
[MACHINE NAME] is duplicated for some printers. Please specify a unique [MACHINE NAME] for each printer by the Operation Panel.	Starting up Printer Management	If two or more printers are connected with USB2.0 interface, specify a unique [MACHINE NAME] for each printer.
Any available printer is not specified.	Printer management	If IEEE1394 is selected on the printer setting screen, connect to the printer and select a relevant printer from the available printer list.
The printer name is already used.	Printer management	It is necessary to specify a unique printer name. Enter a name that does not duplicate an already registered printer name.
The selected available printer has been related to another printer (printer name).	Printer management	In printer management, one available printer can not relate to two or more printers.
Two or more printers are connected to one IEEE1394 I/F card. Please connect only one printer to each IEEE1394 I/F card.	Starting up Printer management	Even if the IEEE1394 interface card has multiple connectors, only one printer can be connected to one interface card. If multiple printers are connected, use the same number of IEEE1394 interface cards.
# printers are connected via IEEE1394 port. Please update Mimaki 1394 Driver to Version 2.00 or higher if connect two or more printers via the port.	Starting up Printer management	If two or more printers are connected, the Mimaki 1394 Driver Ver 2.00 or higher is required. Uninstall the old driver first, and install the new driver. For reinstalling the driver, refer to the Install Guide on the driver CD.

Error message	Indicate condition	Remedies
Cannot get the profile information.	Starting up	Profile management file may be destroyed. Please reinstall RasterLinkPro5.
There is no full color device profile. Please install at least one profile.	Starting up Printer management	When RasterLinkPro5 is executed, not less than one Device profile is required. Please install Device profile provided using Profile-Manager.
There is no artwork separation device profile. Please install at least one profile.	Starting up Printer management	To execute the RasterLinkPro5, not less than one artwork separation device profile is required if the selected model supports artwork separation. Please install Device profile provided using ProfileManager.
There is no RGB input profile. Please install at least one profile.	Starting up	When RasterLinkPro5 is executed, not less than one RGB Input file is required. Please install RGB Input profile provided using ProfileManager.
here is no CMYK input profile. Please install at least one profile.	Starting up	When RasterLinkPro5 is executed, not less than one CMYK Input profile is required. Please install CMYK Input profile provided using ProfileManager.
Cannot generate default condition	Printer management	RasterLinkPro5 may be reinstalled without being completely uninstalled. After confirming that the previous install directory has been deleted, please reinstall the RasterLinkPro5.
Cannot generate default printer :	Printer management	RasterLinkPro5 may be reinstalled without being completely uninstalled. After confirming with [Control Panel]-[Printer and Faxes] that the printer created by RasterLinkPro5 has been deleted, please reinstall RasterLinkPro5.
Cannot load the execution module : [execution module name]	Starting up	Please reinstall RasterLinkPro5.
Cannot stop services. Cannot start services.	RasterLinkPro5 Series has been started in environment where both Raster Link Pro and RasterLinkPro5 Series are contained.	An error may occur with RasterLinkPro5 and Raster Link Pro being in conflict with each other. Please uninstall the Raster Link Pro.
Cannot move the file from [**] to [**].	When copying files from the client PC to the Hot Folder	This problem has occurred because the client PC has not released the copied file. Please restart the client PC.
No more job can be register. Please delete unnecessary jobs.	At time of job read When duplicating jobs When restoring jobs	The number of jobs has reached the maximum value which can be registered. Please delete any unnecessary jobs.

Error message	Indicate condition	Remedies
Cannot recognize the file format.	At time of job read	This file form is not supported by RasterLinkPro5. After running the corresponding application read, please carry out the printout with [Print] menu. For the MRL form, run "Mode" read with "MRL".
Cannot get the image size.	At time of job read	PreRIP image size data cannot be gotten in PreRIP. After running the application read, please carry out the printout with [Print] menu. For the PDF file, please carry out the printout with [Print] menu after running Acrobat Reader read.
PostScript error.	At time of read At time of RIP	This error has occurred while PostScript is being processed. Data that cannot be processed may be inputted.
Failed in the operation due to out of memory. Please abort RasterLinkPro5 now.	When operating jobs When editing jobs	Exit from the RasterLinkPro5 and then execute it again. Open the jobs one by one with the Job Editor. Decrease the preview resolution and re-spool the job.
The input file ["file name"] was deleted. Please restore the file to the original place. If it is unnecessary, delete the job.	At time of job execution When editing jobs	If the job was read without checking "Copy Files to Working Directory," the original file has been moved or deleted after the read. Please restore the moved or deleted file to the original place.
Layout preview can not be displayed because the media width is zero. Confirm the media width at [Printer Status]-[Media].	When editing jobs	After connecting to the printer, click the <input type="button" value="Update to Current Status"/> button in the Printer Status Screen to get the media width information again. Or select "Media"- "Media Width"- "Manual Input" in the printer status screen and input the value.
The job is arranged out of the drawing area.	When editing jobs	Please arrange the job within the drawing area.
Arranged over the maximum media length	When editing jobs	Arrange the job to fit into media size when editing jobs.
		When tiling is edited , print out as Individual Designation to fit the tile into the media size. Repeat this operation several times.
The job is arranged in out of range for drawing area. Does it arrange anyway?	When editing jobs	If the state in which the job is arranged in out of the range has no problem, please select [Yes]. Otherwise, please select [No] and carry out the job arrangement so that it may not be arranged in out of the range.

Error message	Indicate condition	Remedies
["Job Name"] : The selected color adjustment set ["File Name"] was not found.	When editing jobs When getting the condition the Hot Folder with the Condition Management	Re-create the color adjustment file or select the existing file.
The selected device adjustment set ["File Name"] was not found.	When editing jobs When getting the condition the Hot Folder with the Condition Management	Re-create the device adjustment file or select the existing file.
The selected color replacement set ["File Name"] was not found.	When editing jobs When getting the condition the Hot Folder with the Condition Management	Re-create the color replacement file or select the existing file.
["Profile Name"] : The selected RGB input profile was not found.	When editing jobs	Select the RGB input profile of "Color edit" from the existing profiles.
["Profile Name"] : The selected CMYK input profile was not found.	When editing jobs	Select the CMYK input profile of "Color edit" from the existing profiles.
The selected device profile was not found.	When editing jobs	Select the device profile of "Print Condition" from the existing profiles.
Some of the jobs are arranged on the middle area.	When editing jobs	Arrange the jobs so as not to be overlapped between the left and right rolls.
The size of some tiles is smaller than the overlap.	When editing jobs	Remove the tiles which size are smaller than the overlap or set the overlap length to smaller size.
Tile["Tile Number 1"] and Tile["Tile Number 2"] are overlapped.	When editing jobs	Arrange the tiles so as not to be overlapped.
Tile["Tile Number"] is arranged out of the print area.	When editing jobs	Arrange the tile within the print area.
Tile["Tile Number"] is arranged in out of range of the print area. Is it arranged anyway?	When editing jobs	If there is no problem with the tile arranged out of range of the print area, select "Yes", otherwise select "No" and arrange the tile so as to be arranged within the range of the print area.
Any of print tiles is not specified.	When editing jobs	Specify the print tile.
The size of some tiles is too small.	When editing jobs	Adjust the tile split range and set the tile size to be bigger than 1 inch (25.4 mm).
The size of top row tiles is too small.	When editing jobs	Adjust the tile split range so that the size of the top row tiles are 1inch (25.4mm) or more.

Error message	Indicate condition	Remedies
The size of left column tiles is too small.	When editing jobs	Adjust the tile split range so that the size of the left column tiles are 1 inch (25.4mm) or more.
The size of tiles in scan direction is zero.	When editing jobs	Confirm the tile split range in the scan direction.
The size of tiles in feed direction is zero.	When editing jobs	Confirm the tile split range in the feed direction.
Tile["Tile Number"] is arranged on the middle area.	When editing jobs	Arrange the tiles so as not to be overlapped between the left and right rolls.
The number of tiles is more than limit(100).	When editing jobs	Reconsider the work size and the tile split size. Then, set the number of tiles after split not to exceed the limit.
No more color replacement can be set.	When editing jobs	The number of color replacement settings has reached the maximum number that can be registered to the color replacement set. Delete the unnecessary color replacement settings or create a color replacement set and register.
Cannot find any scanner connecting to this PC.	When editing jobs	The scanner color measuring screen was opened with no scanner connected. Start the Job Editor with a scanner connected.
The scanner is not connected.	When editing jobs	The scanner color measuring screen was opened with no scanner connected. Start the Job Editor with a scanner connected.
An error occurred while scanning.	When editing jobs	An error occurred in the scanner while scanning. Resolve the problem with the scanner, and click <input type="button" value="Start scanning"/> button again.
The size of scanned document cannot be obtained.	When editing jobs	An error occurred while acquiring the scan image size. Check that the original document is placed on the scanner, and click the <input type="button" value="Start scanning"/> button again.
The scanned image cannot be obtained.	When editing jobs	An error occurred while scanning the image. Click the <input type="button" value="Start scanning"/> button, <input type="button" value="Zoom In"/> button, <input type="button" value="Zoom Out"/> button.
Cannot obtain color value (Lab) on the specified place.	When editing jobs	Click the specified place again. If it cannot be obtained, click on the specified place again after zooming in and out, or click the <input type="button" value="Start scanning"/> button, scan again, and click the specified place.
Profile format error.	At time of RIP	A profile set to job may be destroyed. After deleting a corresponding Profile with ProfileManager, please reinstall it.
No parameter for Profile		
No parameter for Profile DB	At time of RIP	Profile management file may be destroyed. Please reinstall RasterLinkPro5.

Error message	Indicate condition	Remedies
The specified color adjustment set ["file name"] was not found. Please change the [Color adjustment] setting.	At time of job execution	Since Color adjustment set related to job is deleted, the printout cannot be made. Please again select the Color adjustment set with [Color edit] - [Color adjustment] of Job editor.
The specified device adjustment set ["file name"] was not found. Please change the [Device adjustment] setting.	At time of job execution	Since Device adjustment set related to job is deleted, the printout cannot be made. Please again select the Device adjustment set with [Print condition] - [Device adjustment] of Job editor.
The specified color replacement set ["file name"] was not found. Please change the [Color Replacement] setting.	At time of job execution	Since color replacement set related to job is deleted, the printout cannot be made. Please again select the color replacement set with [Color Edit] - [Color Replacement] of Job editor.
The specified special color adjustment set ["file name"] was not found. Please change the [Special Color Adjustment] setting.	At time of job execution	Since special color adjustment set related to job is deleted, the printout cannot be made. Please again select the special color adjustment set with [Color Edit] - [Special Color Adjustment] of Job editor.
The specified RGB input profile was not found. Please install the profile or change the [Color matching] setting.	At time of job execution	The selected RGB Input Profile has been uninstalled. Please reinstall the uninstalled RGB Input file, or again select the RGB Input profile with [Color edit] - [Color matching] of Job editor.
The specified CMYK input profile was not found. Please install the profile or change the [Color matching] setting.	At time of job execution	The selected CMYK Input file has been uninstalled. Please reinstall the uninstalled CMYK Input file, or again select the CMYK Input profile with [Color edit] - [Color matching] of Job editor.
The specified device profile was not found. Please install the profile or change the [Device profile] setting.	At time of job execution	The selected Device profile has been uninstalled. Please reinstall the uninstalled Device profile, or again select the Device profile with [Print condition] of Job editor.
Color curve file error	At time of job execution	Color adjustment file set to job has been destroyed. Please create it again.
No color curve file	At time of job execution	Color adjustment file set to job was not found. Please select it again.
No Color curve parameter	At time of job execution	Color adjustment file set to job has been destroyed. Please create it again.
RIP Memory allocate error	At time of job execution	Since memory is in small quantity, the execution cannot be conducted. When you are running other applications, please stop the run and restart the RasterLinkPro5.

Error message	Indicate condition	Remedies
RIP File access error	At time of job execution	Read and write of files necessary for RIP cannot be executed. The name of the file in error is displayed in the error message. Please contact your nearest store or our sales office.
RIP File not exit	At time of job execution	A file necessary for RIP was not found. The name of the file in error is displayed in the error message. Please contact your nearest store or our sales office.
RIP Profile information error	At time of job execution	The profile cannot be read correctly. The profile and RasterLinkPro5 version may not correspond to each other. Please version-upgrade the RasterLinkPro5.
RIP ICM file error	At time of job execution	ICM profile cannot be created. HDD may have abnormality or the profile may be destroyed.
RIP Not supported profile's color set	At time of job execution	The profile color set is not supported. The profile and RasterLinkPro5 do not correspond to each other. Please version-upgrade the RasterLinkPro5.
RIP Not supported color matching intent	At time of job execution	The Color matching method has been specified that is not supported. Please inform your nearest store or our sales office about the details of the error message.
RIP Color matching initialize error	At time of job execution	The Color matching cannot be set correctly. The profile may be destroyed.
RIP Color matching transfer error	At time of job execution	There are data that cannot be color-matched. Please inform your nearest store or our sales office about the details of the error message.
RIP Color matching transfer parameter error	At time of job execution	The Color matching parameter has been specified that is not supported. Please inform your nearest store or our sales office about the details of the error message.
The cutting job is arranged out of range of the print area.	At time of job execution When editing jobs	Please arrange the cutting job within the drawing area.
Cut Initialize Error	At time of job execution	Information necessary for creating cut data is missing. The name of the file in error is displayed in the error message. Please contact your nearest store or our sales office.
Cut Data Creation Error	At time of job execution	Cut data cannot be created. The name of the file in error is displayed in the error message. Please contact your nearest store or our sales office.

Error message	Indicate condition	Remedies
Cut Data File Creation Error	At time of job execution	Cut data file cannot be written. The name of the file in error is displayed in the error message. Please contact your nearest store or our sales office.
Cut Data Output Error	At time of job execution	Cut data file cannot be read. Or, the output port cannot be accessed. The name of the file in error is displayed in the error message. Please contact your nearest store or our sales office.
Can't connect to the printer as a Hi-Speed device. Make sure that the connecting USB port, cable and USB-Hub are based on USB 2.0.	USB 2.0 set to output port	RasterLinkPro5 can not connect to printer with USB1.1 standard.
USB2 : The [DataClear] function was executed on the printer.	During printing	Displayed when the data is cleared using the printer's operating panel during printing. If the communication status is poor, the data may be cleared automatically. In such as a case, use the following method. (1) Use a USB cable that is 3 m or shorter. (2) Use a USB hub. (3) Install and use an additional USB interface board.
1394 : Printer is not found.	IEEE1394 set to output port	PC and printer are not connected to each other with IEEE1394. After powering up the printer, please connect the PC and printer to each other with IEEE1394 cable.
		Though PC and printer are connected to each other with IEEE1394, the power source of the printer is off. Please power up the printer.
		Mimaki IEEE1394 driver is not installed to PC. Please install the driver.
		A different printer from the one registered with printer management is connected. Reselect an available printer with printer setting changes in printer management.
1394 : Output port is used by another task.	IEEE1394 set to output port	Please wait until output is complete.
1394 : Can't open port	IEEE1394 set to output port	In case of that this error occurs frequently, please restart the PC and printer. If the same error occurs frequently after the restart, please reinstall Mimaki 1394 driver.
1394 : Can't get status information	IEEE1394 set to output port	When this error is shown, the printer status display is cleared. Click <input type="button" value="Update to Current Status"/> button and get status information.

Error message	Indicate condition	Remedies
FILE : Can't open specified	File set to output port	The specified file cannot be opened. Please specify a different file.
The work drive (drive name) free space is less than the setting size (Disk space to use). Please delete the unnecessary jobs or RIP data.	At time of file opening At time of hot folder file detection At time of job execution start During spool process During job execution	The free space capacity of drive specified in work folder has fallen below a value specified with [Environments] - [Option] - [Disk] - [Disk space to use]. Please delete unnecessary jobs with [Delete all data], or delete Ripped data with [Delete RIP data] to secure any free space capacity of the drive.
Failed to copy job.	Work folder change	The free space capacity of drive specified in work folder may be insufficient. Please specify a drive having sufficient free space capacity.
Cannot exit out of RasterLink. Please wait for the Hot folder setting to be completed.	Main window close	Raster Link cannot be exited while [Create] or [Delete] of Hot Folder is being run in Condition management. Please wait for [Create] or [Delete] to be completed. When it is exited forcedly, a trouble arises.
Cannot exit Job Editor. Please wait for the Hot folder setting to be completed.	Job editor close	When [Create] or [Delete] of Hot Folder is being run in Condition management, Job editor screen cannot be closed. Please wait for [Create] or [Delete] to be completed. When it is exited forcedly, a trouble arises.
Cannot remove file in the Hot Folder	When removing the Hot Folder with the Condition Management	Due to the file that can not be removed in the hot folder, hot folder can not be removed. Unmount the sharing volume, if connected from Macintosh Apple share through the PC MACLAN.
The printer information ["file name"] is not defined in the database.	Printer status screen display	Profile management file may be destroyed. Please reinstall RasterLinkPro5.
The inkset information ["file name"] is not defined in the database.	Printer status screen display	Profile management file may be destroyed. Please reinstall RasterLinkPro5.
No more Hot Folder can be created.	When creating the Hot Folder with the Condition Management Printer management	You may have logged in with a user ID which is different from the ID you used when installing the RasterLinkPro5. Please log in with the user ID that was used when you installed RasterLinkPro5.
Cannot remove the Hot Folder.	When removing the Hot Folder with the Condition Management Printer management	You may have logged in with a user ID which is different from the ID you used when installing the RasterLinkPro5. Please log in with the user ID that was used when you installed RasterLinkPro5.

Error message	Indicate condition	Remedies
Cannot share the Hot Folder.	At time of first startup When creating the Hot Folder with the Condition Management Printer management	You may have logged in with a user ID which is different from the ID you used when installing the RasterLinkPro5. Please log in with the user ID that was used when you installed RasterLinkPro5. Check if there are any shared folders or printers that have the same share name.
Cannot cancel the Hot Folder sharing.	When removing the Hot Folder with the Condition Management Printer management When uninstalling	You may have logged in with the user ID which is different from the ID you used when installing the RasterLinkPro5. Please log in with the user ID that was used when you installed RasterLinkPro5. If this error occurred when uninstalling, there will be no problem if the install folder is deleted after the restart.
Cannot share the PPD Folder.	Printer management	You may have logged in with a user ID which is different from the ID you used when installing the RasterLinkPro5. Please log in with the user ID that was used when you installed RasterLinkPro5. Check if there are any shared folders or printers that have the same share name.
Cannot cancel the PPD Folder sharing.	When uninstalling	There will be no problem if the install folder is deleted after the restart.
Cannot get the port monitor information.	Starting up When creating or removing the Hot Folder with the Condition Management Printer management When uninstalling	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes]. Delete the printer created by RasterLinkPro5 from [Control Panel]-[Printer and Faxes] after restarting if this error occurs when uninstalling.
Cannot get the port information.	Starting up When creating or removing the Hot Folder with the Condition Management Printer management When uninstalling	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes]. Delete the printer created by RasterLinkPro5 from [Control Panel]-[Printer and Faxes] after restarting if this error occurs when uninstalling.
Cannot create the port.	Printer management	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes].

Error message	Indicate condition	Remedies
Cannot remove the port monitor.	Printer management When uninstalling	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes]. Delete the printer created by RasterLinkPro5 from [Control Panel]-[Printer and Faxes] after restarting if this error occurs when uninstalling.
Cannot create the port.	When creating the Hot Folder with the Condition Management Printer management	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes].
Cannot remove the port.	When removing the Hot Folder with the Condition Management Printer management When uninstalling	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes]. Delete the printer created by RasterLinkPro5 from [Control Panel]-[Printer and Faxes] after restarting if this error occurs when uninstalling.
Cannot get the information of the printer driver.	Starting up When creating or removing the Hot Folder with the Condition Management Printer management When uninstalling	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes]. Delete the printer created by RasterLinkPro5 from [Control Panel]-[Printer and Faxes] after restarting if this error occurs when uninstalling.
Cannot create the printer driver.	When creating the Hot Folder with the Condition Management Printer management	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes].
Cannot remove the printer driver.	When removing the Hot Folder with the Condition Management Printer management When uninstalling	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes]. Delete the printer created by RasterLinkPro5 from [Control Panel]-[Printer and Faxes] after restarting if this error occurs when uninstalling.
Cannot get the information of the printer.	Starting up When creating or removing the Hot Folder with the Condition Management Printer management When uninstalling	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes]. Delete the printer created by RasterLinkPro5 from [Control Panel]-[Printer and Faxes] after restarting if this error occurs when uninstalling.

Error message	Indicate condition	Remedies
Cannot create the printer.	When creating the Hot Folder with the Condition Management Printer management	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes].
Cannot remove the printer.	When removing the Hot Folder with the Condition Management Printer management When uninstalling	This may be an unexpected effect of a printer from other company. Delete the printer of the other company from [Control Panel]-[Printer and Faxes]. Delete the printer created by RasterLinkPro5 from [Control Panel]-[Printer and Faxes] after restarting if this error occurs when uninstalling.
Could not stop Print Spooler .	When creating or removing the Hot Folder with the Condition Management Printer management	Confirm that there is no job being spooled from the client. This may be an unexpected effect of a printer utility from another company. Please Uninstall the printer utility of the other company.
Could not start Print Spooler .	When creating or removing the Hot Folder with the Condition Management Printer management	This may be an unexpected effect of a printer utility from another company. Please Uninstall the printer utility of the other company.
Could not stop Miramar Apple-Talk File Server .	When creating or removing the Hot Folder with the Condition Management Printer management	Cancel the mount of the Hot Folder with the Macintosh client. Confirm that there is no file being copied from the Macintosh client. Reinstall PC MACLAN if the problem is not solved.
Could not start Miramar Apple-Talk File Server.	When creating or removing the Hot Folder with the Condition Management Printer management	Reinstall PC MACLAN if the problem is not solved.
Could not stop Miramar Apple-Talk Print Server.	When creating or removing the Hot Folder with the Condition Management Printer management	Confirm that there is no file being spooled from the Macintosh client. Reinstall PC MACLAN if the problem is not solved.
Could not start Miramar Apple-Talk Print Server.	When creating or removing the Hot Folder with the Condition Management Printer management	Reinstall PC MACLAN if the problem is not solved.
Cannot save the backup file.	When backing up jobs	Secure any free space capacity of the disc where the RasterLinkPro5 is installed.

Error message	Indicate condition	Remedies
Destination drive does not have enough space for the backup. It needs **.	When backing up jobs	The space of the drive which has been specified for the storage of the backup file is smaller than the size of the backup file. Specify the drive with more space or insert another removable media. It cannot be stored on CD-R or DVD +/- R media.
Cannot move the backup file from [**] to [**].	When backing up jobs	Confirm that the drive or the removable media specified to store the backup file is in a writable state.
Cannot compress the file.	When backing up jobs	Secure any free space capacity of the disc where the RasterLinkPro5 is installed.
No restorable printer is registered.	When restoring jobs	The printer for the backed-up job is not registered in RasterLinkPro5. Register the applicable printer with the Printer Management and restore.
Failed to examine.	When restoring jobs	The job cannot be restored from this backup file because this backup file is destroyed.
Failed to extract.	When restoring jobs	Secure any free space capacity of the disc where the RasterLinkPro5 is installed.
DRV : An error occurred during output (W). The command could not be executed because an I/O device error occurred.	During printing	Use the following method. (1) Use a USB cable that is 3 m or shorter. (2) Use a USB hub. (3) Install and use an additional USB interface board.
DRV : An error occurred during output (W). A device connected to the system is not functioning.	During printing	
DRV : An error occurred during output (W). A parameter is incorrect.	During printing	

Precautions when setting security of the PC for installing RasterLinkPro5

CD menu screen does not appear when installation CD is inserted into the PC

If an automatic execution function (Autorun) of the CD or the USB memory is disabled, the CD menu does not start when the CD is inserted. In this case, display the CD drive as follows, and then directly select “CDMenu.exe” to execute it.

- (1) Select the CD drive in the explorer.
- (2) Select “CDMenu.exe”, and then select [Open] from the pop-up menu.

Important!

Be sure to use CDMenu.exe to install RasterLinkPro5. If it is installed directly from the RasterLinkPro5 installer without using the CDMenu.exe, some files are not installed and errors may be caused.

When License Activation / Program Update / Profile Update is used

When security software with a firewall function is used, block the network (Internet) connection from each tool of License Activation / Program Update / Profile Update.

Most security software display connection admission screen to confirm when the software tries its first connection to the network. If the connection confirmation window appears when each tool above is started first, admit it.


If you did not admit it in error, refer to the manual of the security software used, and admit the network connection of the following files.

- RasterLinkPro5 installation drive \RstrLinkWeb\Bin\AppWebLicense.exe
- RasterLinkPro5 installation drive \RstrLinkWeb\Bin\AppWebProgram.exe
- RasterLinkPro5 installation drive \RstrLinkWeb\Bin\AppWebProfile.exe

RasterLinkPro5 does not read images

When reading images into RasterLinkPro5, sometimes an error message window as shown on the right appears and the images cannot be read.

The possible causes are that the security software blocks the start of the tools necessary for RasterLinkPro5 to read images, or faultily detects the image as a virus and deletes it. Check the followings.

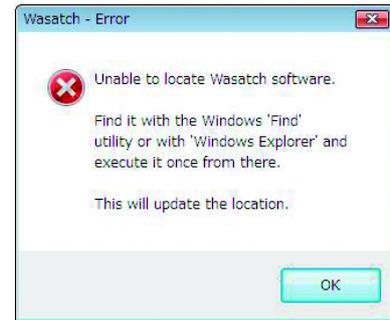

- (1) Referring to the manual of the security software, check the following file is on the software list that limits the start, and if it is on the list, admit the start.
RasterLinkPro5 installation folder \Bin\PS3.exe
- (2) Check the file above is in the PC. If not, reinstall RasterLinkPro5. Then, refer to the manual of the security software to set the file above on the white list (The file list that is not virus).

If an error occurred in the RasterLinkPro5 screen display

In rare PC environment, an error below may occur in the RasterLinkPro5 screen display.

- When you switch tabs, a part of the previous tab remains.
- The preview image of the job editor jumbles.
- When you use RasterLinkPro5 for a long time, the screen display becomes look funny and the PC may freeze at worst.

If these errors occur, it is possible to solve them with the following methods:

[Method to solve 1]

Upgrade the driver of the graphic board to the latest version.

For the method to upgrade the driver of the graphic board, refer to the manual of your PC or the graphic board.

If the latest driver is not provided, perform the next [Method to solve 2].


[Method to solve 2]

For Windows XP

1 Right-click the desk top and select [Property] from the displayed pop-up menu.

2 As the “Display Properties” window is displayed, click the [Settings] tab.


Click [Advanced] .

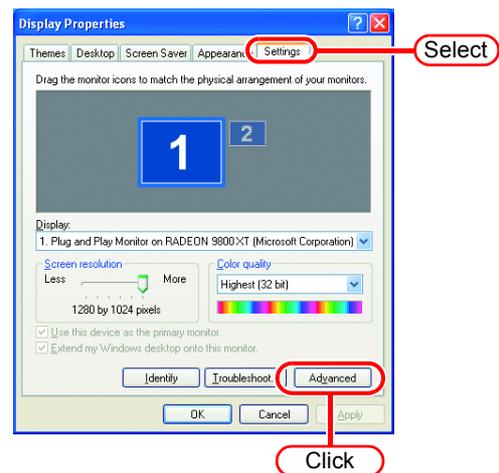

3 From the displayed window, click [Troubleshoot]tab.

Change “Hardware acceleration” to the second from the left end.

The following message is displayed: “Disable all DirectDraw and Direct3D accelerations, as well as all cursor and advanced drawing accelerations. Use this setting to correct severe problems with DirectX accelerated applications.”

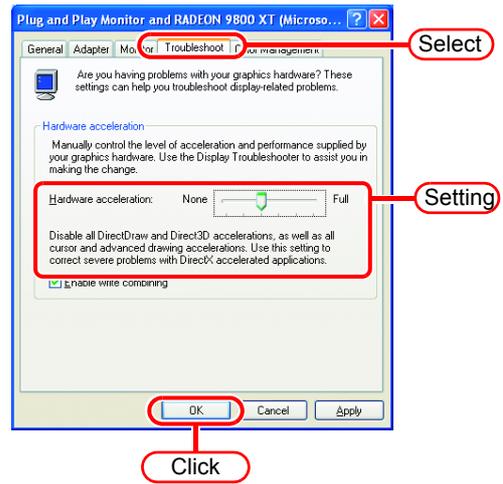


Click .

4 Terminate “Display Properties” with .


For Windows Vista

1 Right-click the desk top and select [Personalization] from the displayed pop-up menu.


2 As the “Personalization” window is displayed, click [Display Settings].

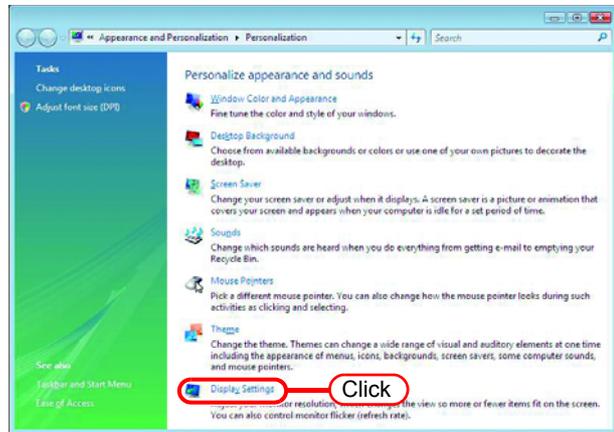

3 As the “Display Settings” window is displayed, click [Advanced Settings...].

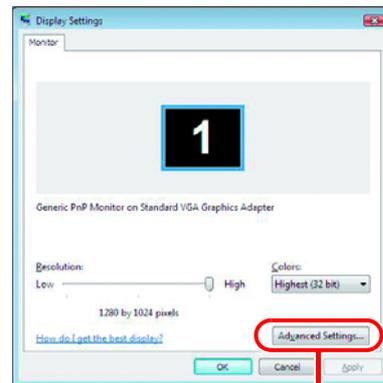

4 From the displayed window, select [Troubleshoot].

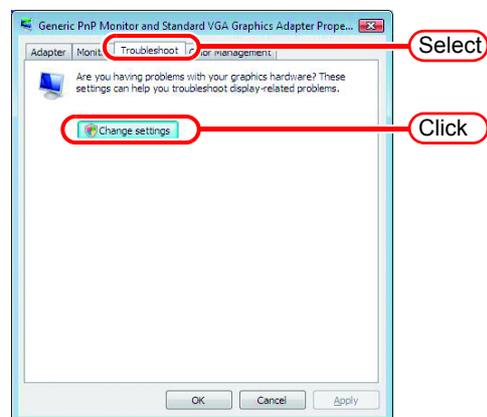


Click [Change settings].

5 Change “Hardware acceleration” to the second from the left end.

The following message is displayed:

“Disable all DirectDraw and Direct3D accelerations, as well as all cursor and advanced drawing accelerations. Use this setting to correct severe problems with DirectX accelerated applications.”

Click .

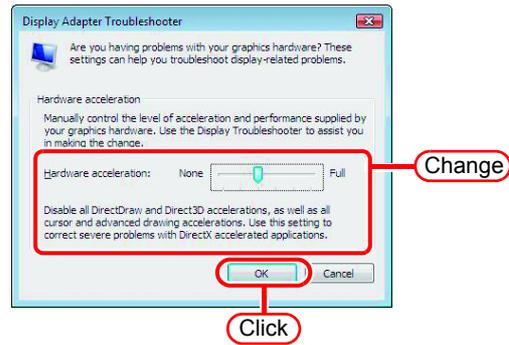

6 Terminate [Display Settings] with .

Caution about Application Software

About Adobe Photoshop

Files of Adobe Photoshop 5.X or older versions may be printed dark.

And when EPS file of Adobe Photoshop 5.X or older versions is placed on Adobe Illustrator, it may also be printed dark.

In case an image is printed dark, execute one of the following procedures.

Uncheck “Post Script Color Management” of Print Dialogue of Adobe Photoshop.

When “Post Script Color Management” is checked, color matching of RasterLinkPro5 does not work and the image is printed dark.

Profile embedded in data

If a profile is embedded in data, the image is printed darkly for the color matching function of the RasterLinkPro5 is not available.


Delete the embedded profile in the application, of which the data created.

About Adobe Illustrator

Drop shadow and Transparency


Data that is created with Adobe Illustrator 9 or later versions adopting transparency effect may have prominent jags (stair-like oblique line), when it is enlarged and printed with RasterLinkPro5.

To avoid this, set items of “Document Setup” menu of Adobe Illustrator as follows.

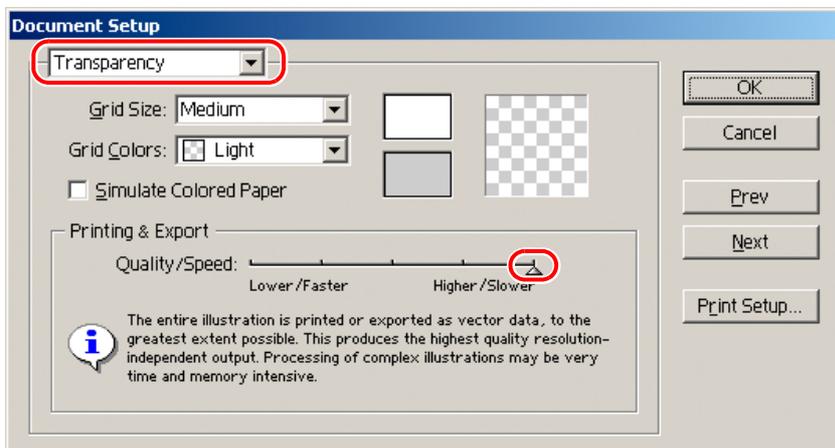

When using drop shadow command, the color around the object becomes different from the ground color.

To avoid this, set color matching method of both illustration and image of RasterLinkPro5 equal.

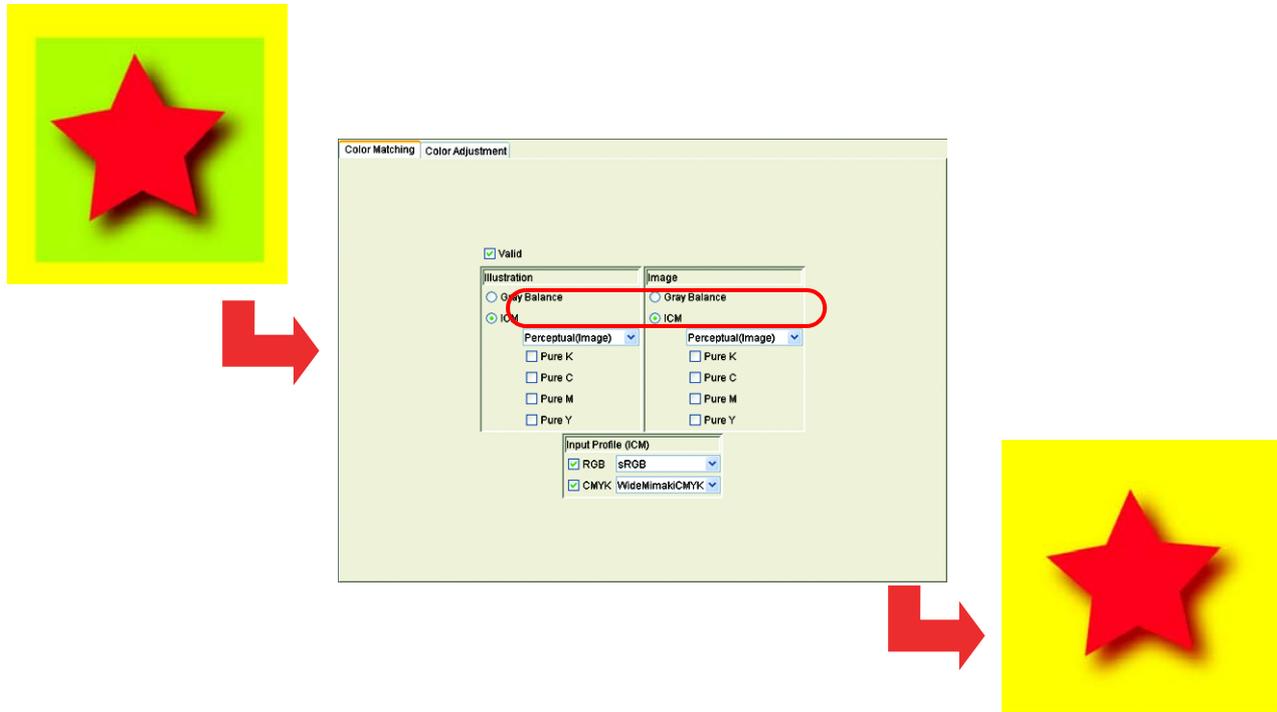


Letters cannot be plotted

Letters become italic

A part of the object around the letters cannot be plotted

Change the font into Outline.

When printing with the printer driver, set the driver so as to download the font.

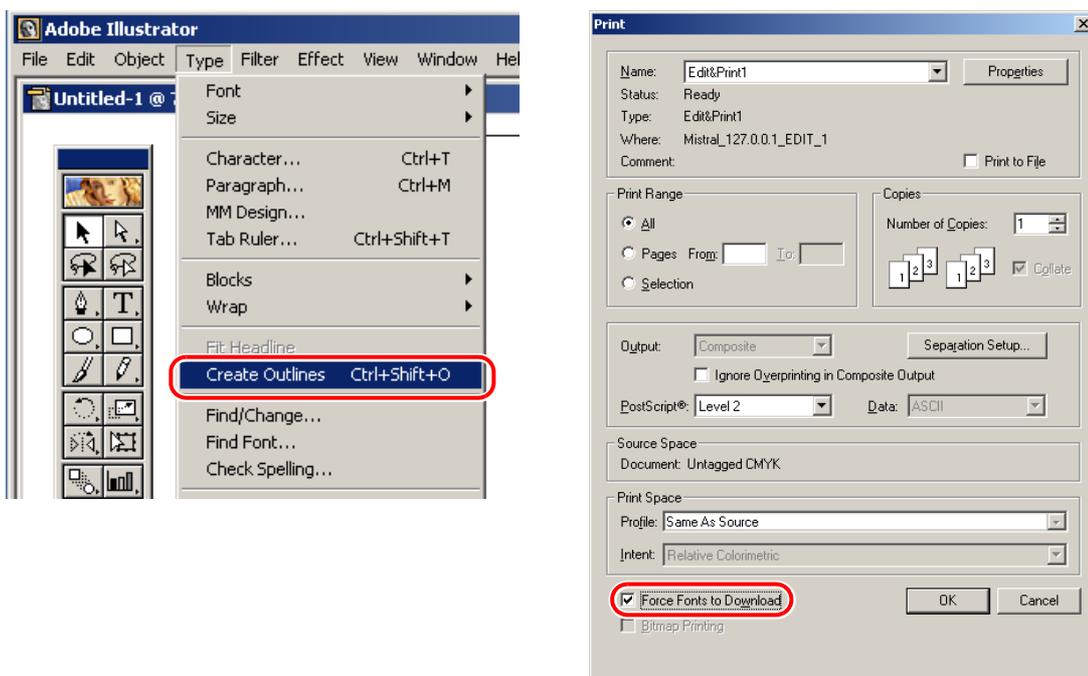


Circles or letters become polygonal

Output resolution of Paths of Illustrator is too low or scale ratio at RasterLinkPro5 is too high (for example some are set at 1000%).

Default value of Output resolution of paths of Illustrator is 800 dpi.

Increase the Output resolution of Illustrator or lower the scale ratio of enlargement at RasterLinkPro5.

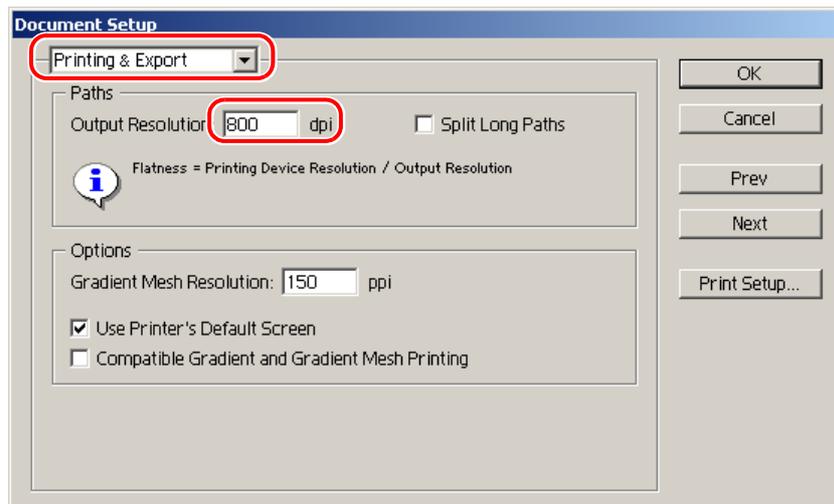

For increasing the output resolution of Illustrator paths, calculate the resolution with the following formula. Specifying a higher value than that obtained with the formula has no effect.

With Illustrator 8, 9, or 10

Output resolution = Resolution in the scan direction of the selected device profile x scale value (%) specified for image editing / 100

Example:

Selected device profile resolution: 720 x 1440 dpi

Set the scale value for image editing at 1000%


$$720 \text{ (scan direction resolution) } \times 1000 \text{ (scale value) } / 100 = 7200$$

Set the Illustrator path output resolution to 7200.

As for Illustrator 8 and Illustrator 9, changing the Output Resolution of “Printing & Export” in “Document Setup...” does not affect on the created object.

To change the created object, select the object and change the object size at “Attributes” pallet.

To access “Attributes” pallet, select “Window” menu and then “Show Attributes”.

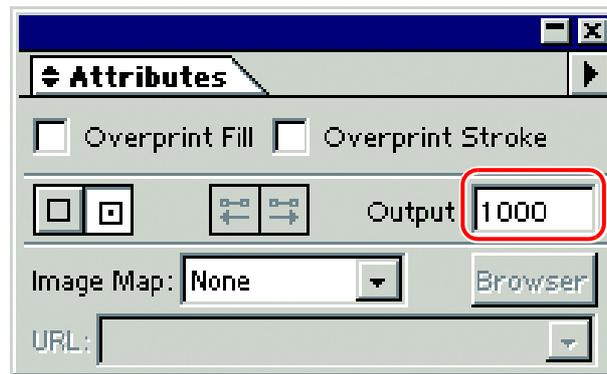


With Illustrator CS, CS2 or CS3

When saving to an EPS file, there is no setting item for path output resolution. Use the printer driver from Illustrator to set “Flatness” of “Graphics” to “Quality” before printing.




If you do not increase the scale value in RasterLinkPro5, or you increase the output resolution of Illustrator paths, circles and text objects may be printed as polygons. In this case, select the relevant object in Illustrator, apply [Add Anchor Points] 1 to 3 times, and make the individual curves shorter.

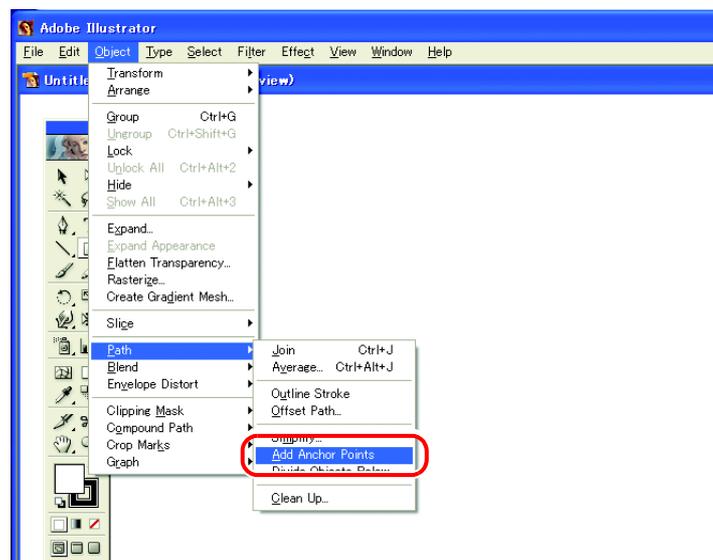

A jaggy contour occurs in characters to which a transparent effect is applied

When you enlarge an image on the RasterLinkPro5 side, there may be a case where a jaggy contour occurs in characters to which a transparent effect is applied.


To avoid such a trouble, set the items of “Document Setup” of Adobe Illustrator as follows.

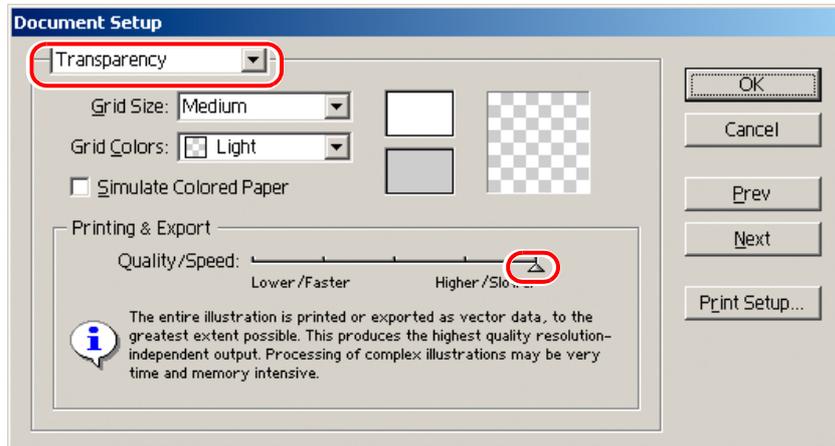

Some objects that are applied transparency effect have unnecessary lines or some parts of the object do not appear


Some complicated objects and photos that are applied transparency effect may have unnecessary lines or some parts of the objects.

To avoid this, set items of “Document Setup” menu of Adobe Illustrator as follows.

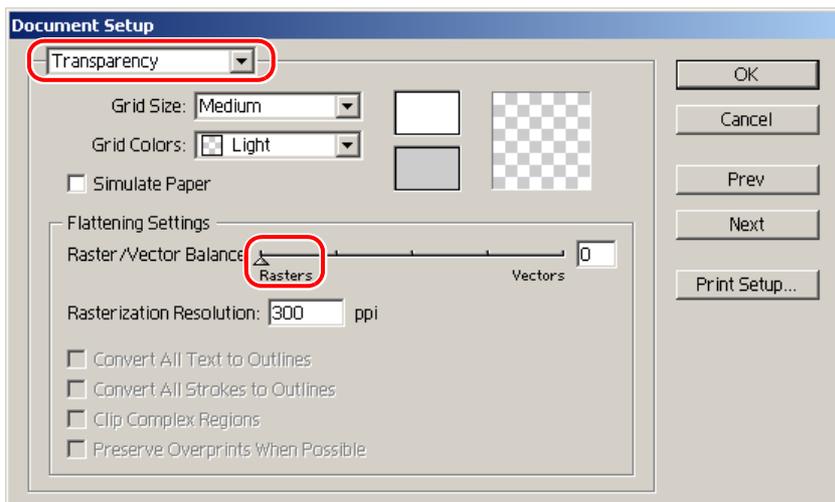


Gradation Tone Jump is prominent

To avoid this, set items of “Document Setup” menu of Adobe Illustrator as follows.

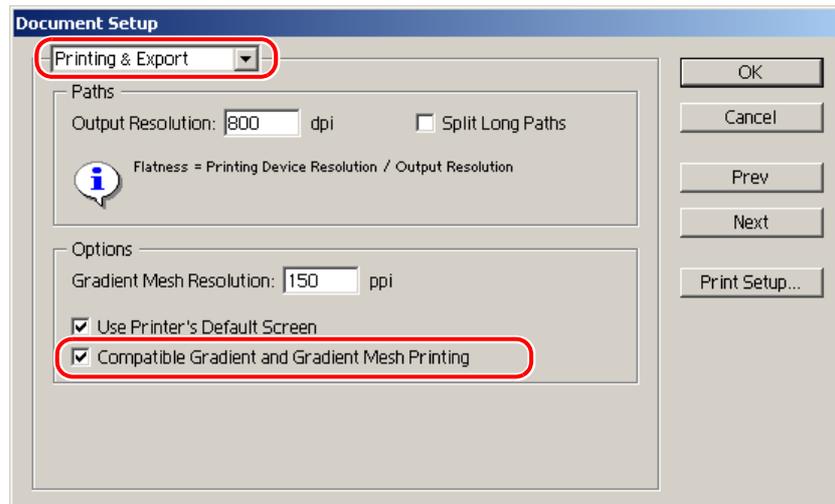


Illustrator CS, CS2, CS3 (When saving EPS)

When saving EPS, set “EPS Options” as follows.

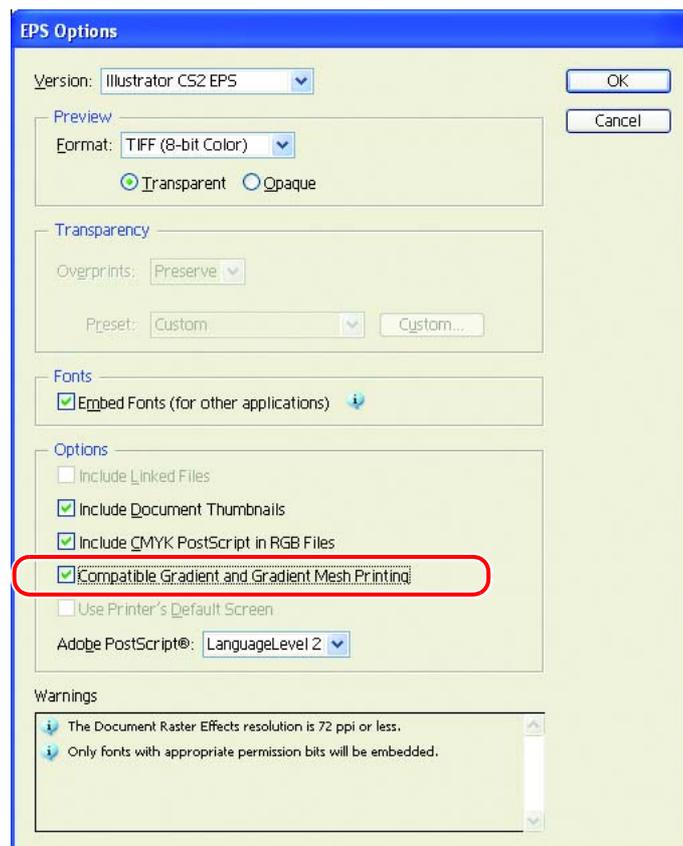

Illustrator CS, CS2, CS3 (When printing)

When outputting the printer driver, set “Print” as follows.

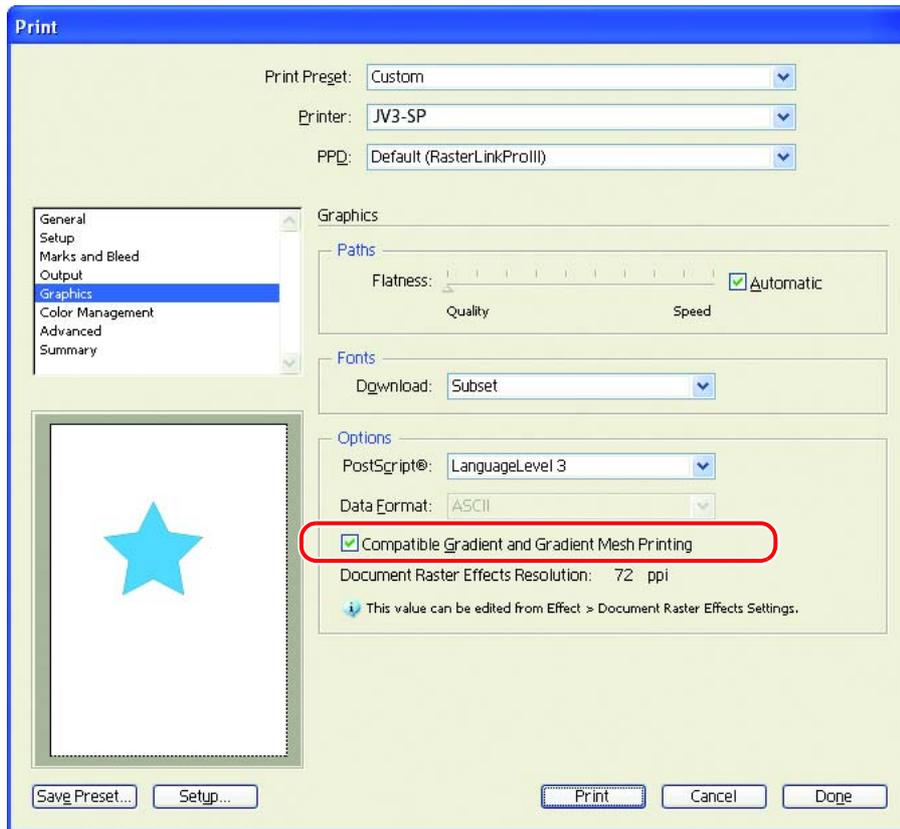


Important!

When setting the data to replace gradation, do not check “Compatible Gradient and Gradient Mesh Printing”. It disables color replacement.

Linked data isn't printed "PC MACLAN -" letter string is printed after the printing

Linked images placed on the data of Adobe Illustrator may not be printed or the colors are not printed properly.

When spooling from Macintosh through PC MACLAN, letter string is printed after the printing. In this case, embed the image on the data of Adobe Illustrator.

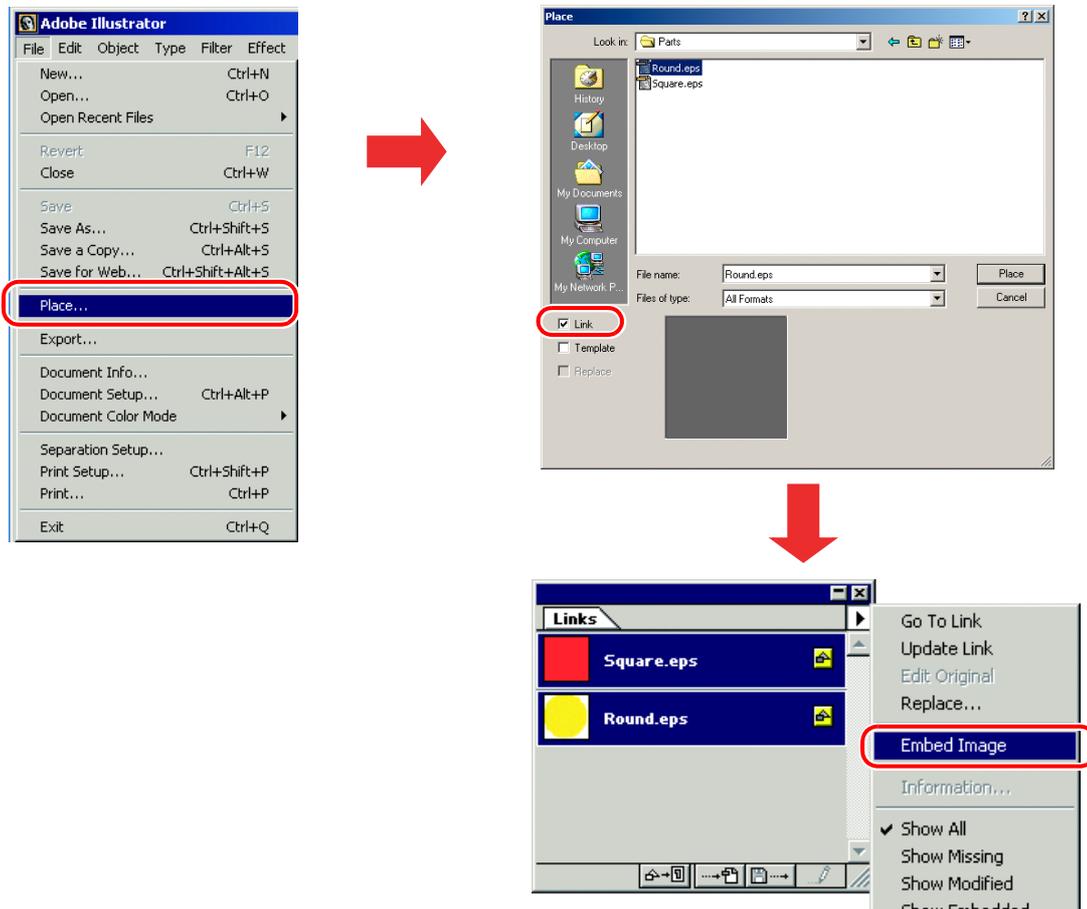

The surrounding image of EPS file saved by Illustrator 10 is cut off

When arranging rectangular object with thin line on surrounding part, the line may become thinner or may be printed nothing.

It occurs because the whole image size is rounded by integer Point and is clipped.

In Illustrator 10, arrange dummy object around the image and save as EPS, or set a little larger PostScript custom page size in printing with printer driver.

The image size differs between on application and on RasterLinkPro5

The image size created by application does not correspond completely to the image size displayed on the job editor of RasterLinkPro5. It occurs by following causes.

1) Limitation of the image size set by PostScript language

Application usually sets the size by mm or inch, but PostScript language sets the number by Point (1/72 inch).

Although image object size is measured by Point of real number, the whole size in saving EPS file or PostScript custom page size in printing with printer driver is eventually changed to the Point of integer.

It causes conversion error up to 1 Point (0.353 mm).

2) Effect of line width

The object size displayed on [Information] window of Illustrator does not include the line width. Actual object size includes the line width.

3) Effect of the calculation of size by specific application

As Illustrator 10 described above, specific size calculation by application effects on the size.

By the reasons above, it causes about 1 Point error even when printing with original size. Therefore, when scaling by RasterLinkPro5, the error widens (In case of 1 Point error, widening 1000% causes 3.5 mm error).

If considering the accuracy of output size, note the followings to reduce the error.

- Print by original size as possible
- If scaling, set by % (do not set by mm or inch)

Caution about Mac OS X

Spooling from Mac OS X, it is enacted the following restrictions.

Print PDF documents

When printing PDF documents from Acrobat Reader ver. 5, [File Name] on the “Job List” turns into garbage. This problem is modified after ver. 6, print PDF documents using Adobe Reader ver. 6 or later.

Caution about using hot folder with Macintosh

When copying a file from a Macintosh client to the hot folder via PC MACLAN, the following restrictions apply:

In case canceling the file copying to the hot folder, the error occurs.

Most of all files canceled copying are ignored or moved to the error queue, however RasterLinkPro5 may abend since spooling the file copied incompletely.

Do not cancel copying the file as far as possible.

With Mac OS X, abnormal phenomena may occur simply by clicking the open hot folder in the Finder. When copying files, do not perform any unnecessary operations in the Finder.

When deleting the file from the hot folder by compulsion during copying, error occurs.

You can force to delete the file copying from the hot folder at Mac OS X. However, when doing these operation, the other files may be deleted or RasterLinkPro5 may abend.

Do not delete the file copying to the hot folder.

Improvement of the spooling speed when printing from the application software with Macintosh

In case of the files are printed from the application software through PC MACLAN print server, the spooling speed becomes slow.

Changing the output folder to hot folder, the spooling speed may be faster depending on the application software. Try the following steps.

In case of Mac OS 9

The file can be spooled from application to the hot folder by following steps, however, error may occur depending on the application software. When the error occurs, change “Printer” of “Destination;” in the [Print] menu.

Application software caused error

- **Illustrator 9**
Some files cannot be spooled.
- **Illustrator 10**
All files cannot be spooled since the system error occurs.


Application spooled properly

- **Illustrator 8**
- **Photoshop 5 to 7**

- 1** Open the “Print” window in the [File] menu with the application software.
- 2** Select the printer for RasterLinkPro5 at “Printer;” menu.


Select “File” at the “Destination;” menu.

Click the .

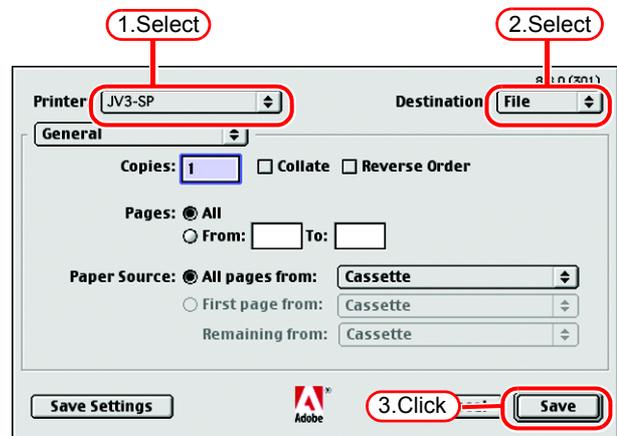

3 Specify the hot folder of RasterLinkPro5 to output.

Click the .

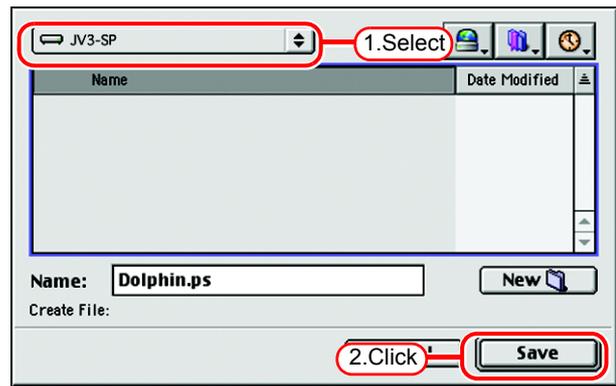

In case of Mac OS X

The file can be spooled from application to the hot folder by following steps, however, error may occur depending on the application software. When the error occurs, clear the check box for “Save as File” of [Output Options] menu in the “Print” window.

Application software caused error

- **Illustrator 10**
It is unstable to output the file.
- **Illustrator CS**
Some files cannot be spooled.
- **Photoshop 7**
Some files cannot be spooled when does not change the file name to save.

Application spooled properly

- **Photoshop CS**

1 Open the “Print” window in the [File] menu with the application software.

2 Select the printer for RasterLinkPro5 at “Printer;” menu.

Select “Output Options”.

Check the box for “Save as File”.

Select “PostScript” at “Format”.

Click the .

3 Specify the hot folder of RasterLinkPro5 to output.

Click the .

