

JFX500 Daily Care




Make sure to wear the attached **goggles and glove** when you work.

With a view to using this machine in a better condition, please be sure to the following daily care **after at the end of the daily work**. Please refer to “Daily care manual” for the detail.

Cleaning of around the heads

1. Remove the maintenance cover of the left of the machine.

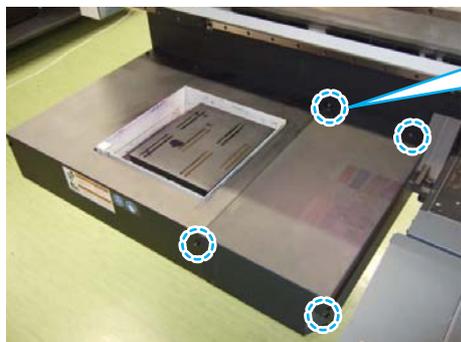

Loosen up the screws (for four positions) and remove the cover.



The state of removing the cover

1. Perform [HEAD MAINT.] operation, move the carriage to the maintenance position.

- (1) Press the **MAINT.** key in LOCAL.
- (2) Press the **ENTER** key.
- (3) Press **▲** **▼** to select [HEAD MAINT.].
- (4) Press the **ENTER** key.


Important! • Head will move for maintenance, please be careful.

2. Wipe off the ink of around the head and groove with clean stick or waste cloth dipped in cleaning solution for maintenance.

[Before cleaning]



[During cleaning]

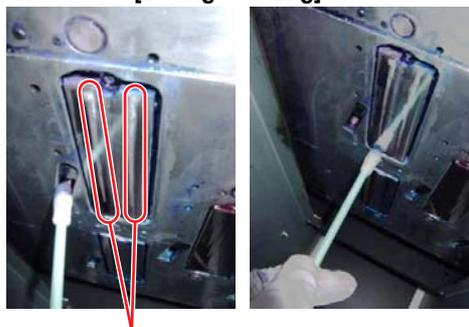

Important! • When you clean , fully be careful not to touch the nozzle surface.

[After cleaning]



Important! • When you leave during maintenance (or cleaning), please make sure to complete the cleaning by pressing **ENTER** key. Without completing the cleaning, the nozzle part is left uncovered and then outside light makes the ink cure, which causes nozzle clogging or the like.

3. Press **ENTER**, complete the cleaning.

Important! • Head will move for origin detection (initial performance), please be careful.

4. Attach the maintenance cover which is removed above Step1.

Important! • For your safety, be sure to attach the maintenance cover after completion of origin detection (initial performance).

Cleaning of the station


1. Perform [STATION MAINT.] operation, move the carriage to the maintenance position.

- (1) Press the **MAINT.** key in LOCAL.
- (2) Press the **ENTER** key.
- (3) Press **▲** **▼** to select [STATION MAINT.].
- (4) Press the **ENTER** key.

Important! • Head will move for maintenance, please be careful.

① Cleaning of the cap

Wipe off the ink of the cap rubber and cap cover with clean stick or waste cloth dipped in cleaning solution for maintenance.

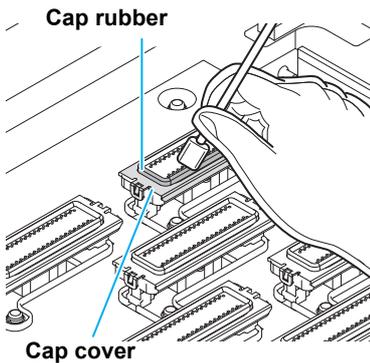

[Before cleaning]




[After cleaning]



Important! • After cleaning, make sure that the cap rubber and mesh in the cap are not removed.

② Cleaning of the wiper

Wipe off the ink of the wiper and bracket with clean stick or waste cloth dipped in cleaning solution for maintenance.

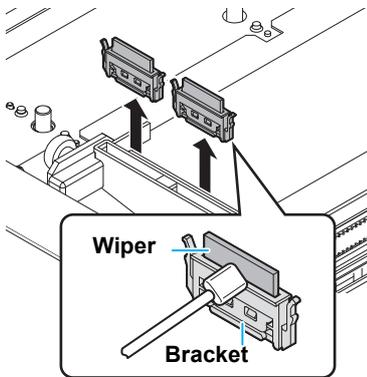

[Before cleaning]




[After cleaning]




Important! • After cleaning, make sure the edge of the wiper is horizontal.

③ Cleaning of the wiper blade

Wipe off the ink of the wiper blade with clean stick or waste cloth dipped in cleaning solution for maintenance.

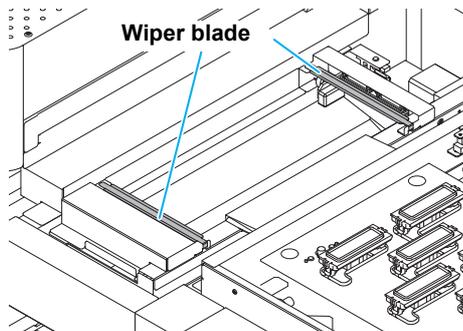

[Before cleaning]

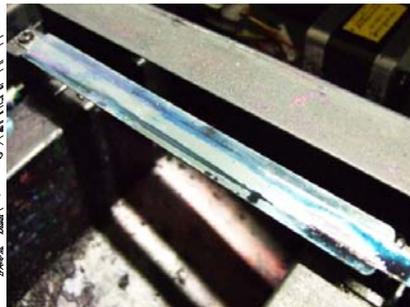

[After cleaning]



2. Press **ENTER**, complete the cleaning.

Important! • Head will move for origin detection (initial performance), please be careful.