

Replace the waste ink tank with another

1 Press the **FUNC1** (MENU) \rightarrow **ENTER** (4 times) \rightarrow **ENTER** key in LOCAL.

- MAINTENANCE MENU will be displayed.

2 Press the **ENTER** key.

- "STATION" will be displayed.


3 Press **UP** **DOWN** to select "WASTE TANK", and press the **ENTER** key.

4 Press **UP** **DOWN** to select "Reset Waste Ink Volume", and press the **ENTER** key.


- "Please remove the waste ink tank" will appear on the display.

5 Remove the waste ink tank.


- (1) Pull the projection of the waste ink tank holder to open the holder.

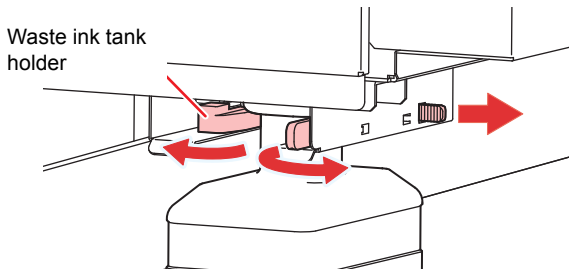

- (2) Pull it frontward to remove by holding the waste ink tank handle.

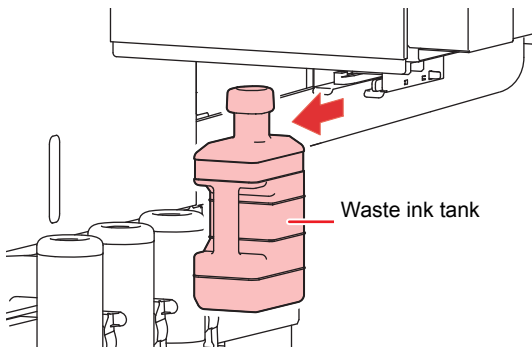

- Put a cap on the waste ink tank removed.

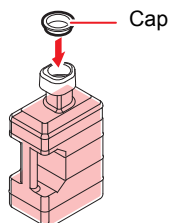


6 Press the **ENTER** key.

- "Please set a empty waste ink tank" will appear on the display.

7 Replace the waste ink tank .

- (1) Prepare a new waste ink tank (SPA-0277).
(2) Insert the waste ink tank by holding a handle of the tank.

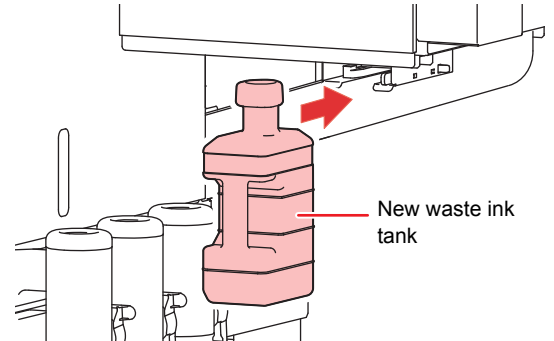

- Waste ink is equivalent to waste oil of industrial waste. Request an industrial waste disposal company for disposal of waste ink.

8 Press the **ENTER** key.

- "Clear waste ink tank volume count" will appear on the display.

9 Press the **ENTER** key.

- The ink discharging amount that is controlled by the machine is reset and the message is cancelled.