


Washing the Ink Discharge Passage

Wash the ink discharge passage regularly (about once a week) to prevent the head nozzles from clogging due to ink coagulation inside the passage.


- 1** Press the **FUNC1** (MENU) \rightarrow **▼** (4 times) \rightarrow **ENTER** key in LOCAL.
 - MAINTENANCE MENU will be displayed.
- 2** Press the **ENTER** key.
 - "STATION" will be displayed.
- 3** Press **▲** **▼** to select "DISWAY WASH", and press the **ENTER** key.
 - "DISWAY WASH" will be selected and the carriage will move.
- 4** Open the right front cover.

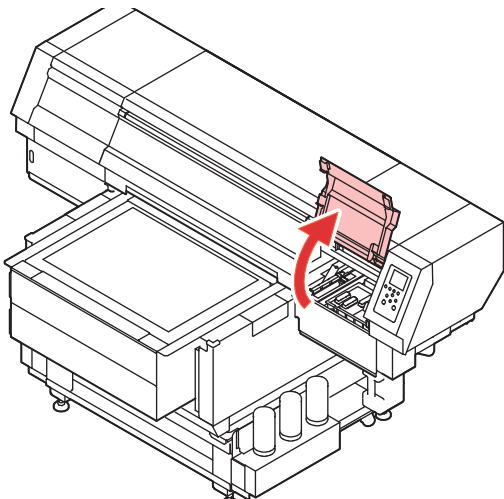

- 5** Press the **[ENTER]** key. Air suction operation is repeated until the cleaning operation is completed.

- 6** Put a maintenance cleaning liquid into the ink discharge passage.

- Using a pipette, put 20 cc of a maintenance cleaning liquid 11 into the passage through the hole in the center of the cap slider.

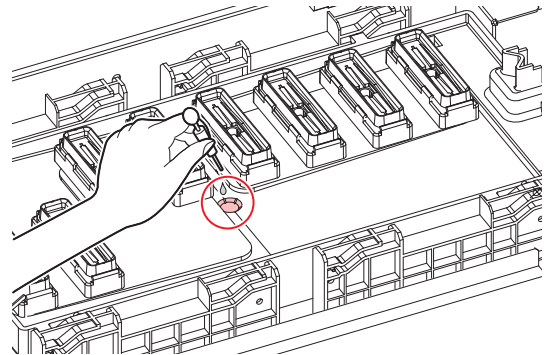

- 7** Close the front cover and press the **ENTER** key.