


1. Execute [HEAD MAINTNENANCE]

Execute [HEAD MAINTNENANCE] and clean the carriage and the area round the station.

- (1) Press the [FUNC1] (MENU) key.
- (2) Select [MAINTENANCE] and press the ENTER key.
- (3) Select [STATION] and press the ENTER key.
- (4) Select [CARRIAGE OUT] and press the ENTER key.
- (5) Select [HEAD MAINTNENANCE"] and press the ENTER key.
- (6) Open the head maintenance cover and the maintenance cover.

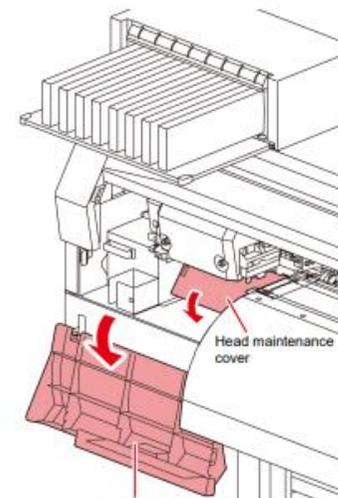


2. Execute [HEAD MAINTNENANCE]

Wipe off ink adhering to the area around the head and the bottom of the carriage with a clean stick moistened with cleaning solution.

Clean the side surface of the head with a clean stick

The nozzle part (Never touch it.)

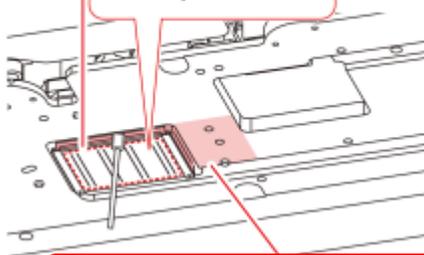

Clean the bottom of the carriage with a clean stick



Do not touch the nozzle surface while cleaning.



Before cleaning *Picture: CJV300



After cleaning *Picture: CJV300